



Graphic Simulation Generation Tool (GSGT)

User Reference Guide

April 3, 2025

JVN Tool Suite v13.7.6 Volume 2

Copyright © 2025

JVN Communications Inc.
2511 Fire Rd., Suite A-4
Egg Harbor Township, NJ 08234
609-569-9255
www.jvncomm.com

TABLE OF CONTENTS

1. GSGT Overview	11
2. Getting Started.....	12
3. System Configuration	13
3.1. Environment Variables.....	13
3.2. Starting GSGT	13
3.2.1. Version Warning.....	14
3.2.2. Command Line Options	14
3.2.3. GSGT Modes	15
3.3. Graphical User Interface	16
3.3.1. Menu Bar	16
3.3.2. Toolbar	18
3.3.3. Map Display	19
3.3.4. Status Bar	34
3.3.5. Context Boxes.....	35
4. GSGT Scenarios	36
4.1. Creating a New Scenario.....	36
4.1.1. Adaptation Selection	36
4.1.1.1. Single Adaptation.....	37
4.1.1.2. Multiple Adaptations	38
4.1.1.3. Adding Child Adaptation or Customization File.....	39
4.1.1.3.1. Adding STARS DMS Report File.....	39
4.1.1.3.2. Adding STARS Site File or User Defined Macros	42
4.1.1.3.3. Adding TBFM Adaptation.....	45
4.1.1.3.4. Adding TBFM Customization File	48
4.1.1.4. Removing Child Adaptation	51
4.1.1.5. ERAM Adaptation File Overrides	52
4.1.2. Scenario Location and Name.....	53
4.1.3. Weather Selection.....	54
4.1.4. Scenario Overwrite Warning	55
4.2. Open an Existing Scenario	55
4.2.1. Load Progression Display	57
4.2.2. Scenario File Loading Errors	57
4.3. Edit Scenario	58
4.3.1. Create a New Object	59

4.3.2. Delete Object.....	59
4.3.3. Edit Object.....	60
4.3.4. Replicate Object	61
4.4. Save Scenario	64
4.4.1. Scenario Overwrite Warning.....	64
4.4.2. Save Scenario Before Exit.....	65
5. Scenario Editor	66
5.1. Preferences	66
5.1.1. Edit Preferences	66
5.2. Sensors.....	69
5.3. RSIs.....	70
5.3.1. Create and Edit RSI	70
5.3.2. Edit Objects Associated with Specific RSI.....	71
5.4. Adaptation Equipment and DS	72
5.5. System Commands	73
5.5.1. Create and Edit System Command.....	73
5.5.1.1. Message Editor	74
5.5.1.1.1. TCW Messages.....	76
5.6. Targets	78
5.6.1. Create and Edit Target.....	78
5.6.1.1. Target - Main	79
5.6.1.2. Target - Dynamics	83
5.6.1.3. Target - Messages	92
5.6.1.3.1. Auto Deriving Target Messages.....	94
5.6.1.3.2. Edit Prefs.....	95
5.6.1.3.3. FP Overrides.....	98
5.6.1.3.4. FPL/CPL Overrides.....	99
5.6.1.3.5. Manually Creating Messages.....	100
5.6.1.3.6. Validating Messages (RTCS & TTP)	100
5.6.1.4. Target Dysim Definitions	101
5.6.2. Target List Context Menu.....	102
5.6.3. Target Conflict Message.....	103
5.7. Script Definitions.....	104
6. Preview	105
6.1. Scenario Preview	106
6.2. Show Flight Path	109
6.3. Clone a Flight	111

7. Import Functions	113
7.1. Import GSGT Scenario.....	113
7.1.1. Import NASQuest Site	117
7.1.2. Import NASQuest CSV	117
7.1.3. Import STARS CDR	119
8. Export Functions	122
8.1. Export SDRR	122
8.2. Export GSGT	122
9. Reports and Tools.....	124
9.1. GSGT Session Log	125
9.2. Sorted Scenario Listing	126
9.3. Message Injection Report	127
9.4. Simulated Target Position.....	128
9.5. FAV Traversal Report	130
9.6. Simulated Radar Target Count.....	132
10. Weather Editor.....	134
10.1. Starting the Weather Editor	135
10.1.1. Command Line Options	135
10.1.2. Loading Adaptation	136
10.2. Weather Editor GUI	139
10.2.1. Weather Time Slice Windows	139
10.2.2. Weather Editor Menus.....	139
10.2.3. Weather Information	144
10.2.4. Viewer Configuration	144
10.3. Creating a New Weather Scenario.....	145
10.3.1. Location and Name	146
10.3.2. Weather Time Slices.....	147
10.4. Open an Existing Weather Scenario	149
10.5. Edit weather scenario	150
10.5.1. RUC Editor	150
10.5.1.1. Temperature	152
10.5.1.2. Pressure	153
10.5.1.3. Wind.....	154
10.5.2. Precipitation Editor	156
10.5.2.1. Precipitation	157
11. Source Scenario Files	160

11.1. Scenario Components	160
11.2. Targets	161
11.3. System Commands	165
11.4. Preferences	165
11.5. Record Select Indicators	166
11.6. Script Definitions.....	166
11.7. Active Runways.....	167
11.8. Restrictions	167
11.9. Pilot Controls	168
11.10. Device Control	168
Appendix A. Acronyms.....	170

TABLE OF FIGURES

Figure 1. GSGT Processor Login	12
Figure 2. GSGT Processor Desktop	12
Figure 3. Version Warning	14
Figure 4. GSGT GUI	16
Figure 5. Menu Bar	16
Figure 6. About GSGT	17
Figure 7. Scenario Information	18
Figure 8. Toolbar	18
Figure 9. Toolbar Display Control	18
Figure 10. Map Display Menus and Tools	19
Figure 11. Menu Tear-off	19
Figure 12. Background Tiles	20
Figure 13. Map Selection	21
Figure 14. STARS Maps	22
Figure 15. Customized “SAA” map overlay added to Maps	23
Figure 16. Airspace Options	24
Figure 17. ARTCC Options	26
Figure 18. Radar Options	28
Figure 21. ADSB Options	29
Figure 19. ASDEX Options	29
Figure 20. WAM Options	30
Figure 22. Weather Options	31
Figure 23. Site Definition Data	32
Figure 24. Find Menu	33
Figure 25. Settings Options	33
Figure 26. Flight Level	33
Figure 27. Zoom	34
Figure 28. Range	34
Figure 29. Status Bar	34
Figure 30. Context Boxes	35
Figure 31. Loading Adaptation List	37
Figure 32. Selecting an ERAM Adaptation	37
Figure 33. Selecting Multiple ERAM Adaptations	38
Figure 34. Adding STARS DMS File	39
Figure 35. Selecting the DMS File Location	40
Figure 36. Selecting the TRACON Folder	40

Figure 37. Selecting a DMS Report File	41
Figure 38. STARS DMS Report File Added	41
Figure 39. Adding STARS Adaptation	42
Figure 40. Selecting the STARS Adaptation Location	43
Figure 41. Selecting the TRACON Folder	43
Figure 42. Selecting a Site File	44
Figure 43. STARS Adaptation Added	44
Figure 44. Adding TBFM Adaptation	45
Figure 45. Selecting TBFM Location	46
Figure 46. Selecting TBFM Adaptation	46
Figure 47. TBFM Adaptation Added	47
Figure 48. Adding a TBFM Customization File	48
Figure 49. Selecting TBFM Customization File Location	49
Figure 50. Selecting TBFM Customization File	49
Figure 51. TBFM Customization File Added	50
Figure 52. Removing a Child Adaptation	51
Figure 53. Selecting a Scenario Location and Name	53
Figure 54. Selecting a Weather Scenario	54
Figure 55. Scenario Overwrite Warning	55
Figure 56. Opening an Existing Scenario	56
Figure 57. Load Progression	57
Figure 58. Loading Errors	57
Figure 59. Scenario Editor	58
Figure 60. Creating a New Object	59
Figure 61. Object Delete Confirmation	59
Figure 62. Object Editor	60
Figure 63. Replication Editor	61
Figure 64. Replications	63
Figure 65. Save Scenario	64
Figure 66. Scenario Overwrite Warning	65
Figure 67. Save Before Exit	65
Figure 68. Terminal and ERAM Sim Mode Tabs	66
Figure 69. Normal and Dysim Modes Tabs	66
Figure 70. Preferences Tabs	67
Figure 71. Sensors Tab	69
Figure 72. RSI Editor	70
Figure 73. RSI Exists Warning	71
Figure 74. Filtering the Editor	71
Figure 75. RSI Filter Selection	72

Figure 76. Objects Filtered by RSI.....	72
Figure 77. Message Editor	74
Figure 78. TCW Message	76
Figure 79. TCW Message Tokens	77
Figure 80. Targets Tab	78
Figure 81. Target Editor Main Tab	79
Figure 82. ICAO Data Override Keys	82
Figure 83. FH Message Preview	83
Figure 84. Target Editor Dynamics Tab.....	84
Figure 85. Show Flight Path	86
Figure 86. Target Event Editor	87
Figure 87. Target Editor Messages Tab	93
Figure 88. Freeze Derived Messages	95
Figure 89. Target Specific Preferences	96
Figure 90. Edit Prefs Attention Icon	97
Figure 91. Flight Plan Override Editor	98
Figure 92. Edit FP Overrides Attention Icon	98
Figure 93. ICAO Flight Plan Overrides Editor	99
Figure 94. Attention Icon.....	99
Figure 95. RTCS and TTP Message Validation.....	100
Figure 96. Validation Successful	101
Figure 97. Target Editor Dysim Tab	101
Figure 98. Target List Context Menu	102
Figure 99. Target Conflict Warning.....	103
Figure 100. Script Definitions Tab	104
Figure 101. Preview Options	105
Figure 102. Scenario Preview	106
Figure 103. Preview on Selected Targets	107
Figure 104. Preview Controls	107
Figure 105. Preview Datablock Visibility Manager	108
Figure 106. Target Highlighted within Preview	109
Figure 107. Show Flight Path	110
Figure 108. Target Flight Path	111
Figure 109. Cloning a Flight in Preview	112
Figure 110. Import Scenario	113
Figure 111. Scenario Selection	114
Figure 112. Select Scenario Elements.....	115
Figure 113. Select Display Items.....	116
Figure 114. Import Errors and Warnings.....	117

Figure 115. NASQuest Site Import.....	117
Figure 116. Import CSV File	118
Figure 117. Import CSV Options	118
Figure 118. CSV Import Status.....	119
Figure 119. STARS CDR Options.....	119
Figure 120. Import CDR File.....	120
Figure 121. CDR Import Status	120
Figure 122. Time Based Targets	121
Figure 123. Time Based Targets - Dynamics	121
Figure 124. Export SDRR.....	122
Figure 125. Export GSGT.....	123
Figure 126. Main Reports Menu.....	125
Figure 127. Scenario Editor Reports Menu	125
Figure 128. GSGT Session Log.....	126
Figure 129. Sorted Scenario List Options	126
Figure 130. Sorted Scenario List Report	127
Figure 131. Message Injection Report.....	128
Figure 132. Target Position Report Options	129
Figure 133. Target Position Report File List.....	130
Figure 134. Target Position Report.....	130
Figure 135. FAV Traversal Report	131
Figure 136. Target Count Report Options	132
Figure 137. Target Count Report.....	133
Figure 138. Weather Editor	134
Figure 139. Loading Adaptation	136
Figure 140. Selecting an Adaptation	137
Figure 141. Adaptation Display	138
Figure 142. Menu Bar	140
Figure 143. Map Selection.....	140
Figure 144. Weather Data Selections	141
Figure 145. ARTCC Options.....	141
Figure 146. Enter Pointer Mode Menu Button	142
Figure 147. Enter Selection Mode Menu Button.....	142
Figure 148. Pressure Altitude Options	143
Figure 149. Flight Level.....	143
Figure 150. Zoom.....	143
Figure 151. Range.....	143
Figure 152. Weather Information Bar	144
Figure 153. Weather Scenario Name and Location.....	146

Figure 154. WeatherTime Slices	147
Figure 155. Deleting a Time Slice	148
Figure 156. Select Existing Weather Scenario	149
Figure 157. Enter Selection Mode	150
Figure 158. RUC Editor	151
Figure 159. Selecting Weather Cells	152
Figure 160. Defining Temperature	153
Figure 161. Defining Pressure.....	154
Figure 162. Defining Wind	155
Figure 163. Precipitation Editor.....	156
Figure 164. Defining Precipitation	158

1. GSGT Overview

The Graphic Simulation Generation Tool (GSGT) generates scenarios based on National Air Space (NAS) adaptation for simulation of traffic to various Air Traffic Control (ATC) systems. These scenarios can be used as a source of real time inputs to facilitate testing and integration of NAS ATC systems and related subsystems. GSGT employs a Graphical User Interface (GUI) to aid in scenario development and is capable of automatically generating flight data messages.

GSGT has the capability of creating scenarios for dynamic injection. When launched in dynamic simulation mode, GSGT generates the initial flight plans and departure messages. All other flight data messages are generated when the scenario is executed.

2. Getting Started

The processor with GSGT installed is configured to boot up to a user login screen. Users can enter a username and password, then click the “Login” button or press **Enter** on the keyboard.

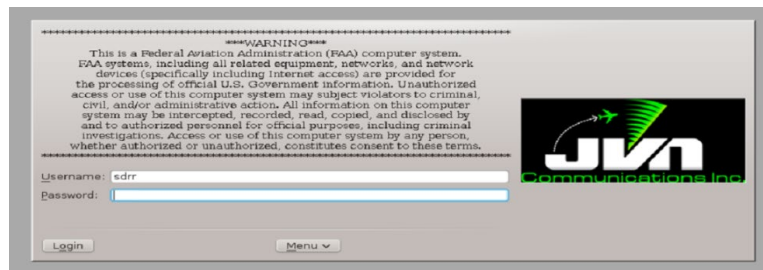


Figure 1. GSGT Processor Login

NOTE: The ‘root’ user does not have access to the GSGT commands and utilities. If root access is needed while logged in, the user should either log out and log in again as ‘root’ or open a terminal window, type **su** and enter the ‘root’ user password.

After a short loading period the KDE desktop will appear.



Figure 2. GSGT Processor Desktop

3. System Configuration

3.1. Environment Variables

GSGT uses environment variables for the locations of source and exported scenario files, weather scenarios, and adaptation data, including En Route Automation Modernization (ERAM), Standard Terminal Automation Replacement System (STARS), and Time Based Flow Management (TBFM) adaptation files.

Table 1. Environment Variables

Variable Name	Description	Default Location
GSGT_WORK_PATH	Location of source scenario files.	/usr/local/gsgt
SDRR_SCENARIO_PATH	Location of exported SDRR scenario files.	/usr/local/scenarios
WX_PATH	Location of weather scenarios.	/opt/wx
ADAPTATION_PATH	Location of adaptation data.	/opt/adaptation

3.2. Starting GSGT

To start GSGT from the command line, enter:

```
> gsgt
```

To launch a GSGT version that is not the default version, enter:

```
> /usr/local/jvn.x.x.x/bin/gsgt
```

NOTE: Starting GSGT from a command line while inside the scenario directory will automatically open that scenario.

3.2.1. Version Warning

When a scenario that was previously saved with a different version of GSGT is opened, GSGT will display a warning. The warning shows the current version of the scenario and the version of GSGT that is actively running. If “Continue” is selected, the scenario will be converted to the new version and saved in the new format. If “Cancel” is selected, the scenario will not be opened.

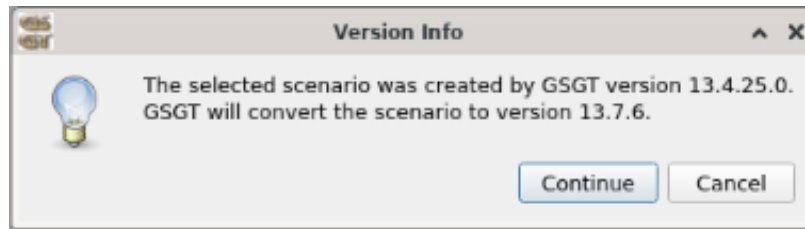


Figure 3. Version Warning

3.2.2. Command Line Options

GSGT can be started with various options which control its operation.

Table 2. Program Parameters

Parameter	Description
--dysimMode	DYSIM mode for dynamic scenario execution with the ERAM system.
--eramSimMode or --terminalMode	ERAM simulation mode or Terminal mode for dynamic scenario execution without an ERAM system.
--tcw	Includes auto-generated TCW injection messages to work with TCW Controllers.
--proxy=server/port	Opens GSGT with specific server/port for map tiles.
--open	Opens the GSGT Open Scenario window.
--new	Opens the GSGT New Scenario window.
--version	Display GSGT version.

Parameter	Description
--nofullscreen	Not full screen mode; GSGT will be started in a window roughly half the size of the screen.
--help	Display application parameters.

For example, GSGT can be started in ERAM Simulation Mode:

```
> gsgt --eramSimMode
```

3.2.3. GSGT Modes

GSGT operates in several modes that are tailored to specific functionality.

Table 3. GSGT Operation Modes

Mode	Description
Normal Mode	Normal mode is tailored for creating target scenarios to be exported to SDRR for execution with the ERAM system.
DYSIM Mode	DYSIM mode is tailored for creating target scenarios for dynamic execution using the ERAM system.
Terminal/ERAM Simulation Mode	Terminal or ERAM simulation mode is tailored for creating target scenarios for execution without an ERAM system. The scenarios can be exported to SDRR or executed dynamically.

3.3. Graphical User Interface

The GSGT Graphical User Interface (GUI) includes a menu bar, a toolbar, and a large map display.

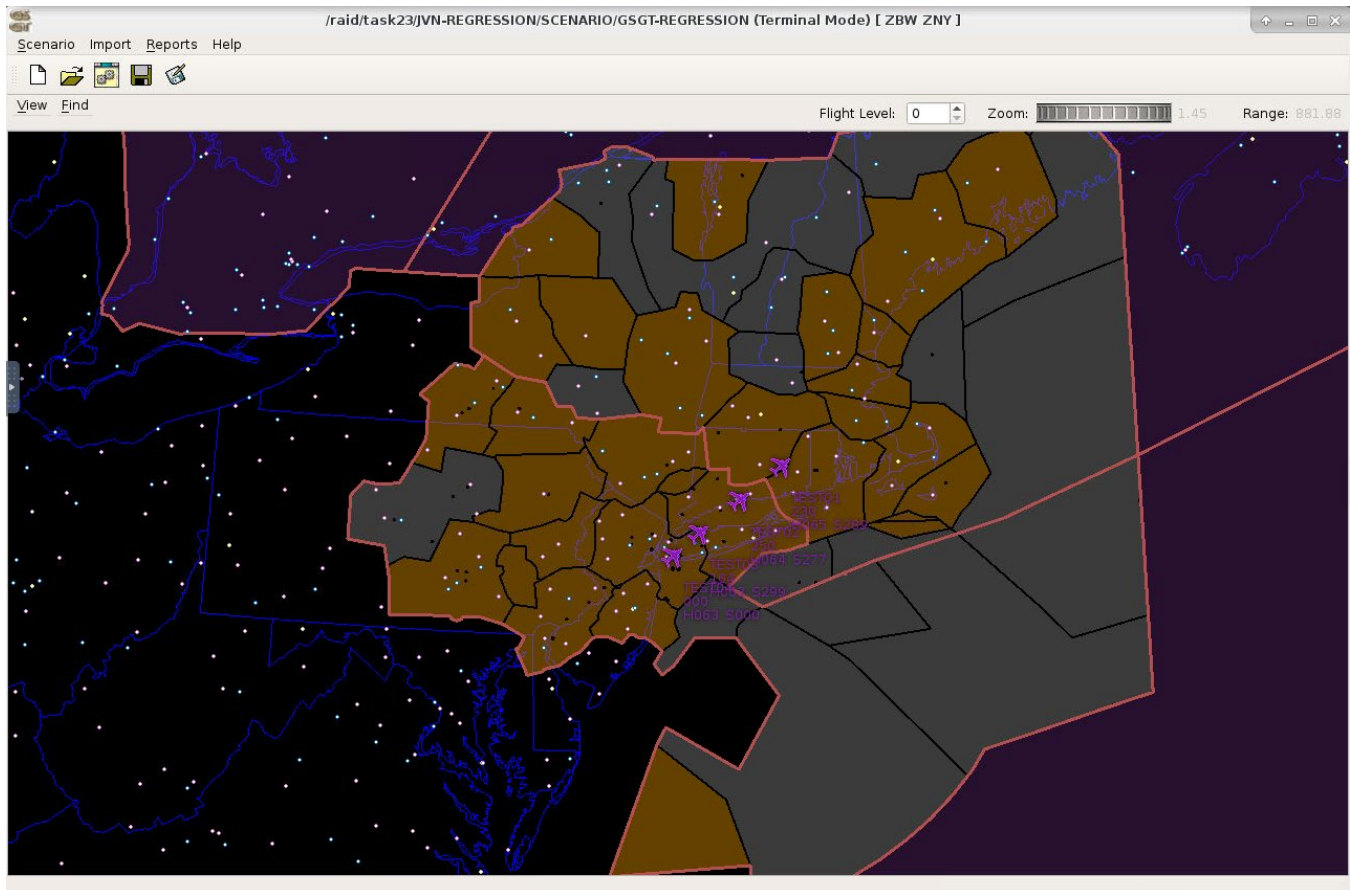


Figure 4. GSGT GUI

3.3.1. Menu Bar

A menu bar is displayed along the top, just below the title of the main GSGT GUI.

 


Figure 5. Menu Bar

The menu bar includes the following options:

Scenario

Provides options to create a New scenario, Open an existing scenario, Edit the current scenario, Save the current scenario, Save As the current scenario with a different name, or Exit the GSGT GUI.

Import

The Import menu provides options to import scenario elements from another GSGT scenario, NASQuest, a CSV file, or STARS CDR.

Reports

The Reports menu provides options to generate various reports for the currently open scenario such as: GSGT Session Log, Simulated Target Position, FAV Traversal Report, and Simulated Radar Target Count.

Help

The Help menu provides options to select **About** (F1) and **Scenario Info** (F2). About displays the About GSGT dialog, and Scenario Info displays the Scenario Information dialog.

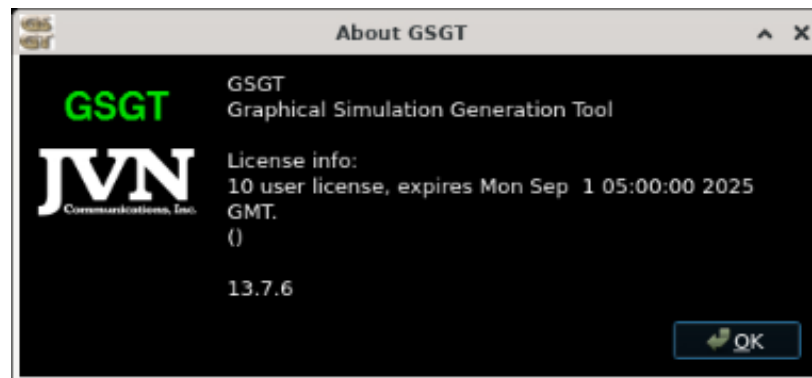


Figure 6. About GSGT

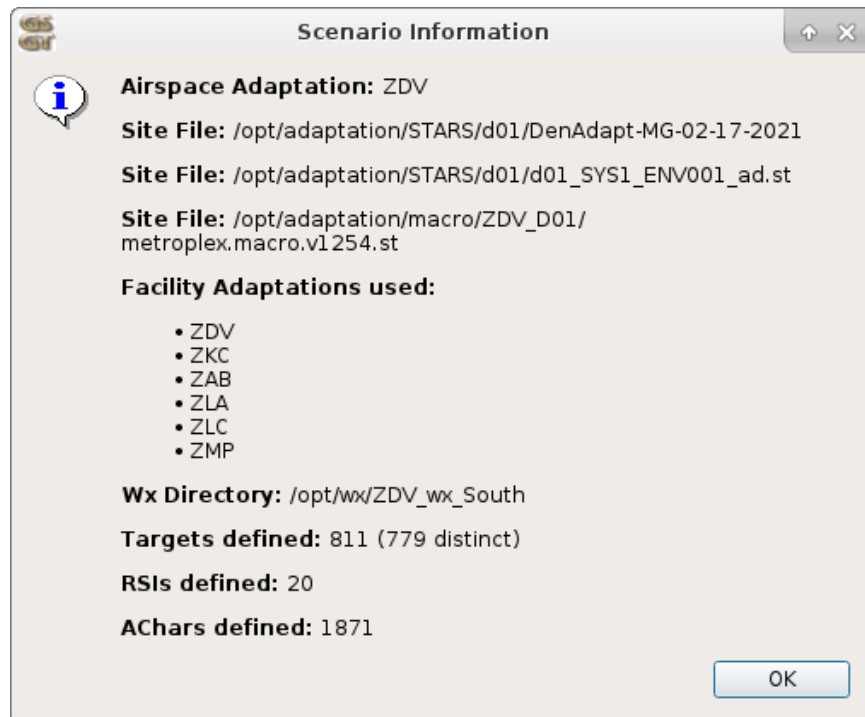


Figure 7. Scenario Information

3.3.2. Toolbar

The scenario toolbar includes icons to create a New scenario, Open an existing scenario, Edit the current scenario, Scenario Manager (in Normal, Terminal, and TGF Modes; Scenario Manager is not available in DYSIM Mode), Save the current scenario, and Save As to select a different name.

 


Figure 8. Toolbar

By clicking and dragging the toolbar handle (which looks like a double separator), the toolbar can be docked to either the top, bottom, left, or right of the main GSGT window or it can be left to float above the map display. The toolbar can be displayed or hidden by right clicking anywhere on the main menu bar and selecting **Toolbar**.



Figure 9. Toolbar Display Control

3.3.3. Map Display

GSGT provides a graphical representation of various adaptation elements on the Map Display. The Map Display also has its own menus, tools, and a status bar (when invoked).

 


Figure 10. Map Display Menus and Tools

The Map Display menus are:

View

The View menu is used to select geographic and adaptation elements for background display. These elements may be displayed individually or in combinations.

NOTE: Each menu and submenu has a dashed line at the top. Selecting the dashed line will “tear off” the menu into a new dialog. The menu will remain displayed after a selection is made.

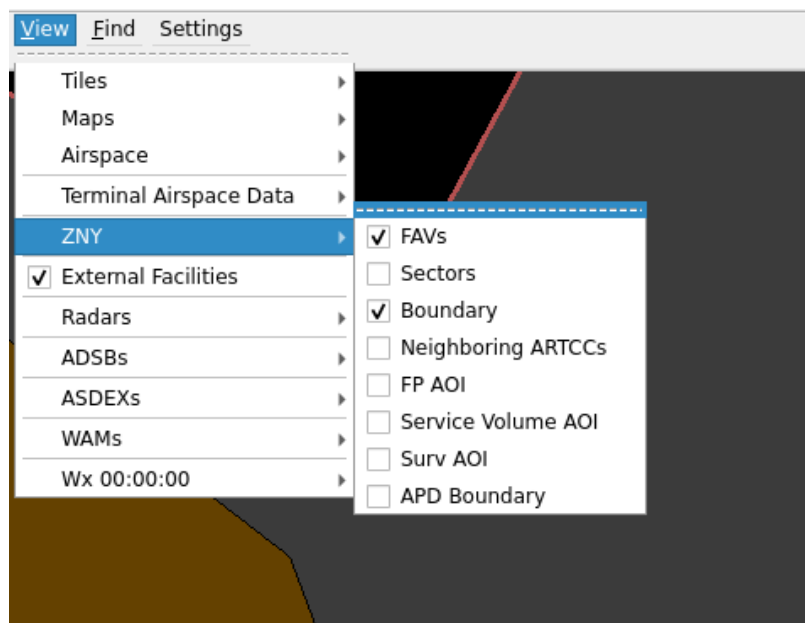


Figure 11. Menu Tear-off

Geographic and adaptation elements available for display are:

Tiles

Background map tiles may be displayed if an internet connection is available. Tile options include Virtual Earth, Open Street Map, Google Satellite, Google Street, Google Terrain, Stamen, and ThunderForest. The default is No Background Tiles.

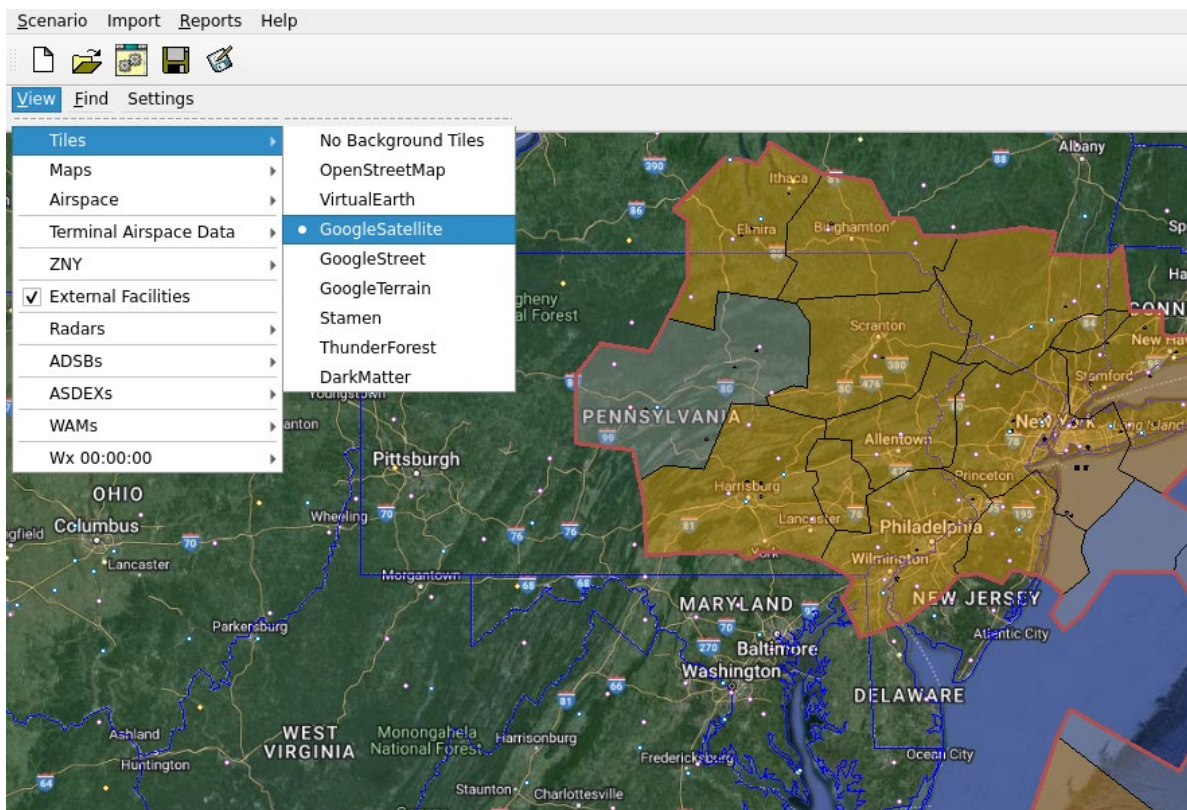


Figure 12. Background Tiles

Maps

Political maps displaying boundaries in blue are available, and include US Map showing state boundaries, Canada showing provinces and territories, and Mexico.

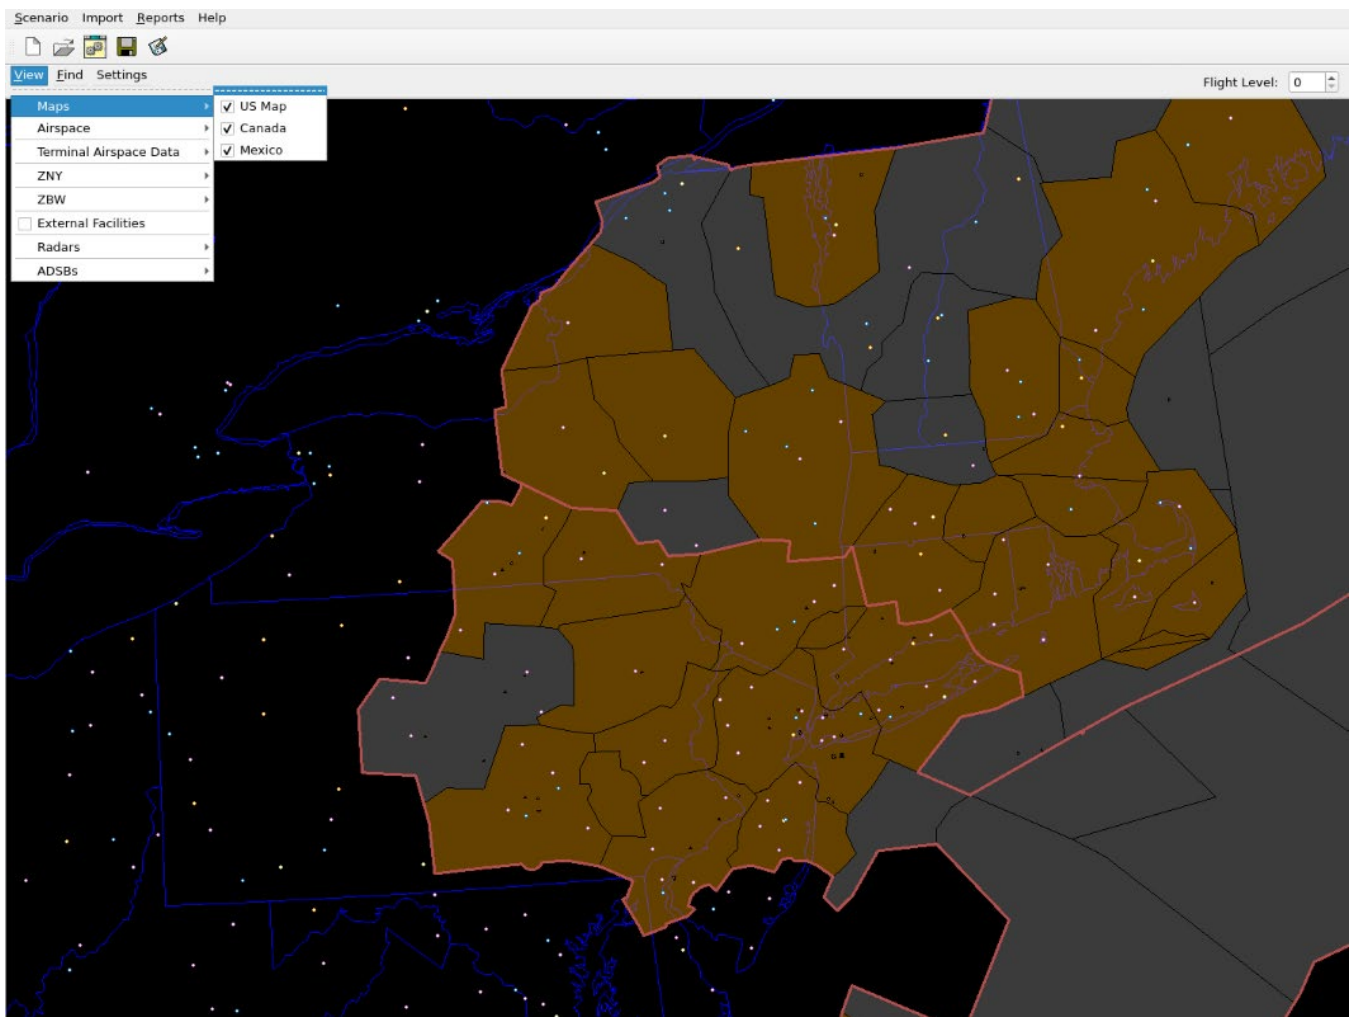


Figure 13. Map Selection

STARS maps may also be available if using a STARS adaptation and running in Terminal Mode. Select the site to display STARS maps. In the figure below, maps for STARS site 'phl' are available.

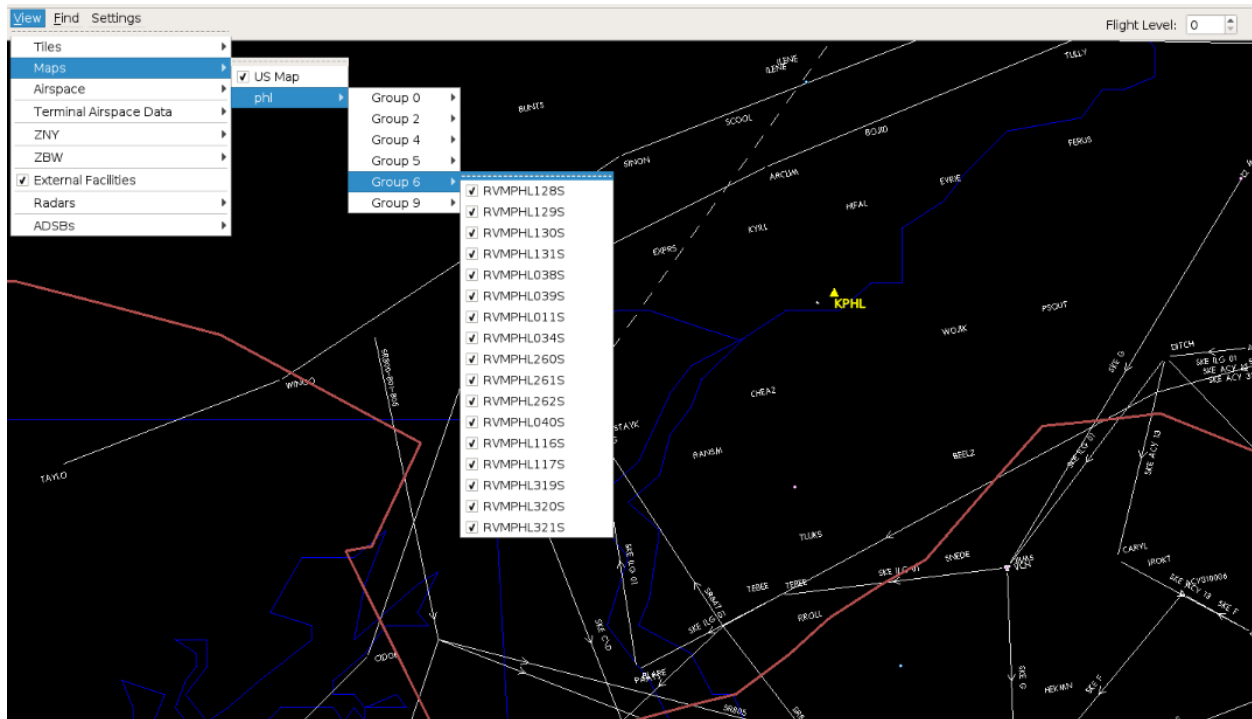


Figure 14. STARS Maps

Customized map overlays can also be added to Maps. This can include simple lines or complex shapes. The example below shows a map overlay for a Special Activities Airspace (SAA). To generate this figure, the map coordinates are added to custom-map.xml file as shown below. The style of the line and the color can be adjusted. For GSGT to add the map option, it must be included in the gsgt.cfg file as shown below.

Example custom-map.xml file:

```
<map>
  <linesegment color="white" style="DashLine">
    <vertex pos="+28:40:00.00,-080:41:00.00"/>
    <vertex pos="+29:52:00.00,-079:21:00.00"/>
    <vertex pos="+29:47:00.00,-079:15:00.00"/>
    <vertex pos="+28:28:00.00,-080:34:00.00"/>
    <vertex pos="+28:40:00.00,-080:41:00.00"/>
  </linesegment>
</map>
```

Example gsgt.cfg file:

```
<config>
  <display height="3000." name="ZBW" projection="stereographic" r0="3438.520"
scale="0.40" tangent="+43:48:34.00,-072:26:24.00" width="3600.">
    <map color="0,0,255" file="maps/us.dat" name="US Map" type="noaamap"
visible="1"/>
    <map color="0,0,255" file="maps/canada.shp" name="Canada" type="shpfile"
visible="1"/>
    <map color="0,0,255" file="maps/mexico.shp" name="Mexico" type="shpfile"
visible="1"/>
    <map color="200,100,0" file="./custom-map.xml" name="SAA" type="xmlfile"
visible="1"/>
  </display>
</config>
```

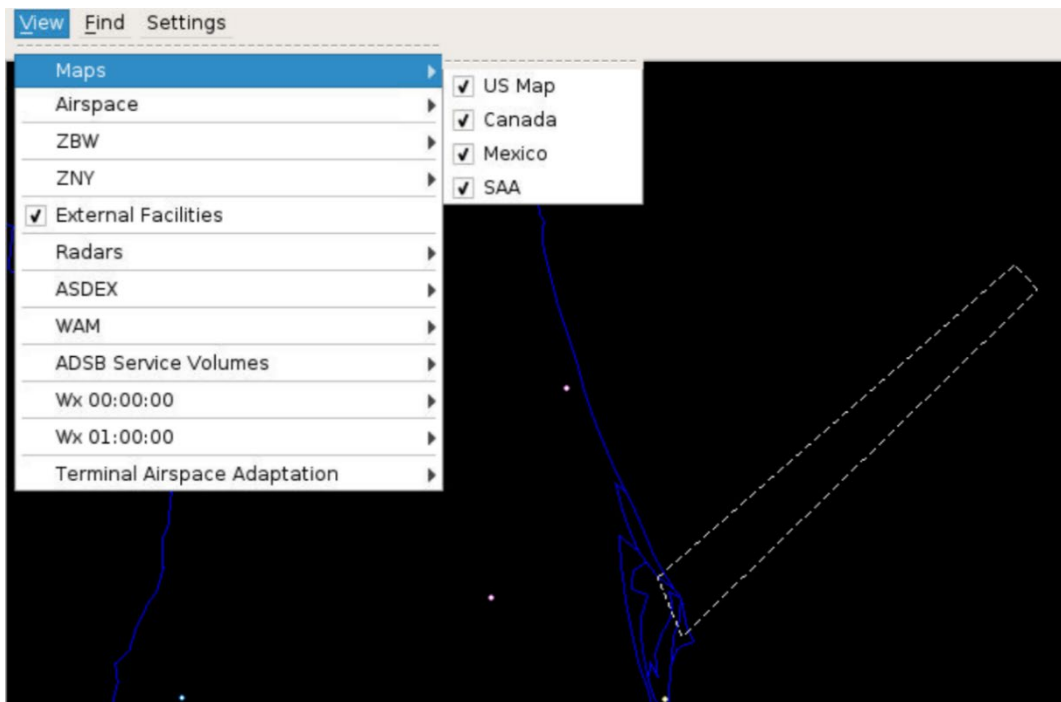


Figure 15. Customized “SAA” map overlay added to Maps

Airspace

Contains submenus with options to display national En Route data, including:

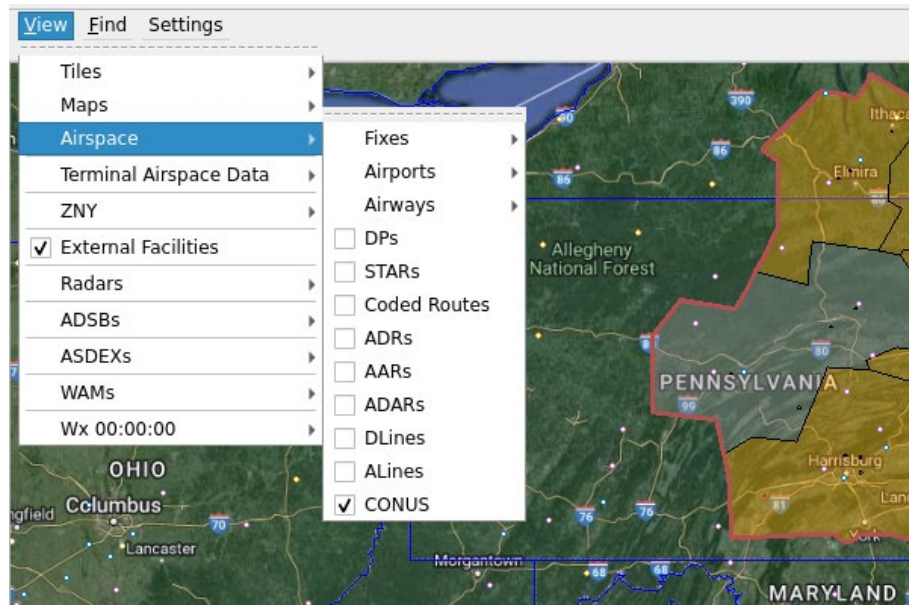


Figure 16. Airspace Options

Fixes

Contains a submenu with the following:

- VORs (white and purple dots)
- VOR Labels (purple letters)
- DMEs (white and olive dots)
- DMEs Labels (olive letters)
- TACANs (white and olive dots)
- TACANs Labels (olive letters)
- NDBs (white and blue dots)
- NDB Labels (blue letters)
- Waypoints (white and turquoise dots)
- Waypoint Labels (turquoise letters)
- Fix Aliases (white and turquoise dots)
- Fix Alias Labels (gray letters)

Airports

Contains a submenu with the following:

- Airports (green and white triangles)
- Airport Labels (green letters)
- Airport Aliases (green and white triangles)
- Airport Alias Labels (green letters)

Airways

Contains a submenu with the following:

- High Airways (tan lines and turquoise points)
- Low Airways (tan lines and turquoise points)
- Other Airways (tan lines and turquoise points)

DPs

Departure Procedure (turquoise lines and points)

STARs

Standard Terminal Arrival Route (turquoise lines and points)

Coded Routes

adapted routes (heavy tan lines and turquoise points)

ADRs

Adapted Departure Routes (teal lines, gray points, and turquoise points and airports)

AARs

Adapted Arrival Routes (teal lines, gray points, and turquoise points and airports)

ADARs

Adapted Departure/Arrival Routes (teal lines, gray points, and turquoise points and airports)

DLines

lines in the airspace if crossed, the flight is forced onto a ADR (green lines and gray points)

ALines

lines in the airspace if crossed, the flight is forced onto a AAR (green lines and gray points)

ARTCC Name

Each En Route center adaptation included in the scenario has its own submenu with options to display local adaptation data.

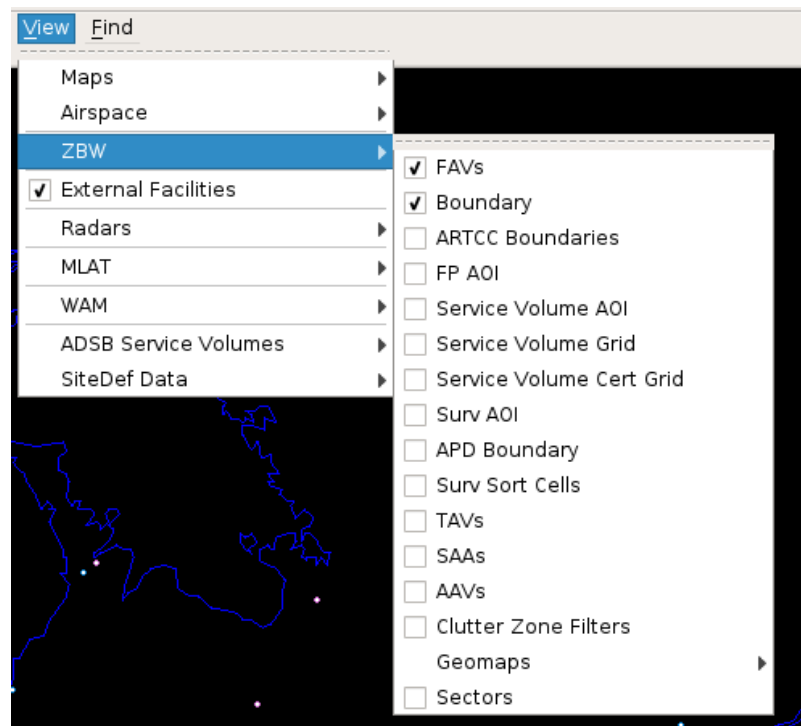


Figure 17. ARTCC Options

FAVs

Fixed Airspace Volumes (gray for ARTCC and orange for Terminal airspace)

Boundary

Area of responsibility (AOR) boundary (red line)

ARTCC Boundaries

Boundaries of all ARTCCs (dark red)

FP AOI

Flight Plan (FP) Area of Interest (AOI) boundary (green)

Service Volume AOI

ADS-B Service Volume Area of Interest boundary (blue)

Surv AOI

Surveillance Area of Interest boundary (teal)

APD Boundary

(yellow)

Surv Sort Cells

Radar Surveillance Sort Cell Grid (green)

TAVs

Terrain Alert Volumes (yellow cross-hatching with red outline)

SAAAs

Special Activities Airspace (solid orange lines, with dotted-line buffer area)

AAVs

Aircraft Alert Volumes (purple)

Clutter Zone Filters

(gray)

Geomaps

Contains a submenu with the names of the adapted Geomaps (white)

Sectors

Contains a submenu with the adapted sector plans (green)

External Facilities

When checked, this option displays adapted non-US airspace shaded in purple.

Radars

The Radar submenu lists all adapted radar sites and an option for toggling all radar sites on or off. When a radar site is on, the range is displayed as a circle with a shaded area indicating the coverage area at the selected altitude.

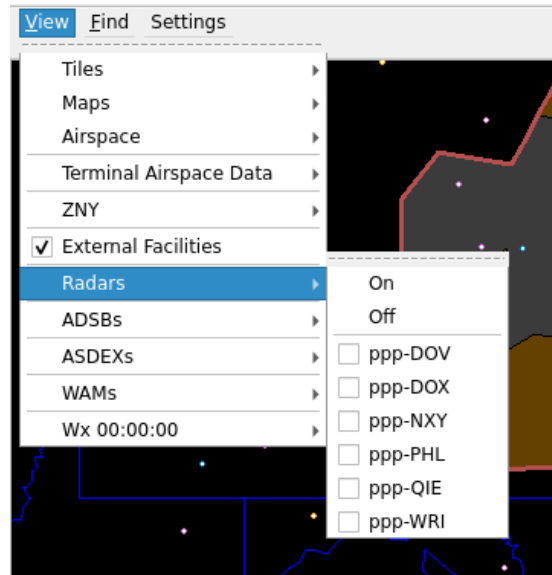


Figure 18. Radar Options

ADSB

The ADSB submenu lists all adapted service volumes and an option for toggling all service volumes on or off. When a service volume is on, the range is displayed as a shaded circle.

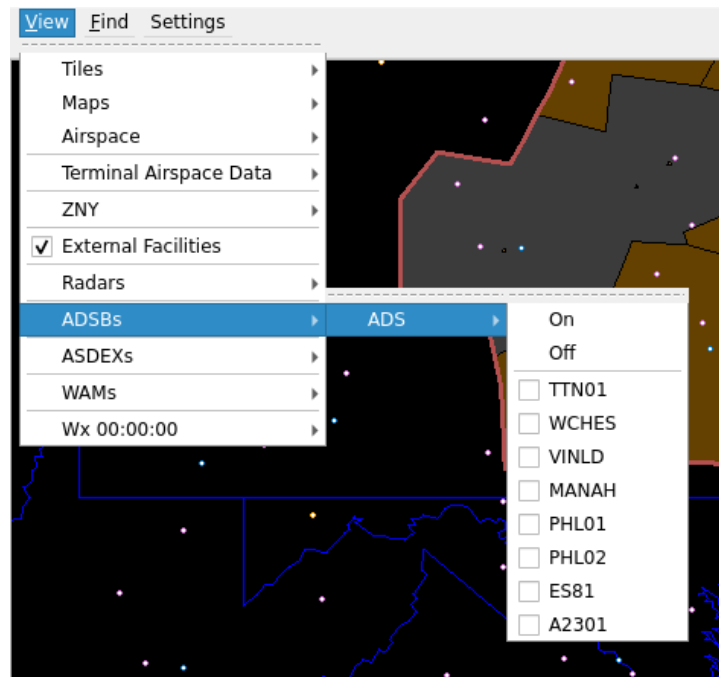


Figure 19. ADSB Options

ASDEX

The ASDEX submenu provides an option for toggling ASDEX on or off. When ASDEX is on, the range is displayed as a shaded circle.

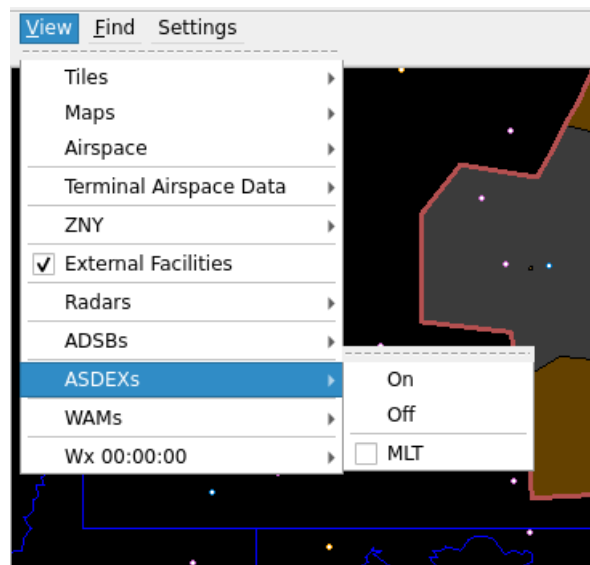


Figure 20. ASDEX Options

WAM

The WAM submenu provides an option for toggling WAM on or off. When WAM is on, the range is displayed as a shaded circle.

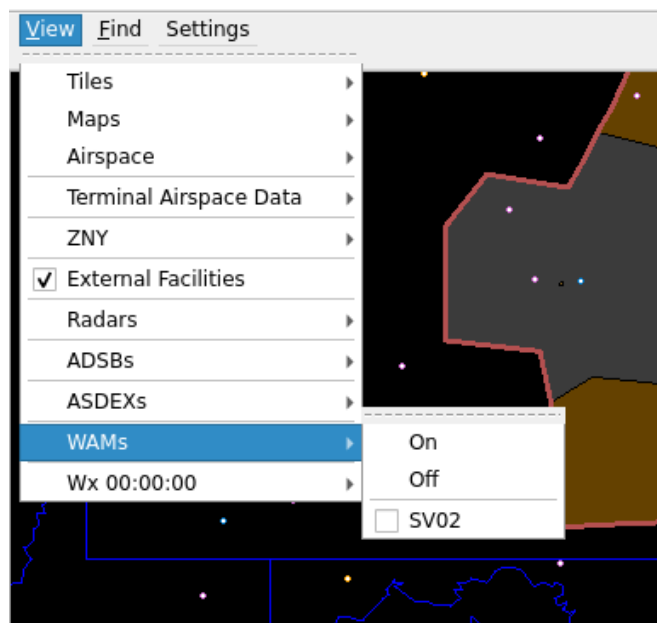


Figure 21. WAM Options

WX hh:mm:ss

If the target scenario includes a weather scenario, a WX submenu is available for each weather forecast hour and displays Temperature (various colors), Pressure (gray contour lines), Wind, (white arrow vectors) and Precipitation (various colors).

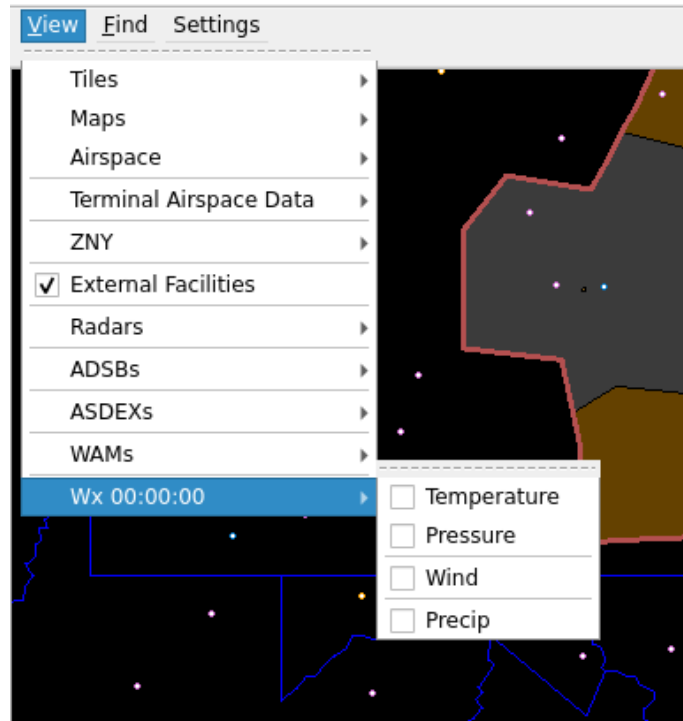


Figure 22. Weather Options

Terminal Airspace Data

Terminal Airspace Data contains a submenu listing all user defined macros and an option for toggling the display of all macros on or off. Terminal Airspace Data also contains:

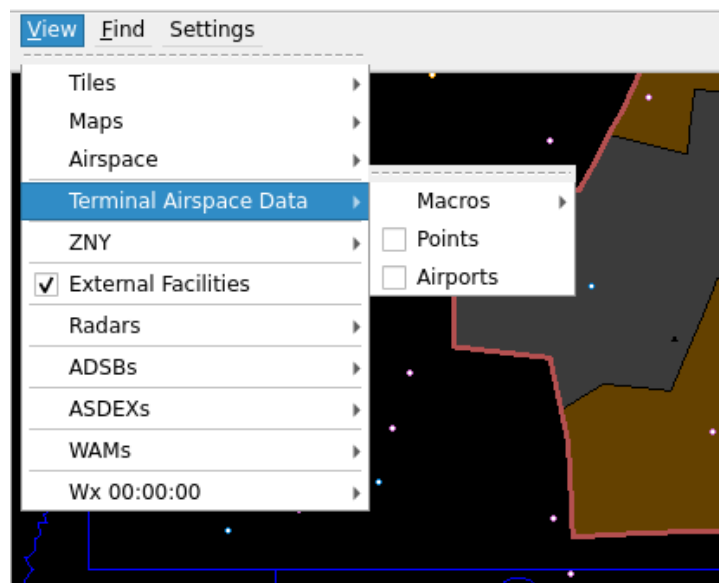


Figure 23. Site Definition Data

Macros

User defined route macros.

Points

(yellow dots)

Airports

(purple triangles)

Find

The Find menu can be used to search the adaptation for airspace elements by name. When found, the element(s) are added to the map display and a context box is displayed with details about the element.

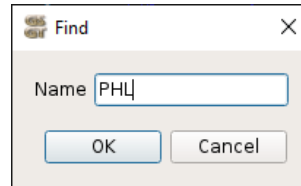


Figure 24. Find Menu

Settings

Clicking on **Settings** displays the following submenus:

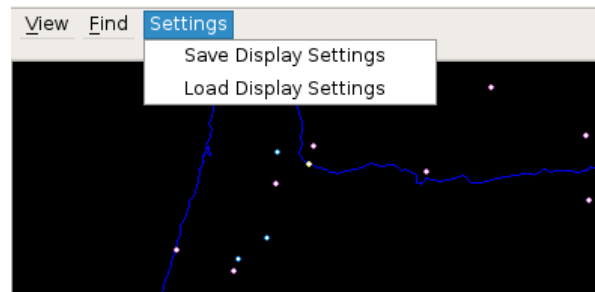


Figure 25. Settings Options

Save Display Settings

Allows saving of preferred display settings.

Load Display Settings

Allows loading of previously saved display settings.

Flight Level

The **Flight Level** tool allows an altitude to be set either by typing the value into the box or by clicking the up and down arrows. Changing the altitude also changes the sector and facility boundaries that are displayed.

 


Figure 26. Flight Level

Zoom

The **Zoom** tool allows the range of the display to be adjusted using a wheel selector.



Figure 27. Zoom

Range

The **Range** tool displays the horizontal size (in nmi) of the airspace showing in the map display.

 


Figure 28. Range

3.3.4. Status Bar

The Status Bar, also referred to as the Measurement Bar, located on the bottom of the main window is used to display measurement information from the map. The bar is automatically displayed and updated upon user action that triggers the measurement information.

To display lat/lon and X/Y system coordinates at any specific point, hold down the **SHIFT** key while mouse clicking a location on the map. Holding down the **SHIFT** key while left clicking and dragging the mouse will display spherical distance in nmi, heading (true and magnetic), and delta X/Y system coordinates.

 


Figure 29. Status Bar

3.3.5. Context Boxes

Holding the SHIFT key while right clicking on any airspace item (such as a Fix, Airport, or FAV) will cause the item to be highlighted and a context box to be displayed. A context box displays information about the airspace item. The contents of each context box depend on the type of item selected and may contain a menu that includes additional data for the selected item.

Right clicking on an item, without holding down the SHIFT key, will highlight the item and display the item name directly on the screen.

A context box can be closed by right clicking again on the item, or by selecting the 'X' button on the window.

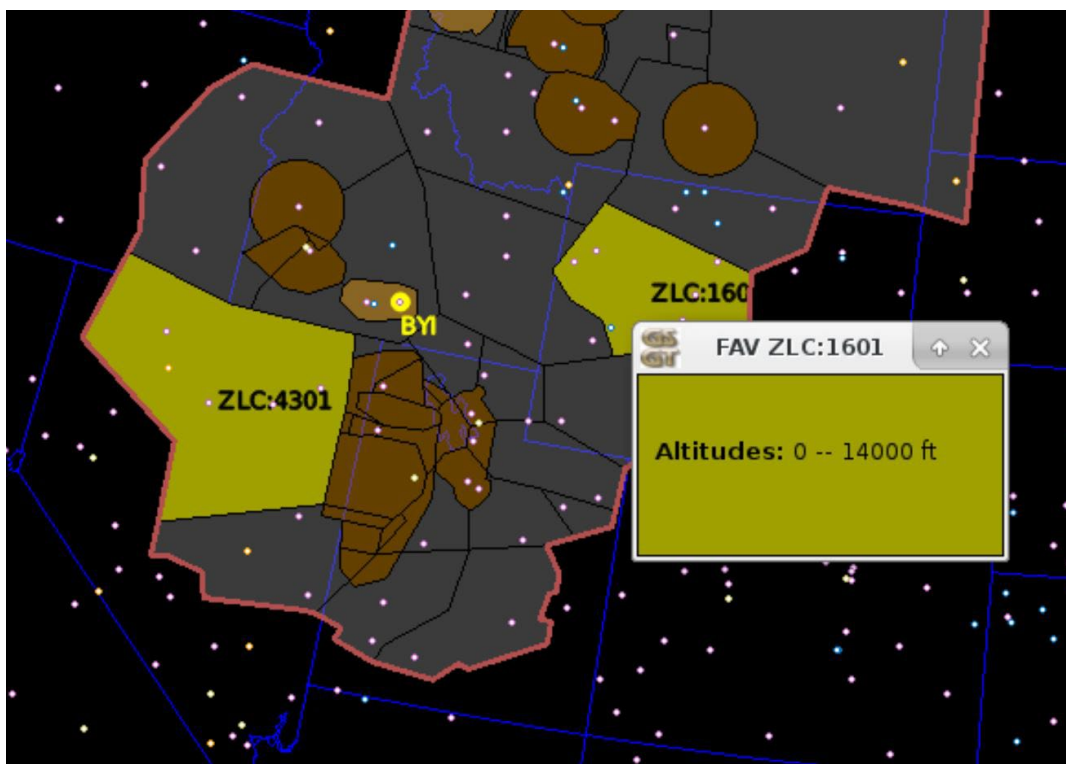


Figure 30. Context Boxes

4. GSGT Scenarios

4.1. Creating a New Scenario

Creating a new scenario generates a blank scenario with no targets, commands or any definitions. A New Scenario Wizard is used to guide the user through selections to create a new scenario by selecting a scenario name, adaptation, and optional weather scenario.

To create a new scenario, select **Scenario->New** from the GSGT Main Window.

NOTE: *If a scenario is already open when the **Scenario->New** option is selected, the new scenario will be automatically configured to use the same adaptation(s) as the current scenario. If you wish to select the adaptation(s), exit and re-start GSGT without opening another scenario, then select **Scenario->New**.*

Back

Goes to the previous screen.

Next

Goes to the next screen.

Cancel

Quits the scenario wizard without creating a new scenario.

4.1.1. Adaptation Selection

NAS adaptation data should exist in subdirectories named eadp (or ERAM), for ERAM adaptation, STARS, and TBFM under the in ADAPTATION_PATH directory. The first screen of the New Adaptation Wizard will display a list of these subdirectories. Expanding the eadp (or ERAM) subdirectory will result in the **Loading** window to be displayed while information about the ERAM adaptation is parsed. Once parsing of the adaption data is completed, the list of available adaptations are displayed.

NOTE: *This step is skipped if another scenario was open before **Scenario->New** was selected.*

While loading adaptation list a dialog is displayed until all adaptation data information is collected.

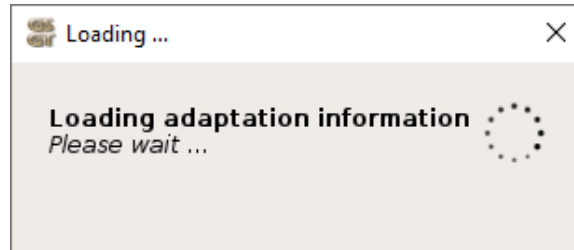


Figure 31. Loading Adaptation List

4.1.1.1. Single Adaptation

At least one ERAM adaptation must be selected. The adaptation is then parsed to create the airspace adaptation objects as well as the facility adaptation information.

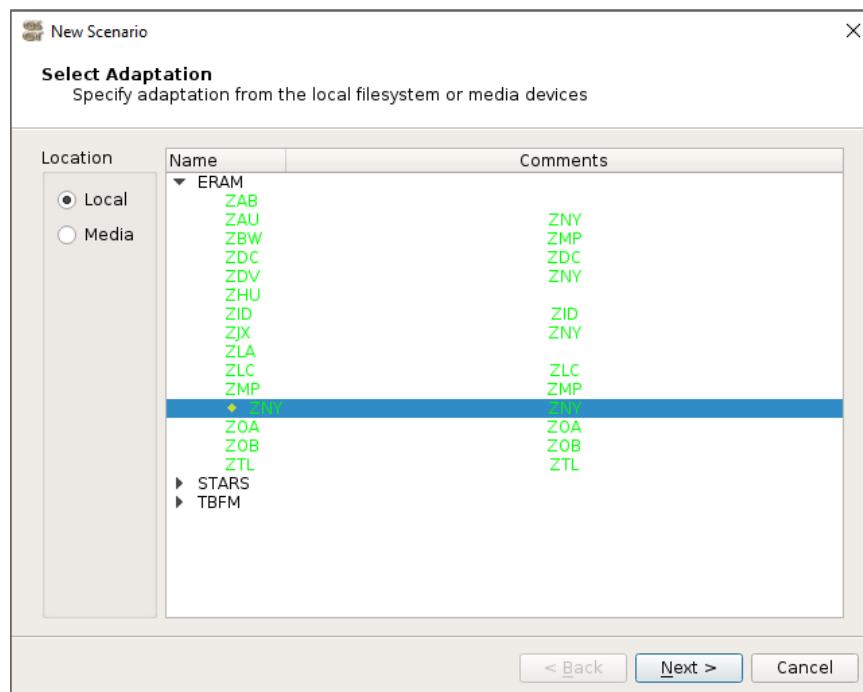


Figure 32. Selecting an ERAM Adaptation

4.1.1.2. Multiple Adaptations

Multiple ERAM adaptations may be selected. The first adaptation selected (marked with a diamond in front of its name) is parsed to create the airspace adaptation objects (which define the entire airspace). All selected adaptations are parsed for their facility adaptation information. To select additional adaptations hold down the **CTRL** key while clicking on individual adaptation names, or hold **SHIFT** key while clicking on the additional adaptation to select a range (all adaptations will be selected between the first and last adaptation selection).

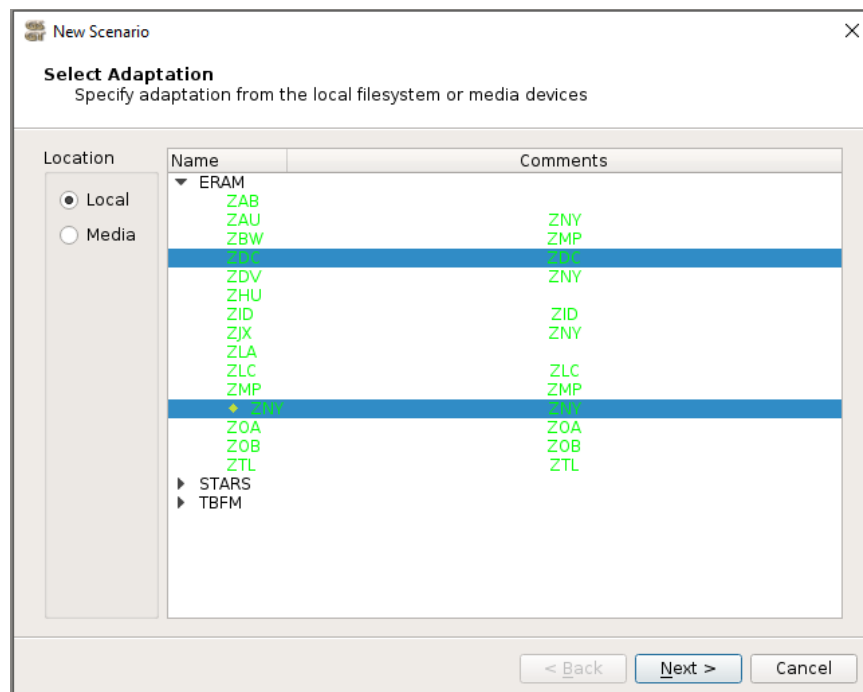


Figure 33. Selecting Multiple ERAM Adaptations

4.1.1.3. Adding Child Adaptation or Customization File

To add child adaptation (STARS, TBFM, etc...) or TBFM Customization, right click on the ERAM adaptation and select one of the available pop up menu options. A file manager window is displayed allowing the user to navigate to the adaptation or customization file. Once the desired child adaptation is selected, click on Choose. The child will appear under the selected ERAM adaptation. This can be done for multiple adaptations, as well.

4.1.1.3.1. Adding STARS DMS Report File

Right click on the ERAM adaptation and select 'Add STARS DMS file'. A file manager window is displayed allowing the user to navigate to the STARS DMS report file.

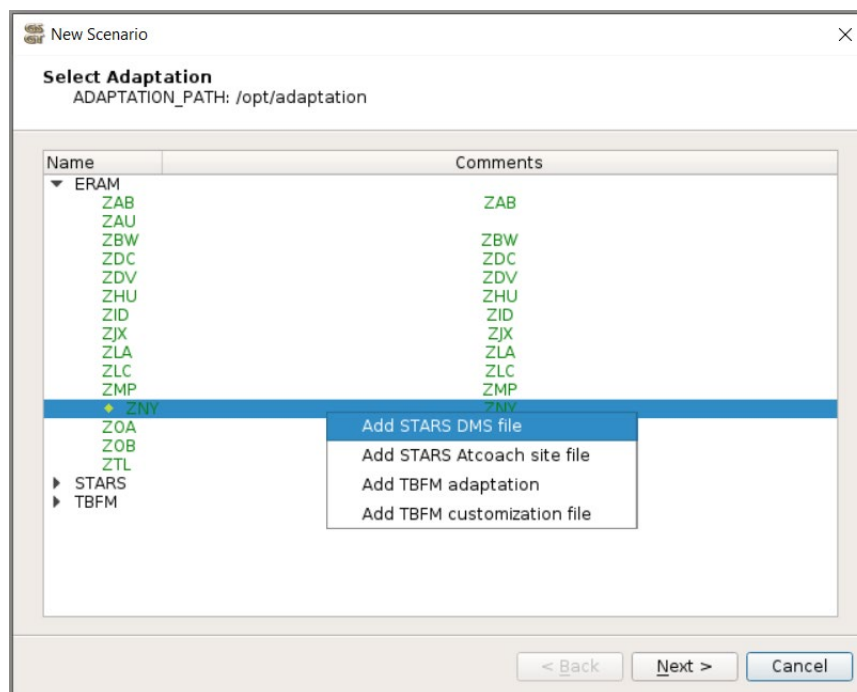


Figure 34. Adding STARS DMS File

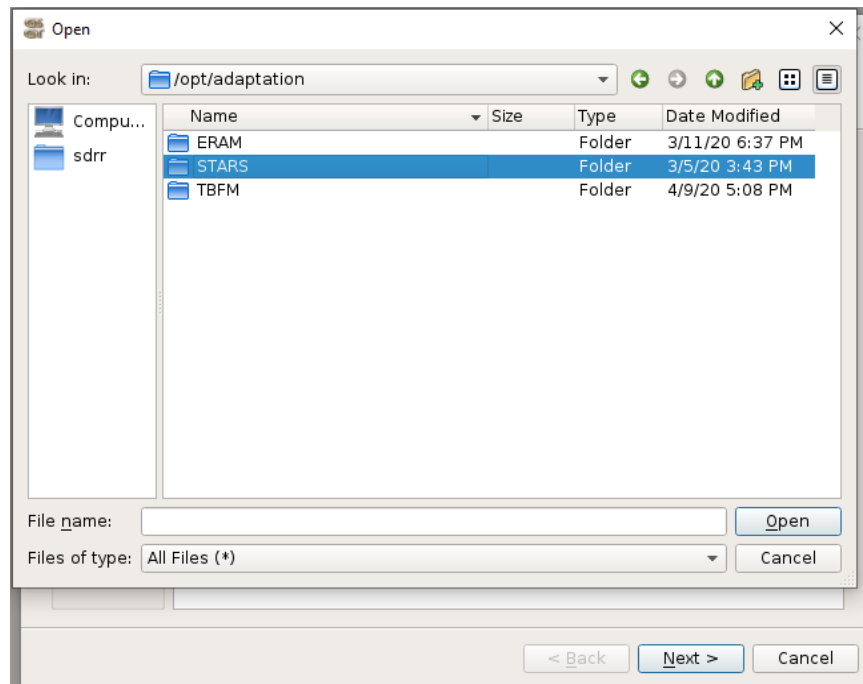


Figure 35. Selecting the DMS File Location

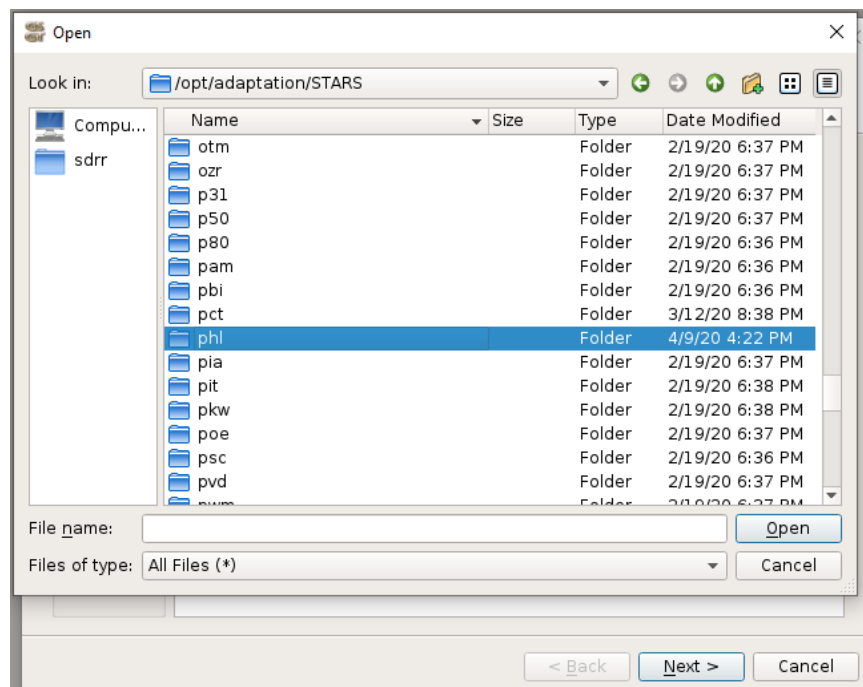


Figure 36. Selecting the TRACON Folder

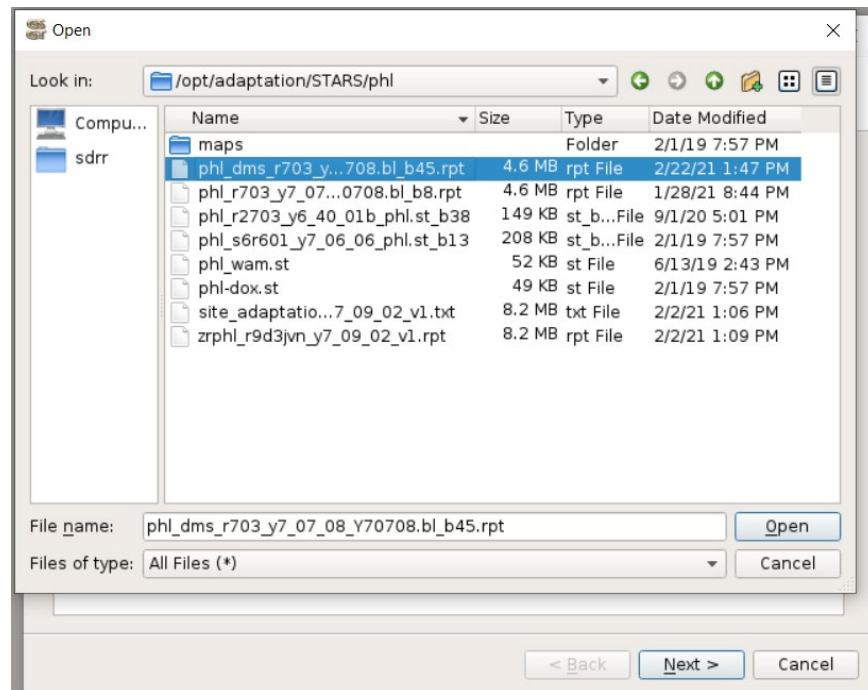


Figure 37. Selecting a DMS Report File

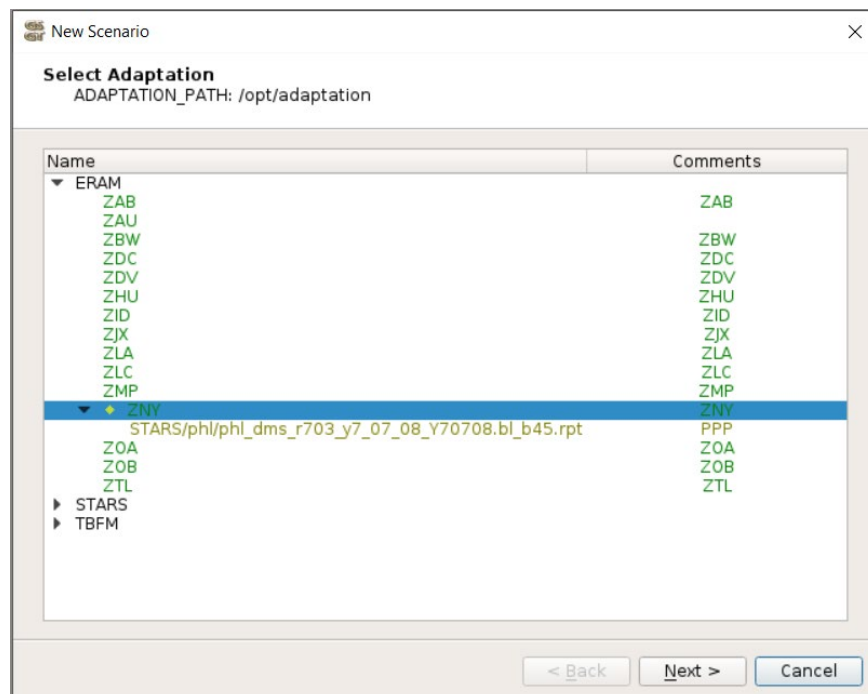


Figure 38. STARS DMS Report File Added

4.1.1.3.2. Adding STARS Site File or User Defined Macros

Right click on the ERAM adaptation and select 'Add STARS ATCoach site file'. A file manager window is displayed allowing the user to navigate to an ATCoach site file or a custom user created macro definitions file. Custom macros can be created for special routes and procedures that can be applied to target dynamics within GSGT.

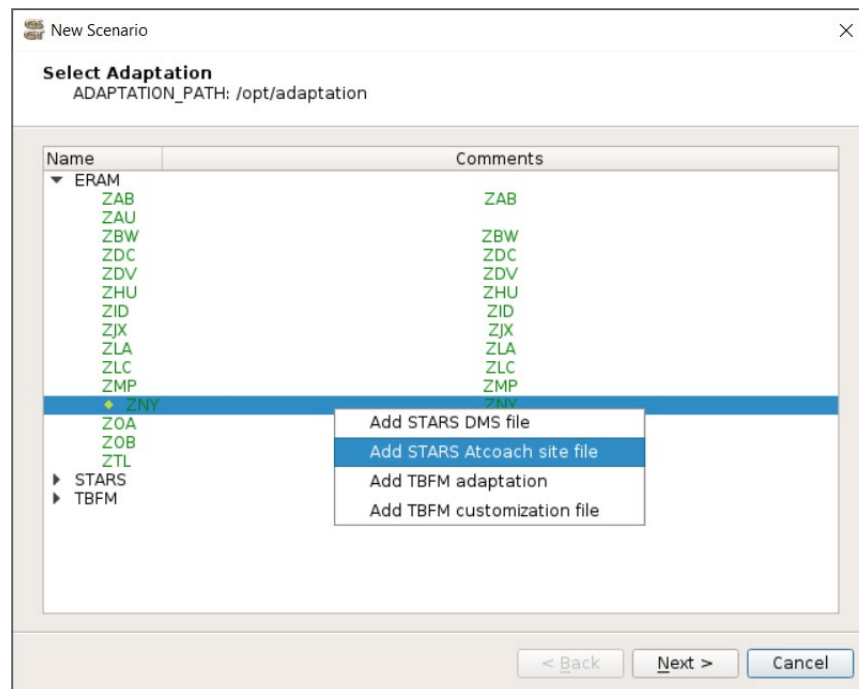


Figure 39. Adding STARS Adaptation

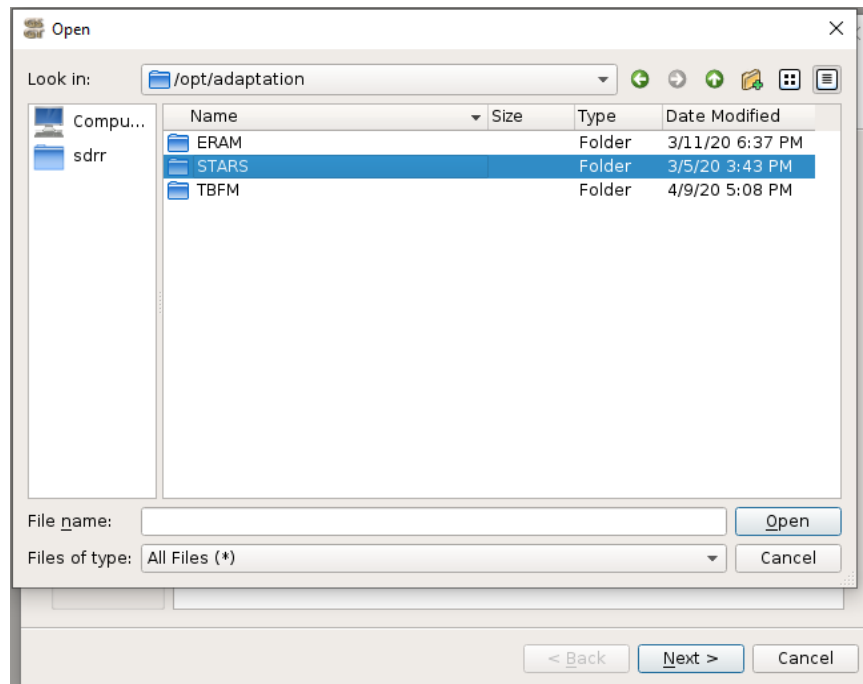


Figure 40. Selecting the STARS Adaptation Location

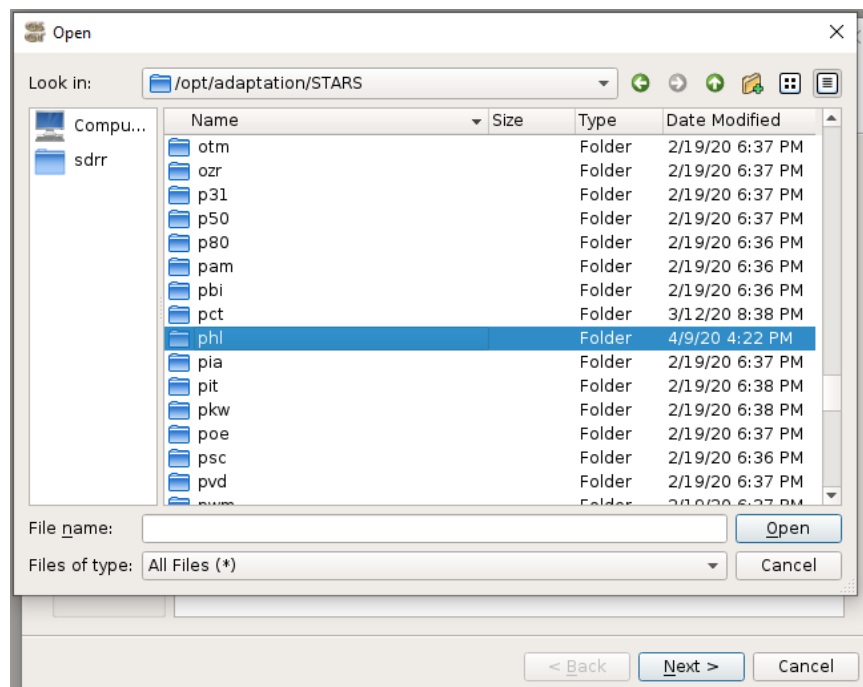


Figure 41. Selecting the TRACON Folder

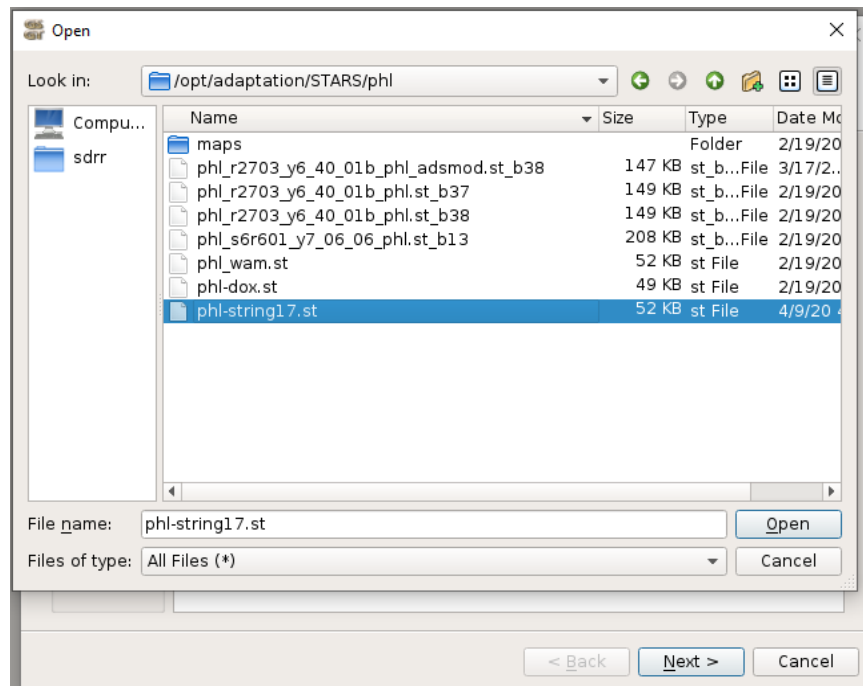


Figure 42. Selecting a Site File

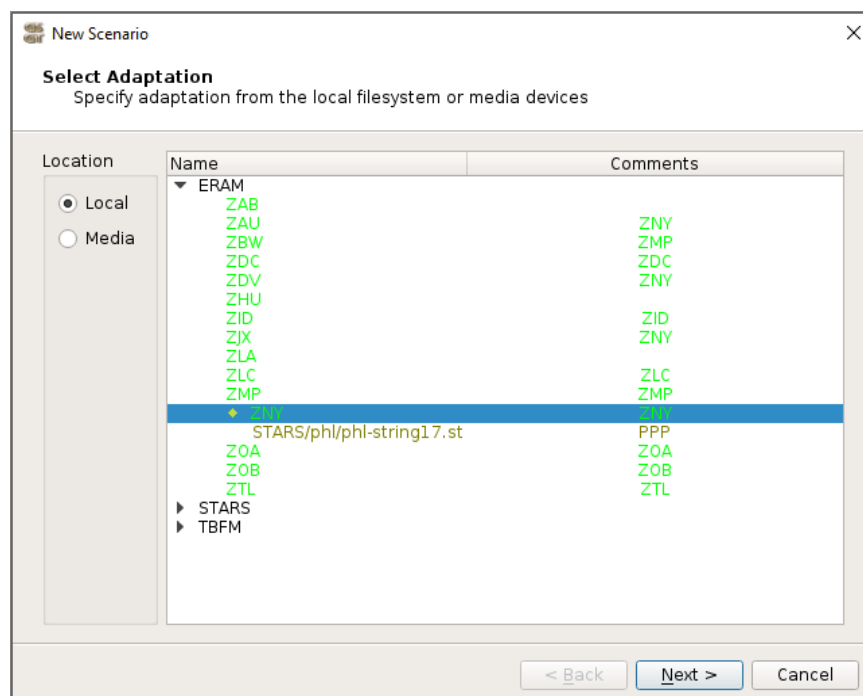


Figure 43. STARS Adaptation Added

4.1.1.3.3. Adding TBFM Adaptation

Right click on the ERAM adaptation and select 'Add TBFM adaptation'. A file manager window is displayed allowing the user to navigate to the TBFM adaptation.

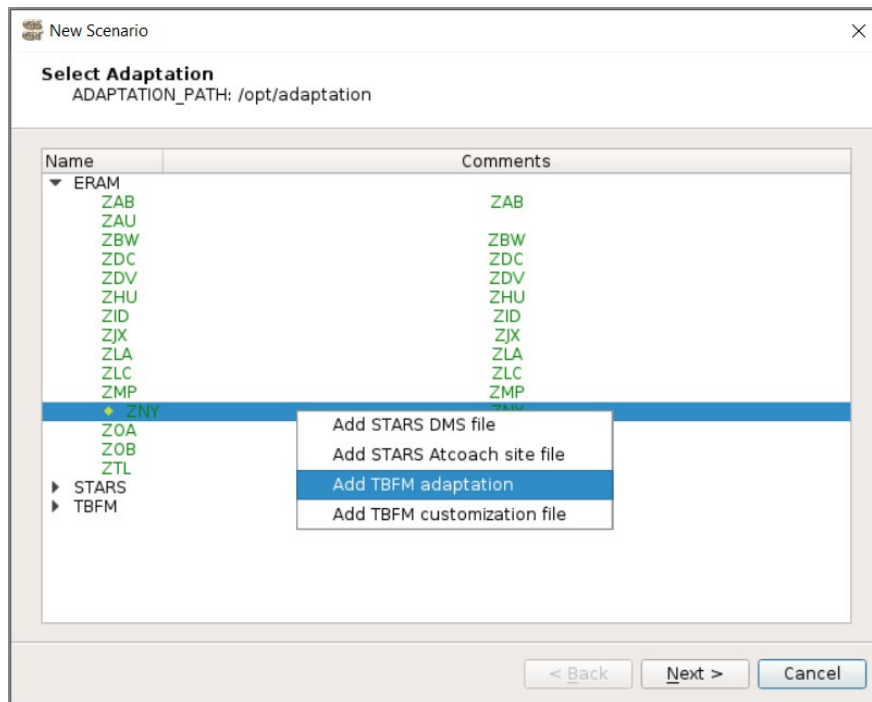


Figure 44. Adding TBFM Adaptation

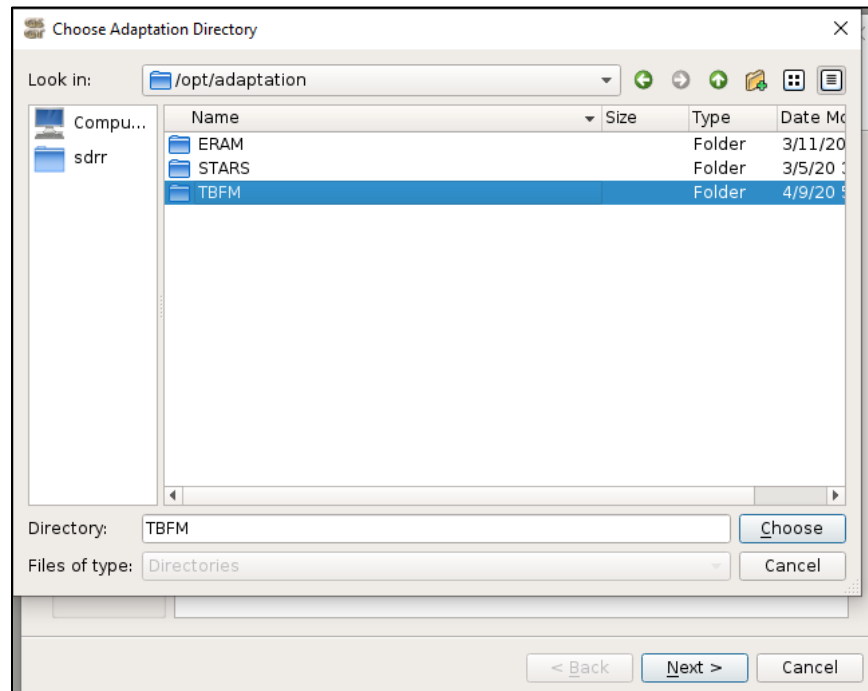


Figure 45. Selecting TBFM Location

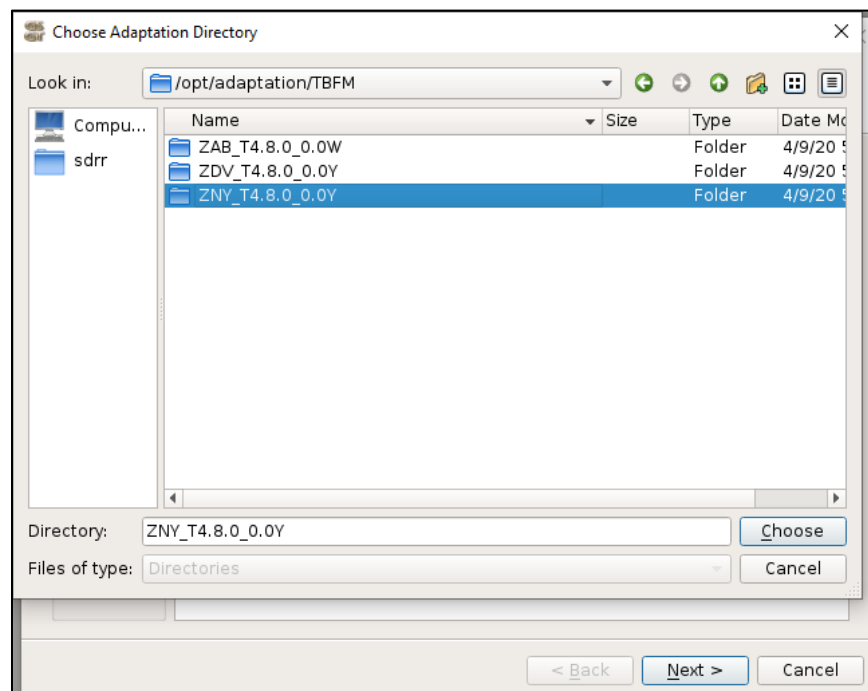


Figure 46. Selecting TBFM Adaptation

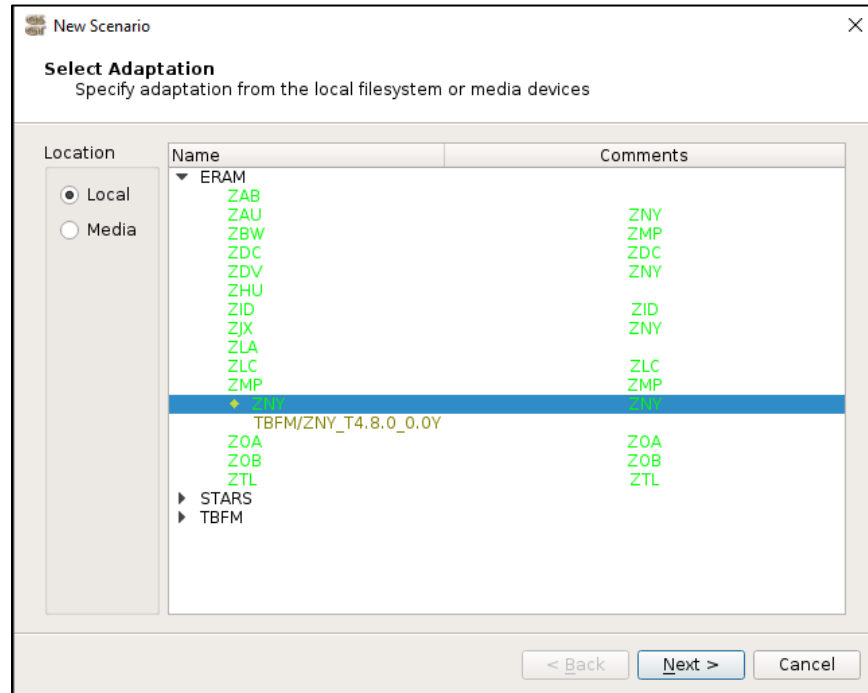


Figure 47. TBFM Adaptation Added

4.1.1.3.4. Adding TBFM Customization File

Right click on the ERAM adaptation and select 'Add TBFM customization file'. A file manager window is displayed allowing the user to navigate to the TBFM customization file. The TBFM customization file is required for TTP airport definitions for TFDM simulation.

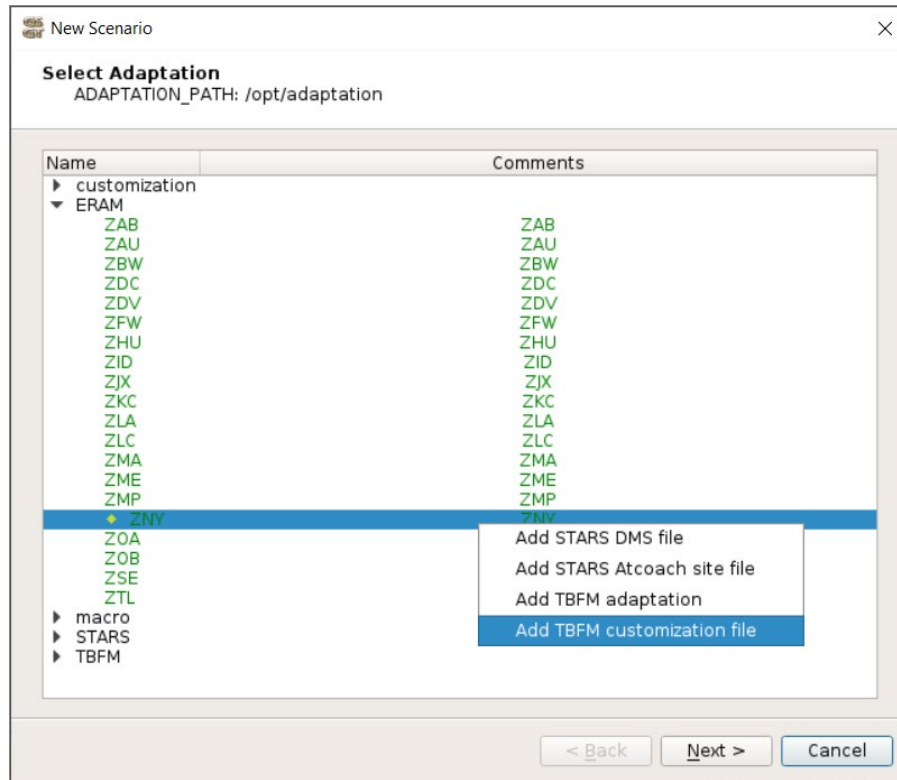


Figure 48. Adding a TBFM Customization File

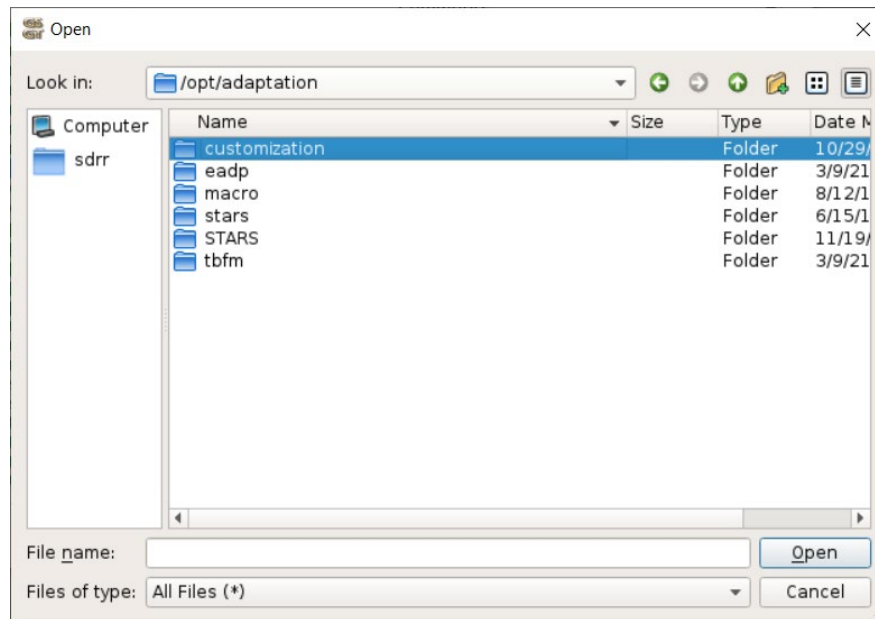


Figure 49. Selecting TBFM Customization File Location

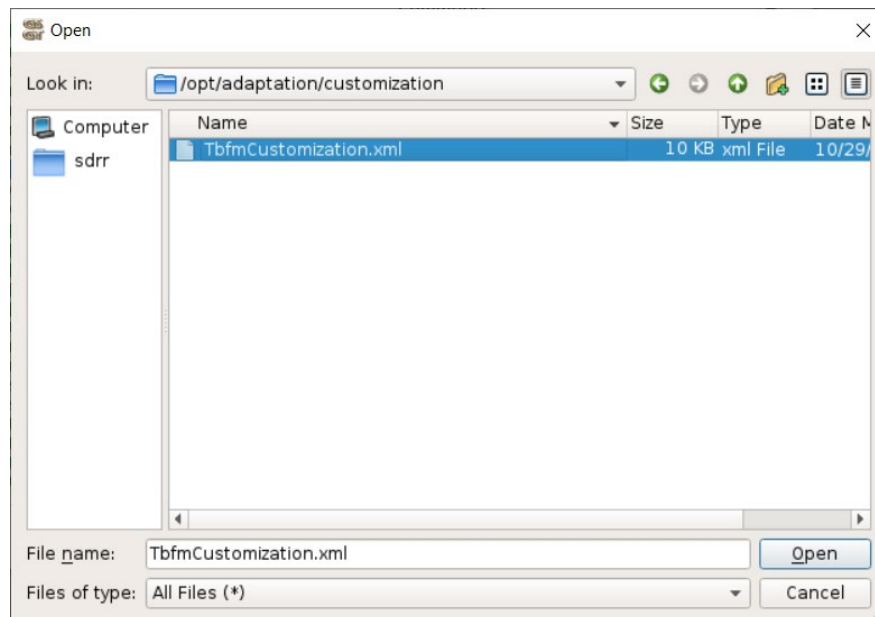


Figure 50. Selecting TBFM Customization File

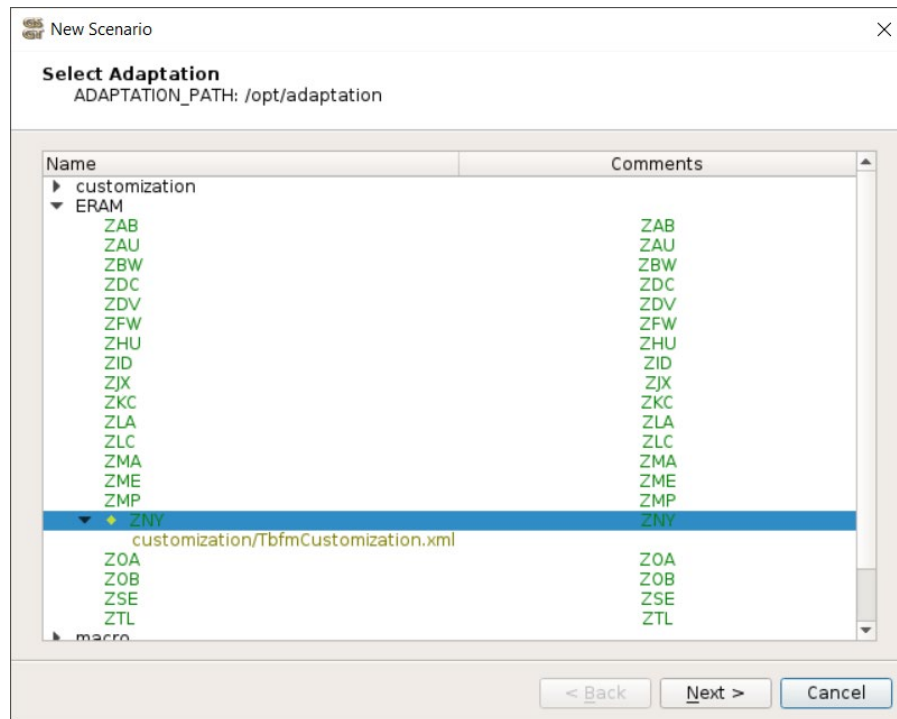


Figure 51. TBFM Customization File Added

4.1.1.4. Removing Child Adaptation

To remove a child adaptation, right click on the child adaptation and select 'Remove'.

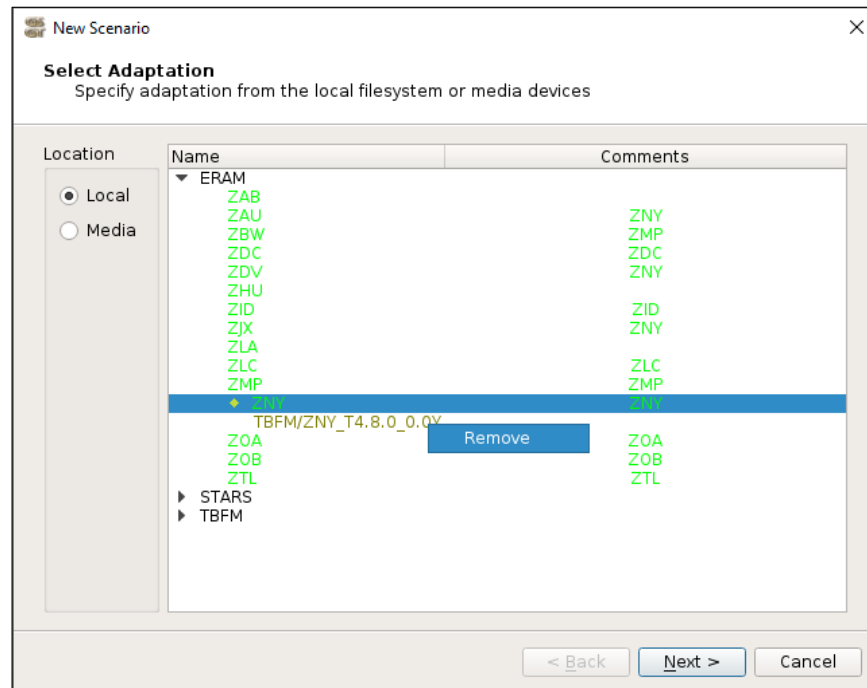


Figure 52. Removing a Child Adaptation

4.1.1.5. ERAM Adaptation File Overrides

Occasionally, there may be a need to override a particular ERAM adaptation file with an informal version. For example, a user may want to modify the restrictions on an arrival route or the attributes of a radar site. GSGT allows a modified file to be specified to replace the file delivered in the local adaptation.

Once the GSGT scenario is saved, the scenario directory is created and a scenario.xml file is written. That scenario.xml file can be edited to add the override sub-element to the eadp stanza where the ERAM adaptation is specified. The value of the override sub-element is the modified informal adaptation file. The override sub-element has one attribute, product, which specifies the delivered file that is to be replaced.

In the example below, the delivered files STAR.xml.75 and Radar.xml.68, located in the ERAM/ZNY_f20e3no0 adaptation directory, will be replaced by the modified files STAR.xml and Radar.xml, located inside the GSGT scenario directory.

```
<scenario version="13.3.2">
  <airspace>
    <eadp dir="ERAM/ZNY_f20e3no0">
      <override product="STAR.xml.75">./STAR.xml</override>
      <override product="Radar.xml.68">./Radar.xml</override>
      <dms file="STARS/ph1/ph1_s6r8a01_y7_08a_Y708A.bl_j3011092022.rpt" name="PPP"/>
      <tbfm dir="TBFM/ZNY_T4.8.3_2.0"/>
    </eadp>
  </airspace>
  ...
</scenario>
```

4.1.2. Scenario Location and Name

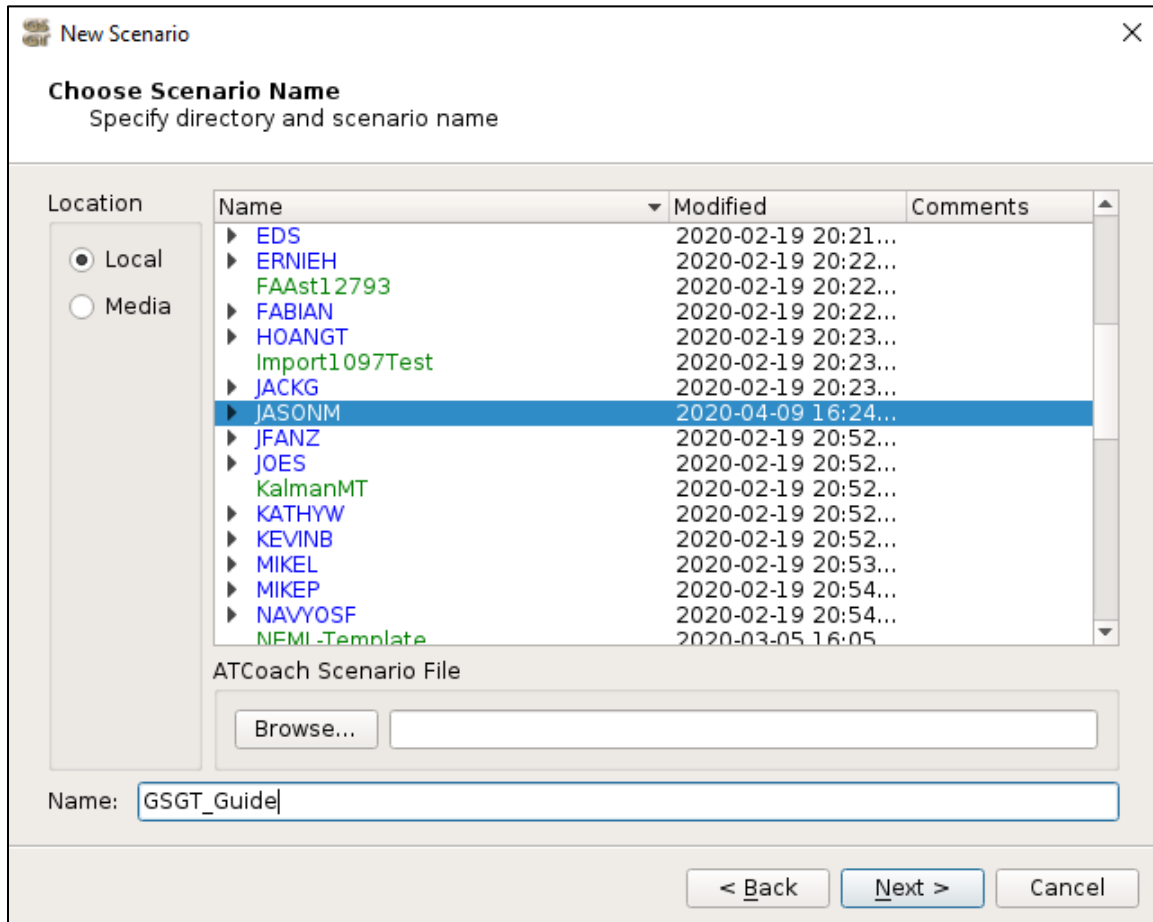


Figure 53. Selecting a Scenario Location and Name

Location Selector

Location of the scenarios, such as default local directory GSGT_WORK_PATH or other media such as CD-ROM or flash drive.

Scenario Name

Scenario name can be an existing scenario name or a new scenario name typed in by the user. The new scenario will be created in the selected directory. Selecting an existing scenario will populate the name for the new scenario, and if user proceeds with creation of new scenario the existing scenario will be overwritten.

NOTE: Directories are displayed in blue, and scenarios are displayed in green. Read-only directories and scenarios are colored black and gray respectively. Right click on a directory allows the user to create a new directory or subdirectory under the selected directory.

4.1.3. Weather Selection

Weather files may be selected by clicking or highlighting the desired weather directory. Selecting a weather file is optional.

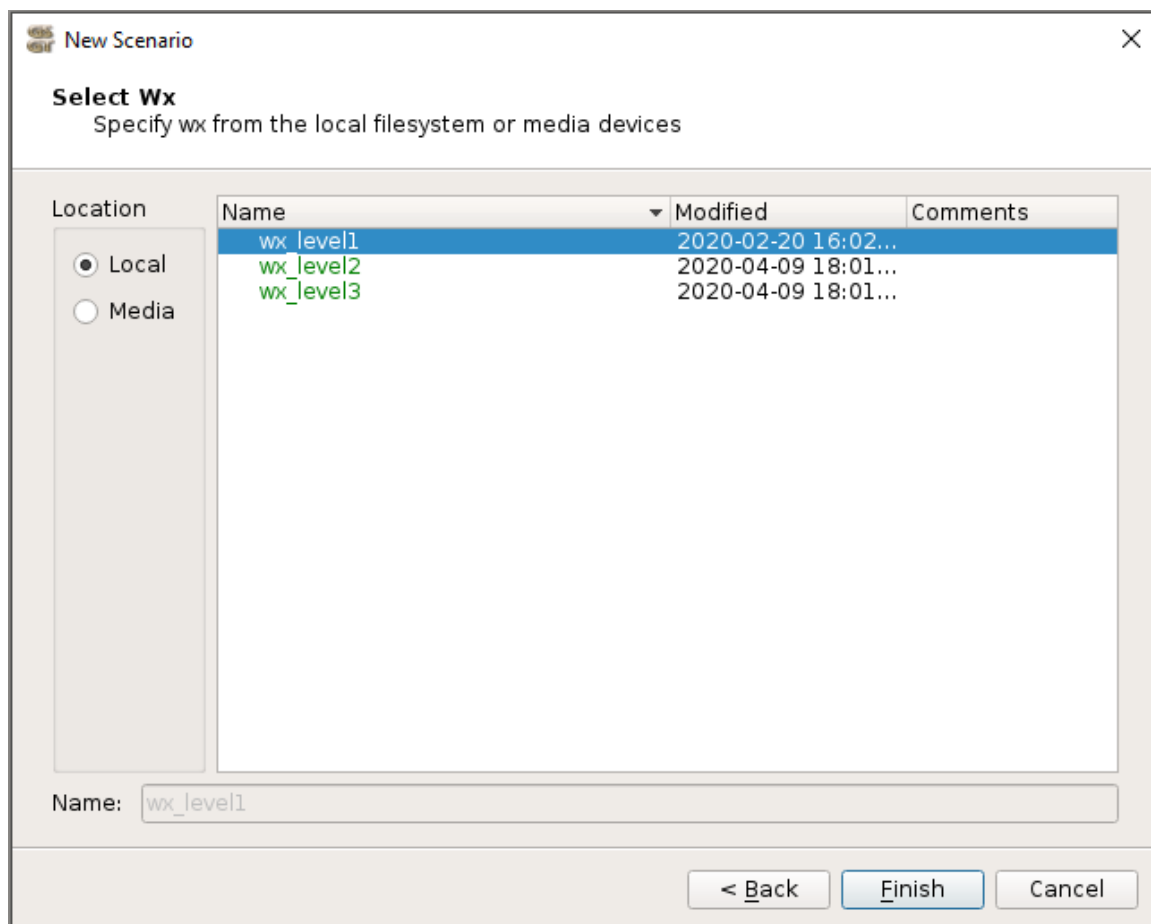


Figure 54. Selecting a Weather Scenario

Finish

Parses the adaptation data and loads the scenario. Not enabled until an adaptation is selected.

Cancel

Cancels creation of the new scenario.

4.1.4. Scenario Overwrite Warning

The warning is displayed to alert the user that a scenario file exists with the same name.

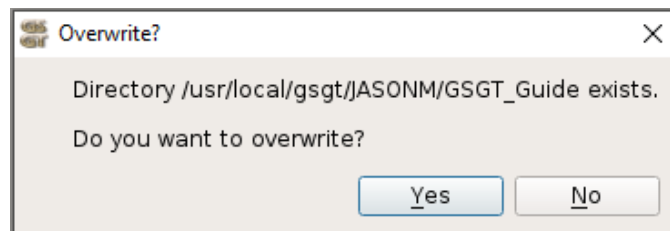


Figure 55. Scenario Overwrite Warning

Yes

Overwrites the existing scenario with the current scenario.

No

Cancels the save scenario operation.

4.2. Open an Existing Scenario

To open an existing scenario, select **Scenario->Open** from the GSGT Main Window.

NOTE: Starting GSGT Editor from a command line while inside the scenario directory will automatically open that scenario.

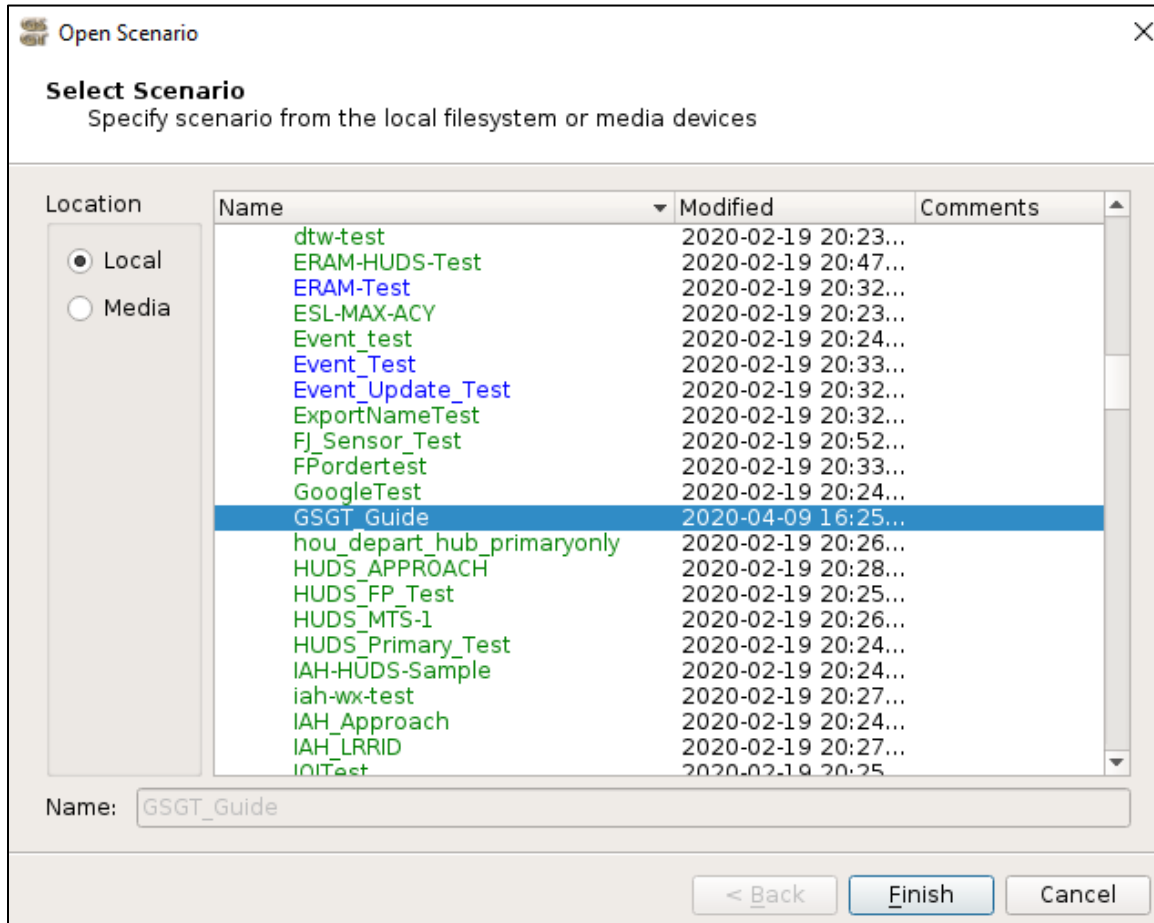


Figure 56. Opening an Existing Scenario

Back

Disabled in this window.

Finish

The selected scenario is opened in the GSGT main window. Enabled after a scenario is selected.

Cancel

Closes the window and cancels scenario open action.

NOTE: Opening a scenario which uses different adaptation than the current scenario will close the current GSGT session and start a new one. It may take a few seconds for the new GSGT session to appear (depending on system performance).

4.2.1. Load Progression Display

The window below will be displayed and the step currently being performed will be listed at the bottom of the window. When completed, an adaptation window will be displayed and the scenario can be reviewed or modified.



Figure 57. Load Progression

4.2.2. Scenario File Loading Errors

If there are errors encountered while loading the scenario, the GSGT Session Log will be displayed listing all errors encountered during loading.


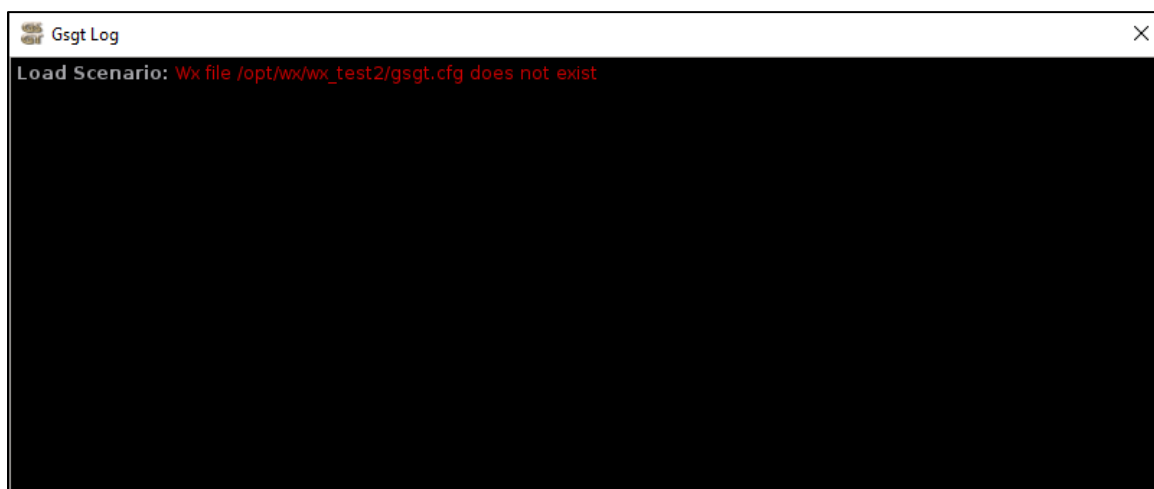


Figure 58. Loading Errors

4.3. Edit Scenario

The main scenario editor window displays a list of objects by type that can be edited. Clicking on an object type displays all of the instances of the object type contained in the scenario, if any.

Select **Scenario->Edit** or use the edit icon  from the GSGT Main Window.

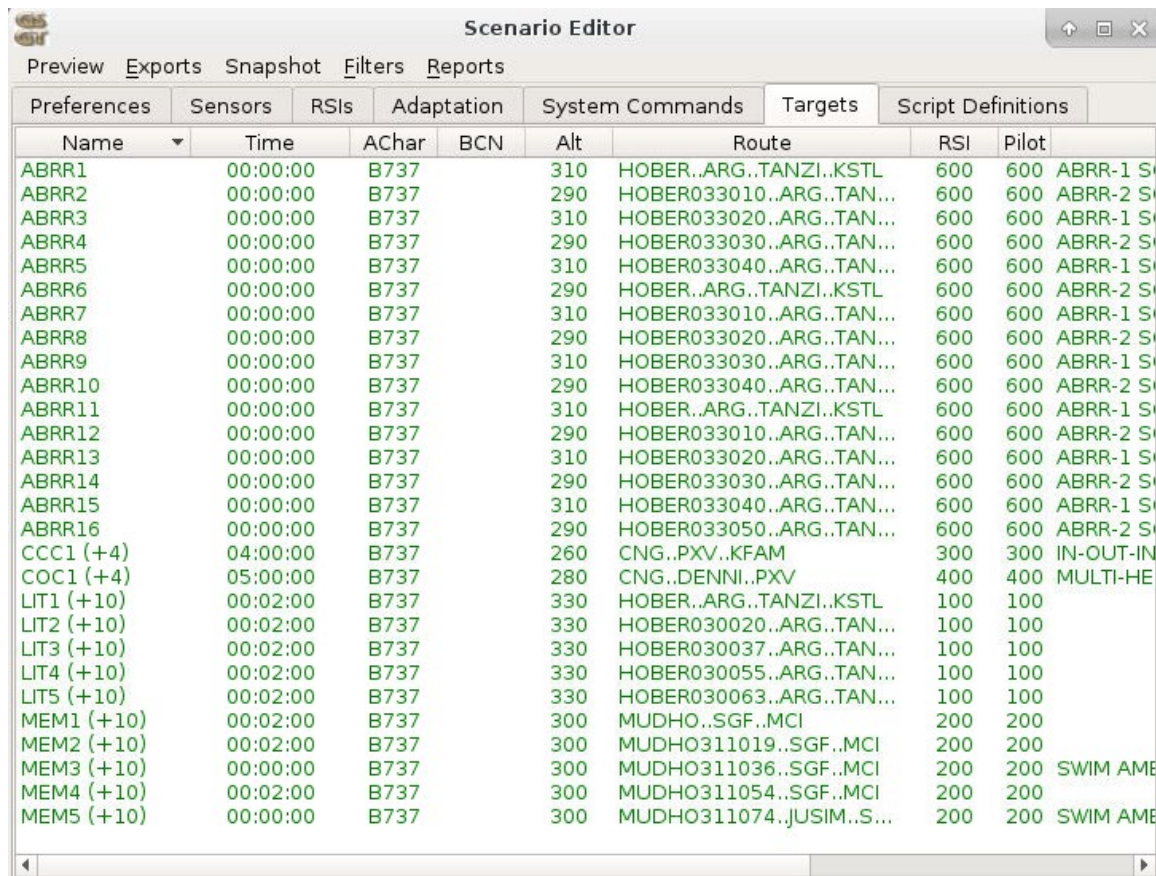

The screenshot shows the 'Scenario Editor' window with a menu bar (Preview, Exports, Snapshot, Filters, Reports) and a tabbed interface. The 'Targets' tab is active, displaying a table of object instances.

Name	Time	AChar	BCN	Alt	Route	RSI	Pilot
ABRR1	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600 ABRR-1 S
ABRR2	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600 ABRR-2 S
ABRR3	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600 ABRR-1 S
ABRR4	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600 ABRR-2 S
ABRR5	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600 ABRR-1 S
ABRR6	00:00:00	B737		290	HOBER..ARG..TANZI..KSTL	600	600 ABRR-2 S
ABRR7	00:00:00	B737		310	HOBER033010..ARG..TAN...	600	600 ABRR-1 S
ABRR8	00:00:00	B737		290	HOBER033020..ARG..TAN...	600	600 ABRR-2 S
ABRR9	00:00:00	B737		310	HOBER033030..ARG..TAN...	600	600 ABRR-1 S
ABRR10	00:00:00	B737		290	HOBER033040..ARG..TAN...	600	600 ABRR-2 S
ABRR11	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600 ABRR-1 S
ABRR12	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600 ABRR-2 S
ABRR13	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600 ABRR-1 S
ABRR14	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600 ABRR-2 S
ABRR15	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600 ABRR-1 S
ABRR16	00:00:00	B737		290	HOBER033050..ARG..TAN...	600	600 ABRR-2 S
CCC1 (+4)	04:00:00	B737		260	CNG..PXV..KFAM	300	300 IN-OUT-IN
COC1 (+4)	05:00:00	B737		280	CNG..DENNI..PXV	400	400 MULTI-HE
LIT1 (+10)	00:02:00	B737		330	HOBER..ARG..TANZI..KSTL	100	100
LIT2 (+10)	00:02:00	B737		330	HOBER030020..ARG..TAN...	100	100
LIT3 (+10)	00:02:00	B737		330	HOBER030037..ARG..TAN...	100	100
LIT4 (+10)	00:02:00	B737		330	HOBER030055..ARG..TAN...	100	100
LIT5 (+10)	00:02:00	B737		330	HOBER030063..ARG..TAN...	100	100
MEM1 (+10)	00:02:00	B737		300	MUDHO..SGF..MCI	200	200
MEM2 (+10)	00:02:00	B737		300	MUDHO311019..SGF..MCI	200	200
MEM3 (+10)	00:00:00	B737		300	MUDHO311036..SGF..MCI	200	200 SWIM AME
MEM4 (+10)	00:02:00	B737		300	MUDHO311054..SGF..MCI	200	200
MEM5 (+10)	00:00:00	B737		300	MUDHO311074..JUSIM..S...	200	200 SWIM AME

Figure 59. Scenario Editor

Clicking the 'Name' button will toggle between sorting the object instances in ascending and descending order. The triangle in the 'Name' button indicates which ordering will be used after the button is clicked. The same applies for the other buttons.

Scenario Editor also provides the ability to view adapted equipment as defined by selected adaptation(s), such as Sensors and ADS-B Service Volumes.

4.3.1. Create a New Object

To create a new object, right click on the object listing or white space if there are no objects created. A context menu with the option 'New' is displayed. Selecting 'New' from the menu opens a dialog window to define the new object.

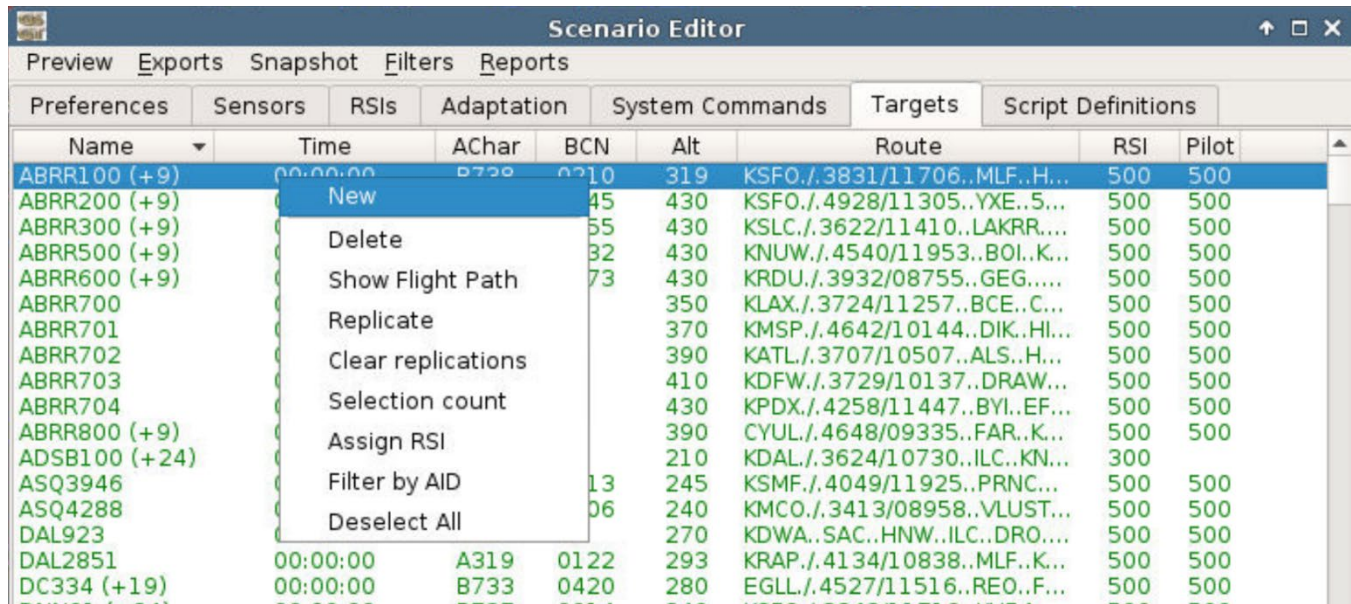


Figure 60. Creating a New Object

4.3.2. Delete Object

To delete an object, right click on an object instance name. A context menu with 'Delete' (and possibly other options) is displayed. Selecting 'Delete' from the menu opens a confirmation dialog, asking user to confirm deletion of the selected object(s).


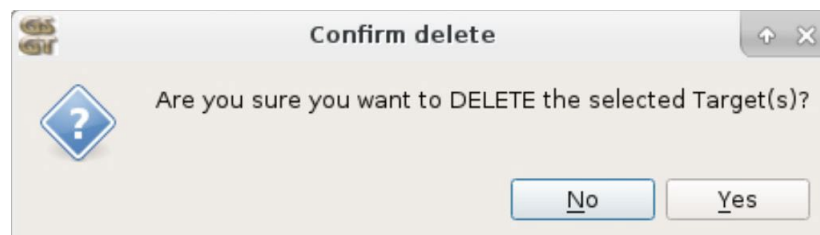


Figure 61. Object Delete Confirmation

4.3.3. Edit Object

To edit an object, double click on an instance name and the editor window will be replaced with the editor dialog for specific type of object instance selected. The example below is a Target editor window.

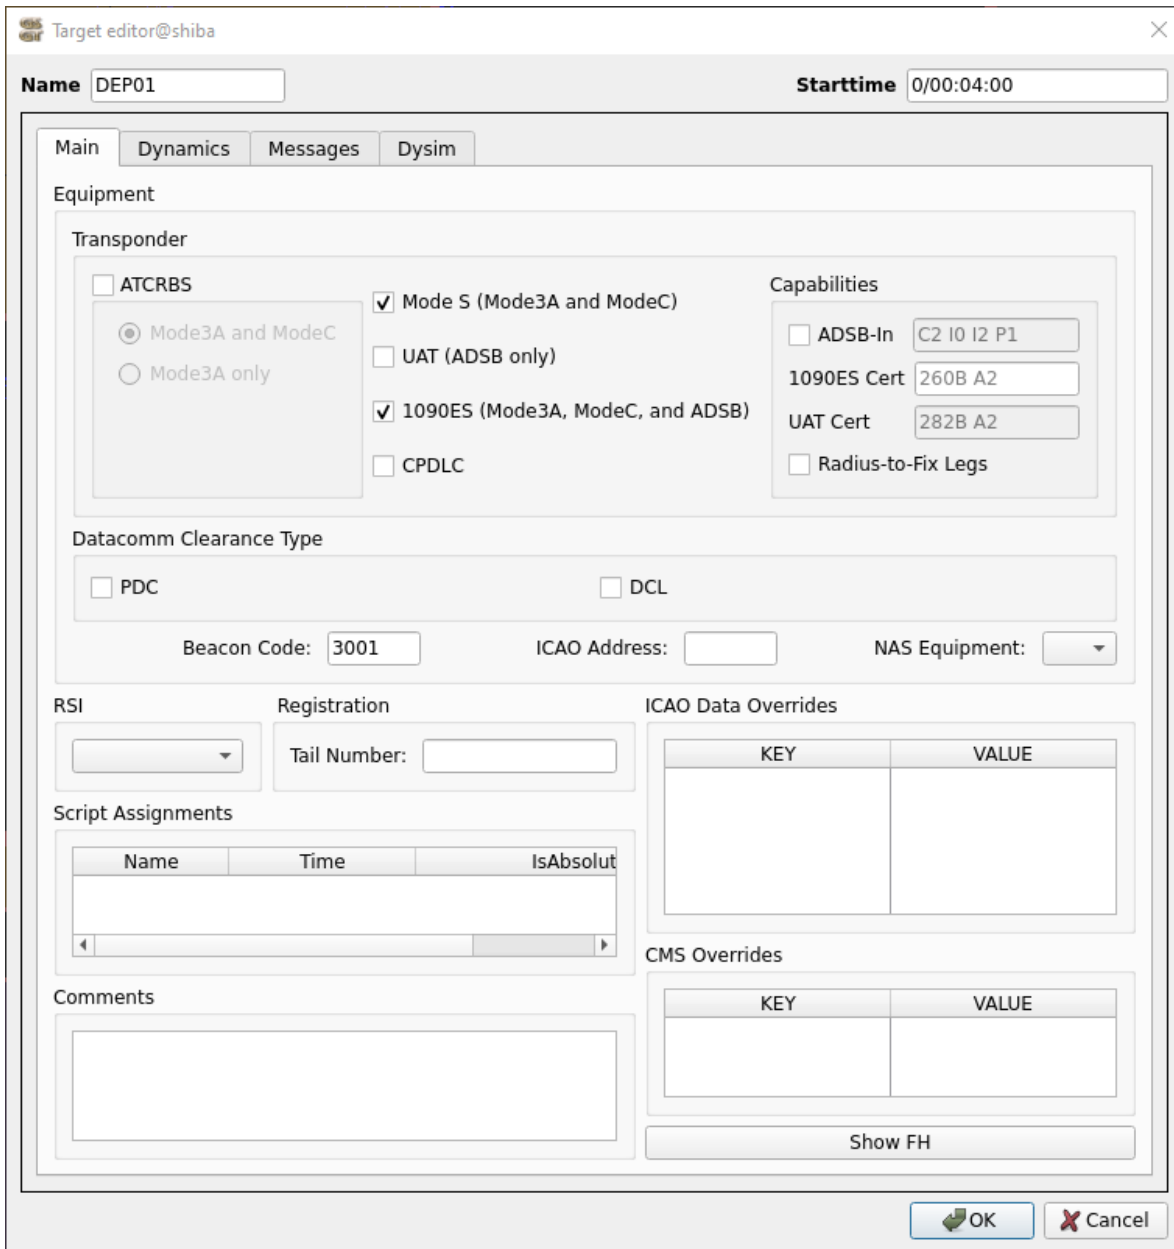

Target editor@shiba

Name: DEP01 Starttime: 0/00:04:00

Main Dynamics Messages Dysim

Equipment

Transponder

☐ ATCRBS

☒ Mode3A and ModeC

☐ Mode3A only

☒ Mode S (Mode3A and ModeC)

☐ UAT (ADSB only)

☒ 1090ES (Mode3A, ModeC, and ADSB)

☐ CPDLC

Capabilities

☐ ADSB-In C2 I0 I2 P1

1090ES Cert 260B A2

UAT Cert 282B A2

☐ Radius-to-Fix Legs

Datacomm Clearance Type

☐ PDC ☐ DCL

Beacon Code: 3001 ICAO Address: NAS Equipment:

RSI Registration ICAO Data Overrides

Script Assignments

Name	Time	IsAbsolute

Comments

KEY	VALUE

CMS Overrides

KEY	VALUE

Show FH

OK Cancel

Figure 62. Object Editor

4.3.4. Replicate Object

Replication provides the ability to produce copies of the selected objects such as System Commands or Targets. The replications can be dynamic (not frozen), so that single object manages all its replications and a change to that object is reflected across all replications of that object. For dynamically replicated targets, all messages and events associated with the original target, will also be generated for each target replication. Alternatively, replications can be frozen, which creates a copy of the original object; therefore, the new objects can be independently modified to specific needs.

The Replication Editor dialog varies depending on whether a System Command or Target is being replicated. As shown in the figure below, the following options are available for Target replications. System Command replication options only allow the user to specify the number of replications and a delta time between replications.

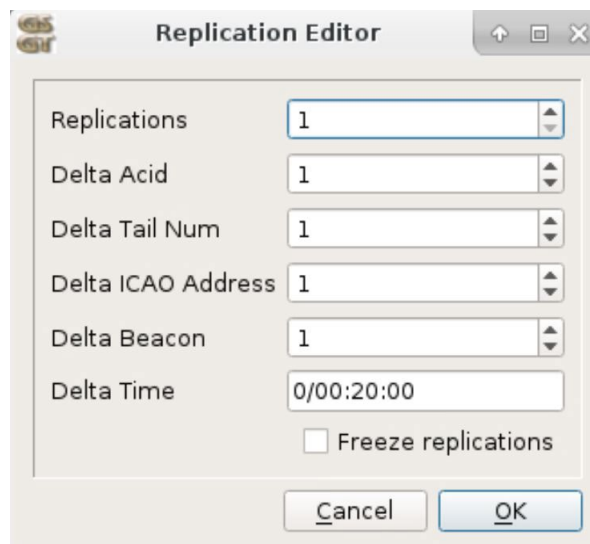


Figure 63. Replication Editor

Replications

The number of replicated objects.

Delta Acid

Delta in Acid between replications. If the base target has the identifier UAL101, and '1' is specified for the Delta Acid, the following Acids are achieved in replications: UAL102, UAL103, UAL104...

Delta Tail Num

Delta in Tail Number between replications. If the base target has the Tail Number N12345, and '2' is

specified for the Delta Tail Num, the following Tail Numbers are achieved in replications: N12347, N12349, N12351...

Delta ICAO Address

Delta in ICAO Address between replications. If the base target has an ICAO Address of AB00E9, and '3' is selected for the Delta ICAO Address, the following ICAO codes are achieved in replications: AB00EC, AB00EF, AB00F2...

Delta Beacon

Delta in Beacon code between replications. If the base target has a beacon code of 1011, and '3' is selected for the Delta Beacon, the following beacon codes are achieved in replications: 1014, 1017, 1022...

Delta Time

Delta in time between replications. The default time is 20 minutes. If the original object has a scenario time of 00:10:00 then the first replication will enter the scenario at 00:30:00.

Freeze Replications

When checked, produces hard copy replications that are no longer tied to the original object. Frozen replications will appear separately in the GSGT Editor list view. Non-frozen replications remain associated with the original.

OK

Adds the specified number of replications to the scenario.

Cancel

Closes the 'Replicate' window without saving changes.

Leaving the pointer over a non-frozen replicated System Command or Target will cause a balloon help to appear with the details of the replication.

Scenario Editor

↑

□

✕

Preview

Exports

Snapshot

Filters

Reports

Preferences

Sensors

RSIs

Adaptation

System Commands

Targets

Script Definitions

Name ▼	Time	AChar	BCN	Alt	Route	RSI	Pilot	Comments
ABRR1	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600	ABRR-1 SCRIPT GROUP 1
ABRR2	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 1
ABRR3	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 1
ABRR4	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 1
ABRR5 (+4)	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 2
ABRR6	00:00:00	B737		290	HOBER..ARG..TANZI..KSTL	600	600	ABRR-2 SCRIPT GROUP 2
ABRR7	00:00:00	B737		310	Replicated Target: x4 time delta = 00:20:00 acid delta = 1 bcn delta 1			
ABRR8	00:00:00	B737		290	HOBER033020..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 2
ABRR9	00:00:00	B737		310	HOBER033030..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 3
ABRR10	00:00:00	B737		290	HOBER033040..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 3
ABRR11	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600	ABRR-1 SCRIPT GROUP 3
ABRR12	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 3

Figure 64. Replications

4.4. Save Scenario

To save current scenario select **Scenario->Save** from the GSGT Main Window.

To save a scenario under a different name select **Scenario->Save As** from the GSGT Main Window. This allows the user to specify the name and location of the scenario files. A directory with the name as the specified in Scenario Name is created in the selected location.

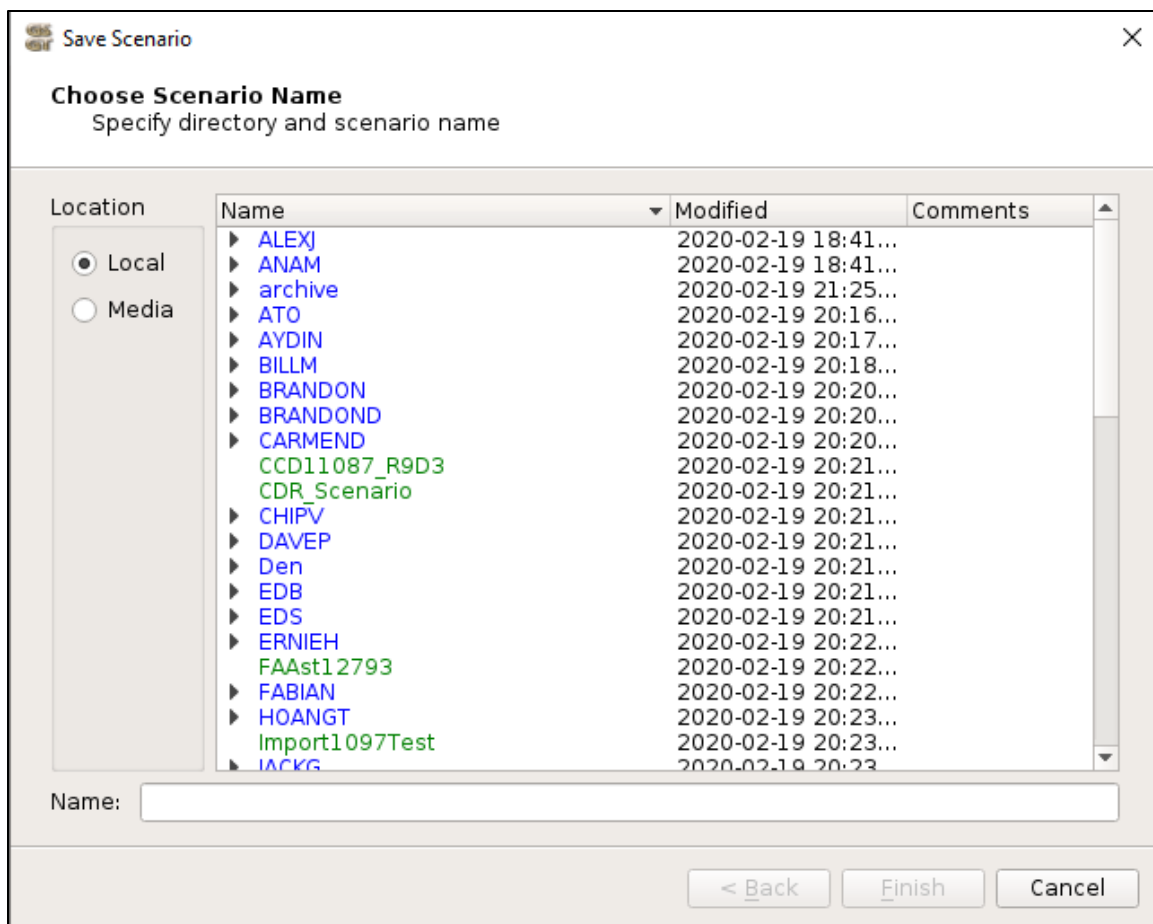


Figure 65. Save Scenario

4.4.1. Scenario Overwrite Warning

When a scenario name is specified in the Save Scenario dialog already exists, the user is prompted to overwrite the existing scenario.

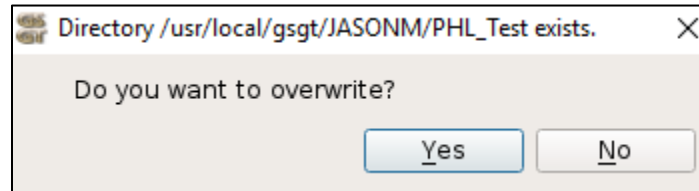


Figure 66. Scenario Overwrite Warning

Yes

The existing scenario file is overwritten.

No

The save action is cancelled.

4.4.2. Save Scenario Before Exit

When the user attempts to exit the GSGT application and unsaved changes have been made to the scenario, the following dialog is displayed.

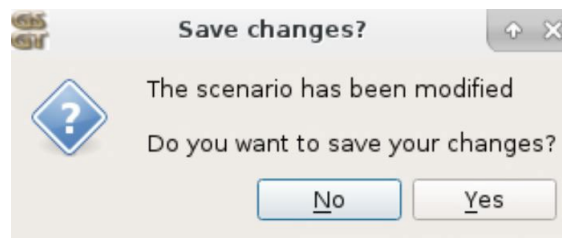


Figure 67. Save Before Exit

Yes

The scenario file is saved and the application is exited.

No

The scenario file is NOT saved and the application is exited.

5. Scenario Editor

The Scenario Editor window is comprised of multiple tabs, including Preferences, Sensors, RSIs, Adaptation, System Commands, Targets, and Script Definitions. Note that not all tabs are available in all GSGT modes. The Sensors and Adaptation tabs display adapted surveillance items and interfacility and display system items, respectively, for reference only. The remaining tabs contain lists of scenario objects by type that can be edited.



Figure 68. Terminal and ERAM Sim Mode Tabs

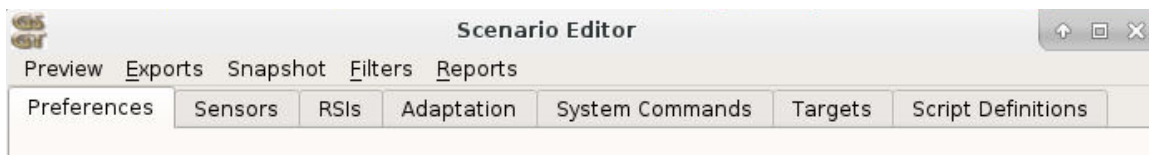



Figure 69. Normal and Dysim Modes Tabs

5.1. Preferences

Preferences are used to specify timing and other attributes of the scenario. The attributes specified in the Preferences tab are applied to the scenario globally. Some timing parameters can be applied to individual targets through the Target editor; see section 5.6.1.3.2 for more details. GSGT looks for a preferences configuration file called prefs.xml. If prefs.xml cannot be found, standard defaults values are used.

5.1.1. Edit Preferences

To edit Scenario Preferences, click on the **Preferences** tab in the Scenario Editor Main Window.

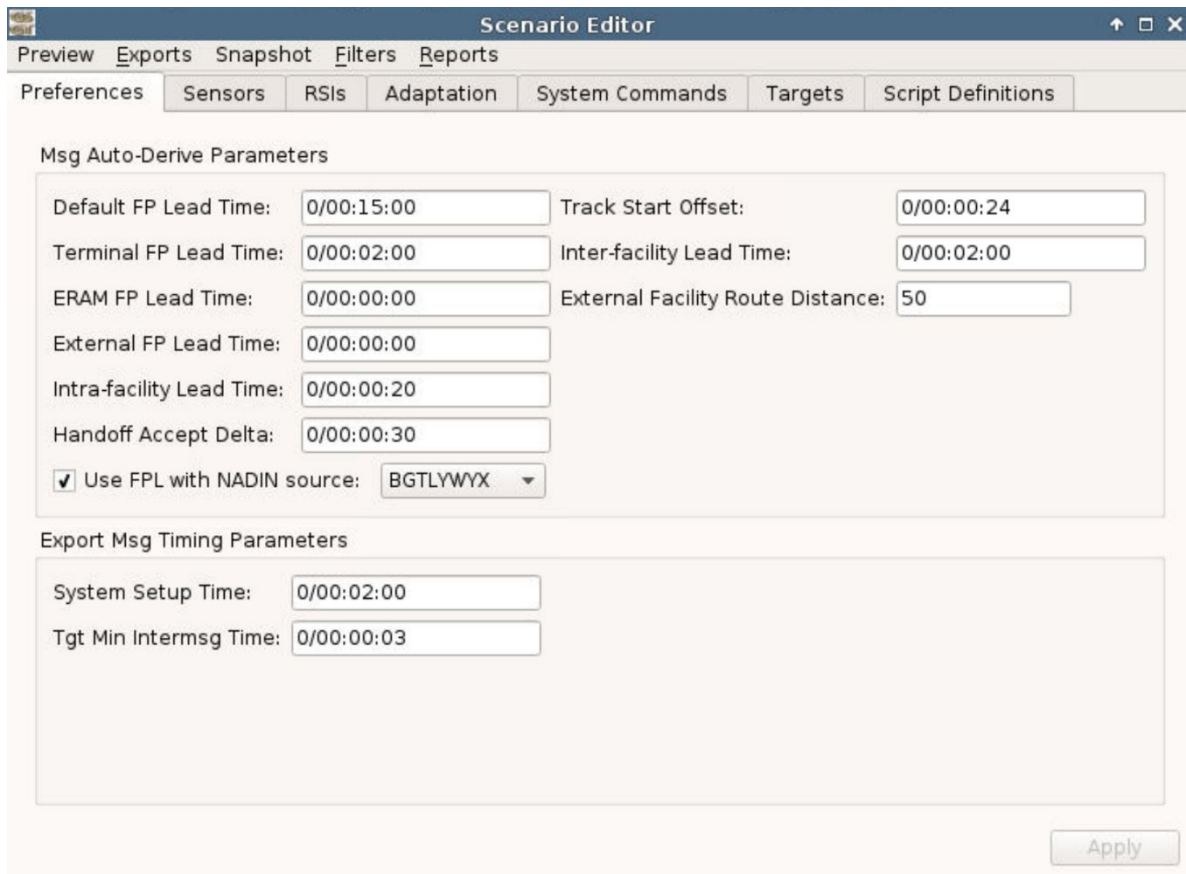

The screenshot shows the 'Scenario Editor' window with the 'Preferences' tab selected. The 'Msg Auto-Derive Parameters' section contains the following fields:

Default FP Lead Time:	0/00:15:00	Track Start Offset:	0/00:00:24
Terminal FP Lead Time:	0/00:02:00	Inter-facility Lead Time:	0/00:02:00
ERAM FP Lead Time:	0/00:00:00	External Facility Route Distance:	50
External FP Lead Time:	0/00:00:00		
Intra-facility Lead Time:	0/00:00:20		
Handoff Accept Delta:	0/00:00:30		
☒ Use FPL with NADIN source:		BGTLYWYX	

The 'Export Msg Timing Parameters' section contains the following fields:

System Setup Time:	0/00:02:00
Tgt Min Intermsg Time:	0/00:00:03

An 'Apply' button is located at the bottom right of the window.

Figure 70. Preferences Tabs

Export Msg Timing Parameters

System Setup Time

No messages will be injected before this time, unless the message is marked as a system setup message. This allows messages such as combine sector and switch activity to be injected prior to any flight data messages.

Tgt Min Intermsg Time

The minimum amount of time between auto-generated messages for the same target. This ensures that messages associated with the same target will not be injected out of order. It is useful in large scenarios, when message injection times tend to be delayed due to equipment injection delays.

Msg Auto-Derive Parameters

FP Lead Time

For auto-generated messages, the amount of time preceding a target start time or preceding a boundary crossing that the flight plan messages will be scheduled for injection. For a departure flight, the initial proposed flight plan will be generated with an injection time that is FP Lead Time prior to the departure time. For an active flight, the flight plan will be generated with an injection time that is FP Lead Time prior to the start of the radar track. If a flight crosses any enroute or terminal facility boundaries, the flight plan generated for each downstream facility will have an injection time that is FP Lead Time prior to the boundary crossing time.

Track Start Offset

For auto-generated messages, the time after a target start time for a flight that starts inside an adapted local facility that the start track message (QT) will be scheduled for injection.

Intra-facility Lead Time

For auto-generated messages, the time before an inter-sector boundary crossing when the initiate handoff message (QN) will be scheduled for injection.

Inter-facility Lead Time

For auto-generated messages, the time before an enroute or terminal facility boundary crossing when the initiate handoff message (TI) will be scheduled for injection.

Handoff Accept Delta

For auto-generated messages, the time between the initiate handoff message and the accept handoff message for both intra-facility and inter-facility transfers of control.

Use FPL with NADIN source

By default, domestic proposed flights are auto-generated with FP messages. With this option selected, all domestic proposed flights are generated using FPL messages injected from the specified NADIN source.

Apply

Save and apply the changes made and close the Preferences editor dialog.

5.2. Sensors

GSGT uses surveillance devices defined in adaptation. Surveillance equipment attributes can be viewed but not modified. To expand the subtree contained in particular type of equipment click on the triangle icon to the left of the item.

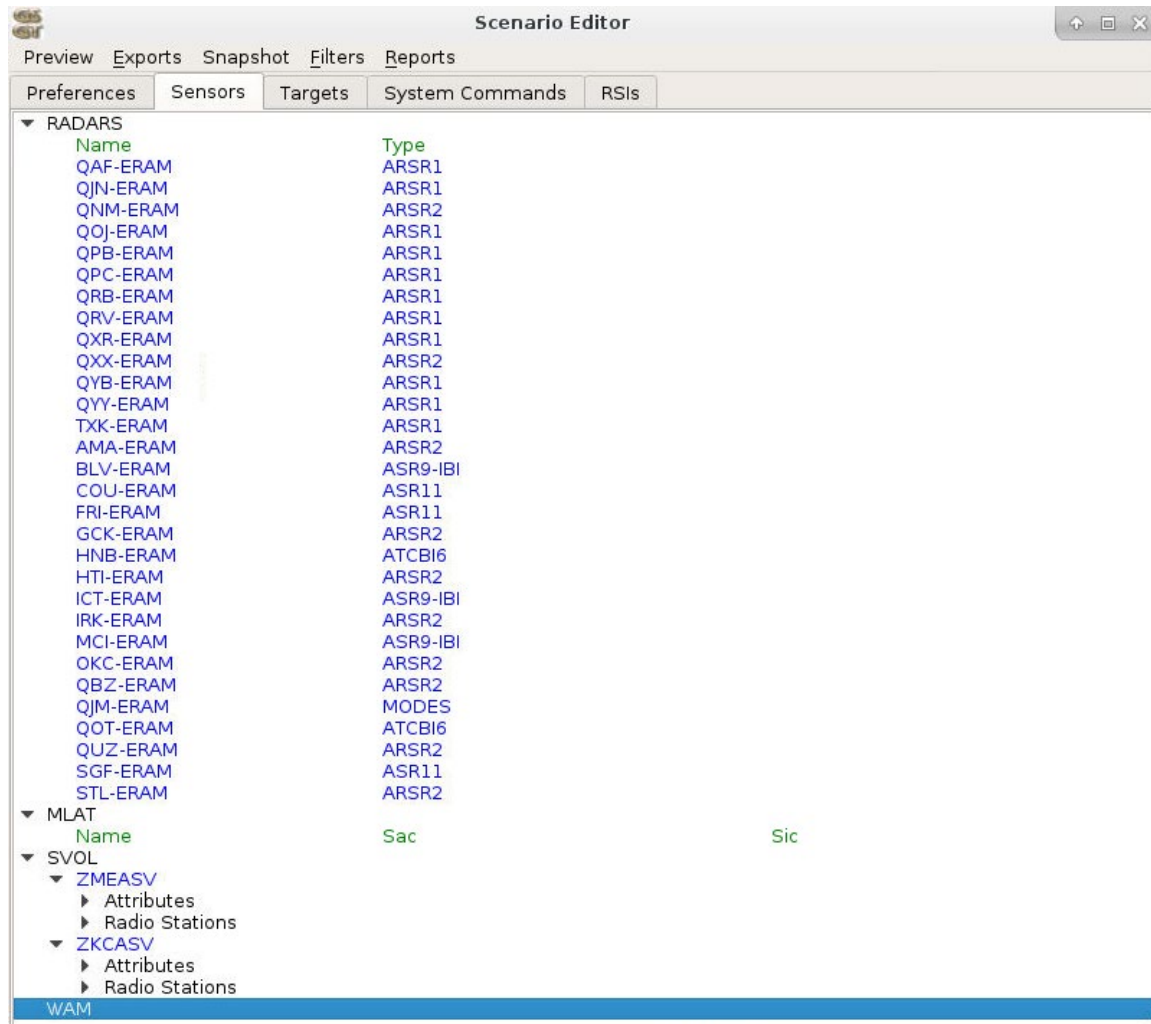



Figure 71. Sensors Tab

5.3. RSIs

Record Selection Indicators, abbreviated RSI, can be used to identify various messages, which can then be selected or filtered during runtime.

5.3.1. Create and Edit RSI

To create a new RSI, click on the **RSIs** object label in the Scenario Editor Main Window and right click the object list. Select **New** from the context menu.

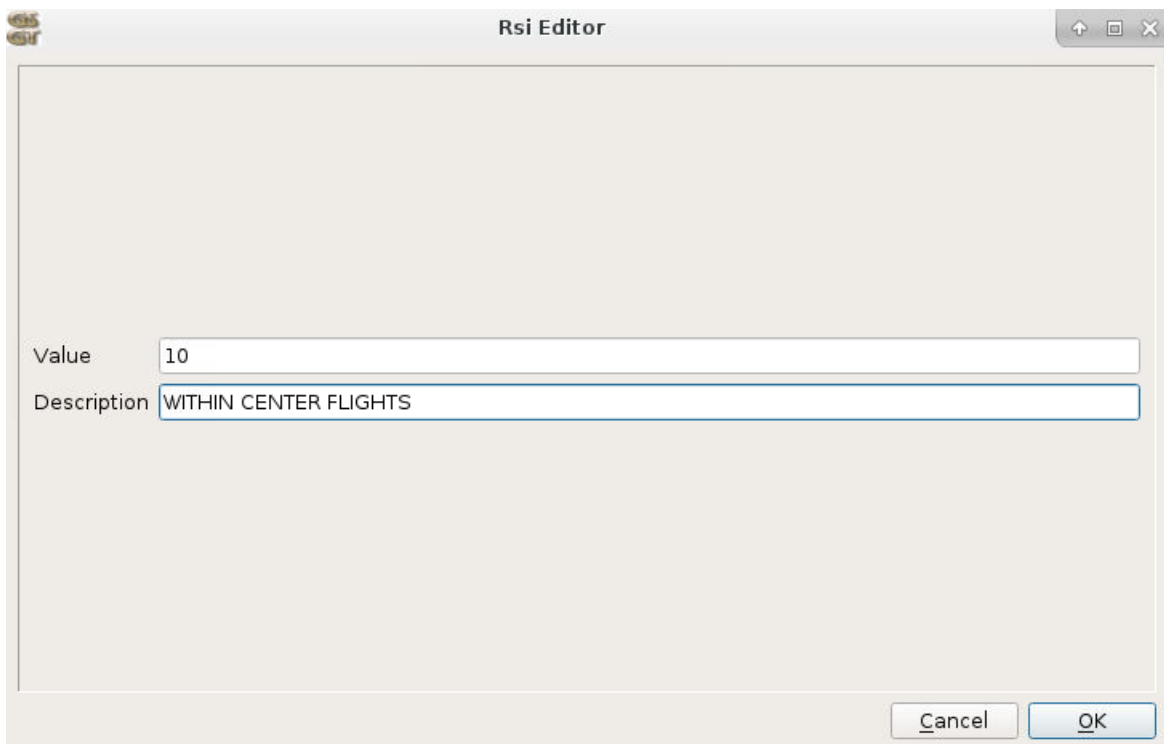

The screenshot shows a dialog box titled "Rsi Editor". It has a light gray background and a standard Windows-style title bar with a maximize button, a close button, and a small icon on the left. The main area of the dialog contains two text input fields. The first field is labeled "Value" and contains the text "10". The second field is labeled "Description" and contains the text "WITHIN CENTER FLIGHTS". At the bottom right of the dialog, there are two buttons: "Cancel" and "OK".

Figure 72. RSI Editor

Value

Any string can be used for the RSI value.

NOTE: Each string value can only be used for one RSI. A dialog box stating "RSI exists" will appear if the string entered is already being used for another RSI once OK is selected.



Figure 73. RSI Exists Warning

Description

Text description of the RSI.

OK

Save and apply the changes made and close the RSI editor dialog.

Cancel

Cancel the changes made and close the RSI editor dialog.

5.3.2. Edit Objects Associated with Specific RSI

From the Scenario Editor, left click on Filters, then select Filter by RSI to display the list of RSI(s) to filter the editor by.

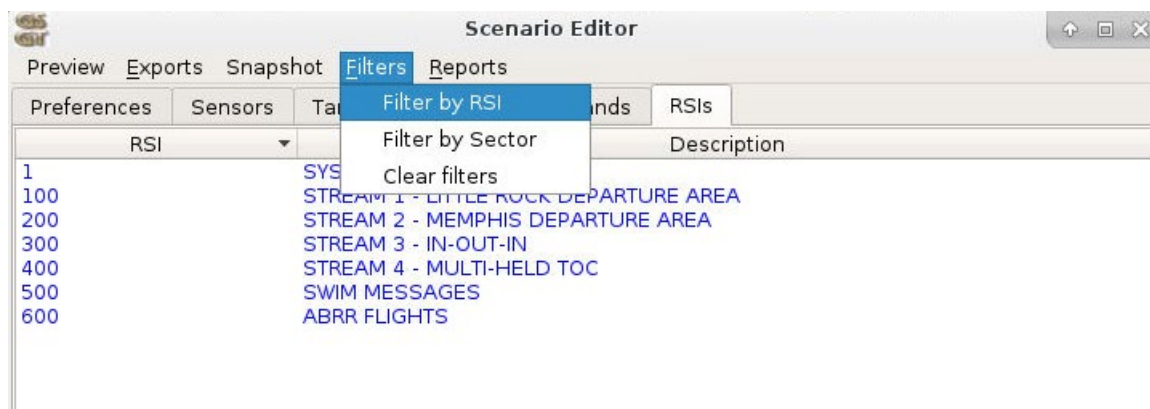


Figure 74. Filtering the Editor

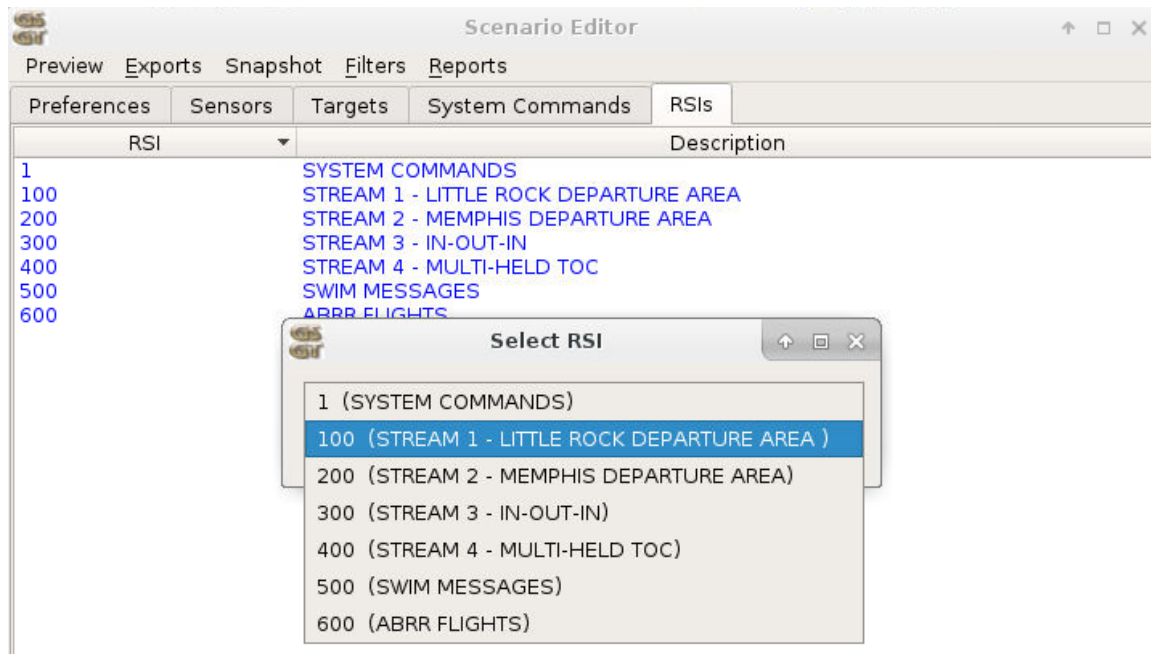


Figure 75. RSI Filter Selection

This filters the scenario editor by the RSI(s) selected.

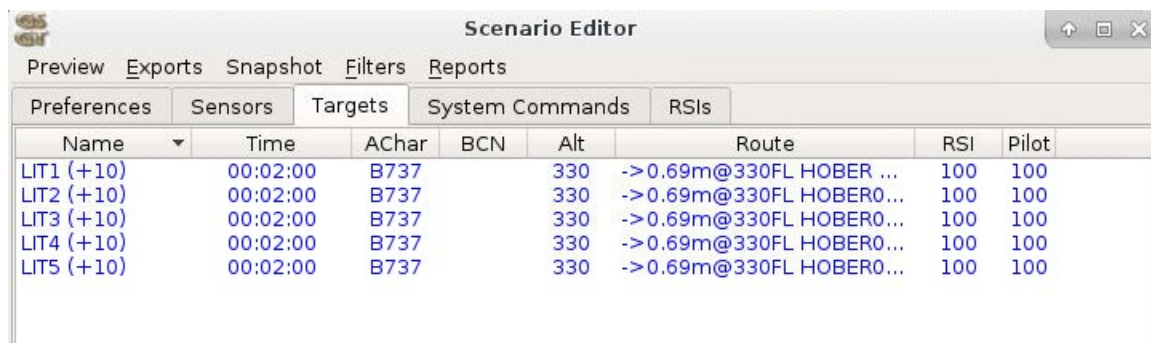


Figure 76. Objects Filtered by RSI

5.4. Adaptation Equipment and DS

GSGT uses equipment devices based on the positions and devices defined in adaptation. Equipment attributes can be viewed but not modified. To expand the subtree contained in a particular type of equipment click on the triangle icon to the left of the item.

5.5. System Commands

Messages defined in the system commands tab are not associated with any Target and can be injected from any supported device. These might be system setup type messages such as combine sector or switch activity. Any message can be scripted, including flight data. The editor supports freehand text editing of messages that allows users to create any valid or invalid message format. Note that flight data messages would have to be scripted without any substitution tokens that reference a particular target, such as AID, CID, GUFI, etc. If target token substitution is needed, the flight data message must be scripted within the Target editor; see section 5.6.1.3.5.

5.5.1. Create and Edit System Command

Certain system commands require or may be formatted with special characters or values that are represented as tokens. These tokens can be entered into the text of a System Command to be substituted to corresponding hex code or values during the scenario export. The primary reason for these tokens is to provide an ASCII character representation for non-printable character values or for values that are unknown until the export or run time.

Table 4. Special Character Tokens

Token	Description
\d	downward-pointing arrow aka arrival arrow
\u	upward-pointing arrow aka departure arrow
\c or	clear weather symbol
\o or '	overcast weather symbol
\xHH	arbitrary value, where HH is a two digit hex value
\p	interfacility messages parity error
\e	EOM token
\l	LRC error


NOTE: Not all tokens may be appropriate in all message types.

NOTE: Tokens are not case sensitive, so for instance ether \c or \C can be used.

NOTE: Entering an extra slash before a character will 'escape' it and not generate a special character. For example, the string "\\c" will be exported as "\c" and not as a clear weather symbol.

5.5.1.1. Message Editor

To create a new System Command, select a message type and appropriate device(s) from the drop downs above the text input area. Enter a message injection time offset and select an RSI, if desired. Type the message contents into the free form text area and press enter or right click and select Save. The new message is added to the message list below the text input area. Some message types will only accept specific formats; for example, rtcsmsg will only accept a message in xml format.

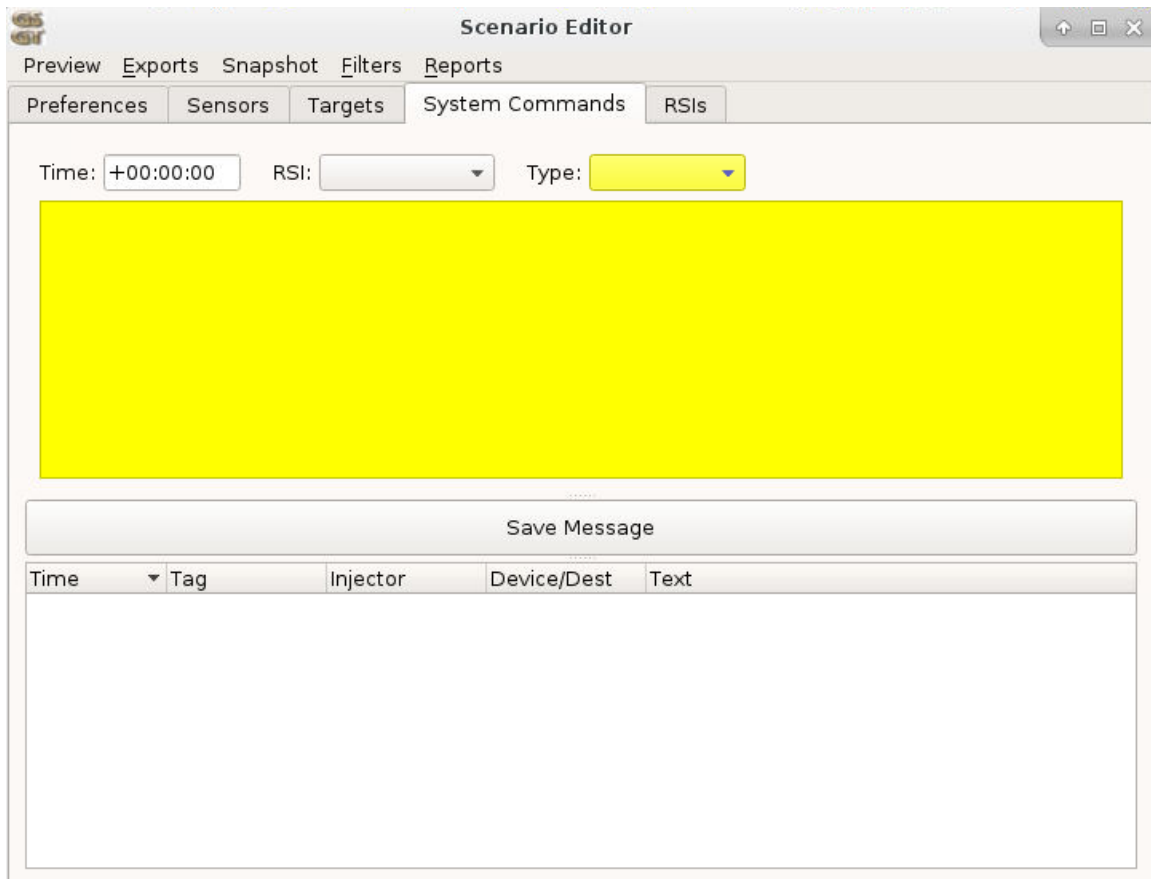

Time	Tag	Injector	Device/Dest	Text

Figure 77. Message Editor

Time

Input box allowing entry of the time the message is to be injected into the scenario.

RSI

Drop down list of RSIs allowing selection of the desired RSI.

Type

Drop down menu allowing selection of the type message to be injected. Depending on the type of message, additional fields will appear for message sources and input devices.

Table 5. Message Types with Facility and Device Fields

Message Type	Facility/Device Field 1	Facility/Device Field 2
ifmsg	Source	Destination
ssrvmsg	ERAM	Device
fdiomsg	ERAM	Device
nadinmsg	Source Address	Destination Address
icaoMsg	Source Fac	Dest Fac
wmscrmsg	Dest ERAM	N/A
tdlsEramMsg	TDLS	N/A
tdlsTfdmMsg	TDLS	N/A
swimmsg	Dest ERAM	TMI
cmsmsg	ERAM	N/A
aigMsg	STARS	N/A
tfmsMsg	N/A	N/A
cpdlcmsg	N/A	N/A
afnmsg	N/A	N/A
rtcsMsg	Airport	N/A
ttpMsg	Airport	N/A
tcwMsg	Facility	Position


Text

Message text. Freeform text area.

5.5.1.1.1. TCW Messages

To create a scripted TCW message, click the Type drop down box and select tcwMsg. Two new options will appear, FAC and Position. Select the appropriate FAC and use the drop down to select a Position. The Position is set to an asterisk (*) symbol as default when generating a configuration file with a report file adaptation. Use the message text box area to enter a scripted TCW message with the available tokens for key substitution.

NOTE: To use scripted TCW messages, the Position needs to match the configuration file position name.

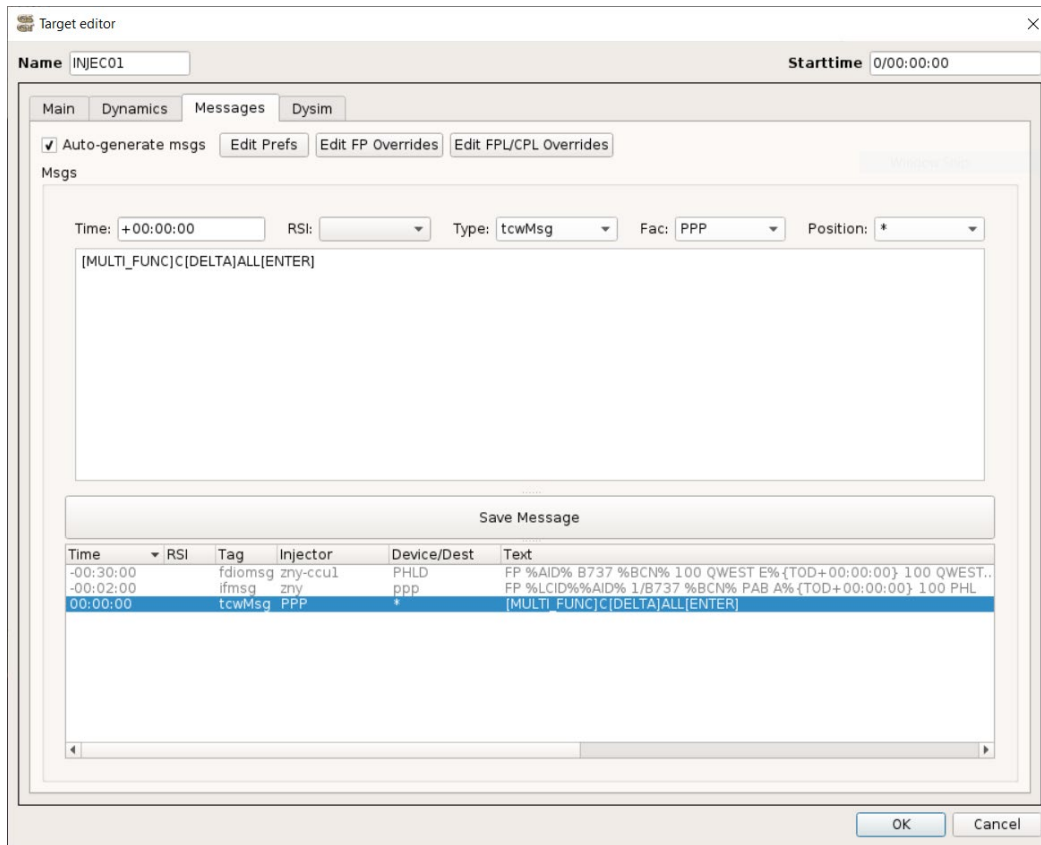

The screenshot shows the 'Target editor' window with the 'Messages' tab selected. The 'Name' field is 'INJEC01' and 'Starttime' is '0/00:00:00'. The 'Auto-generate msgs' checkbox is checked. The 'Msgs' section shows a message configuration with the following fields: Time: +00:00:00, RSI: (empty), Type: tcwMsg, Fac: PPP, Position: *. The message text is '[MULTI_FUNC]C[DELTA]ALL[ENTER]'. Below the message text is a 'Save Message' button and a table showing the message configuration.

Time	RSI	Tag	Injector	Device/Dest	Text
-00:30:00		fdiormsg	zny-ccu1	PHLD	FP %AID% B737 %BCN% 100 QWEST E%(TOD+00:00:00) 100 QWEST..
-00:02:00		ifmsg	zny	PPP	FP %LCID% %AID% 1/B737 %BCN% PAB A%(TOD+00:00:00) 100 PHL
00:00:00		tcwMsg	PPP	*	[MULTI_FUNC]C[DELTA]ALL[ENTER]

Figure 78. TCW Message

NOTE: Dwelling the cursor in the message text area when the message type `tcwMsg` is selected will display the following list of tokens available for key substitution:


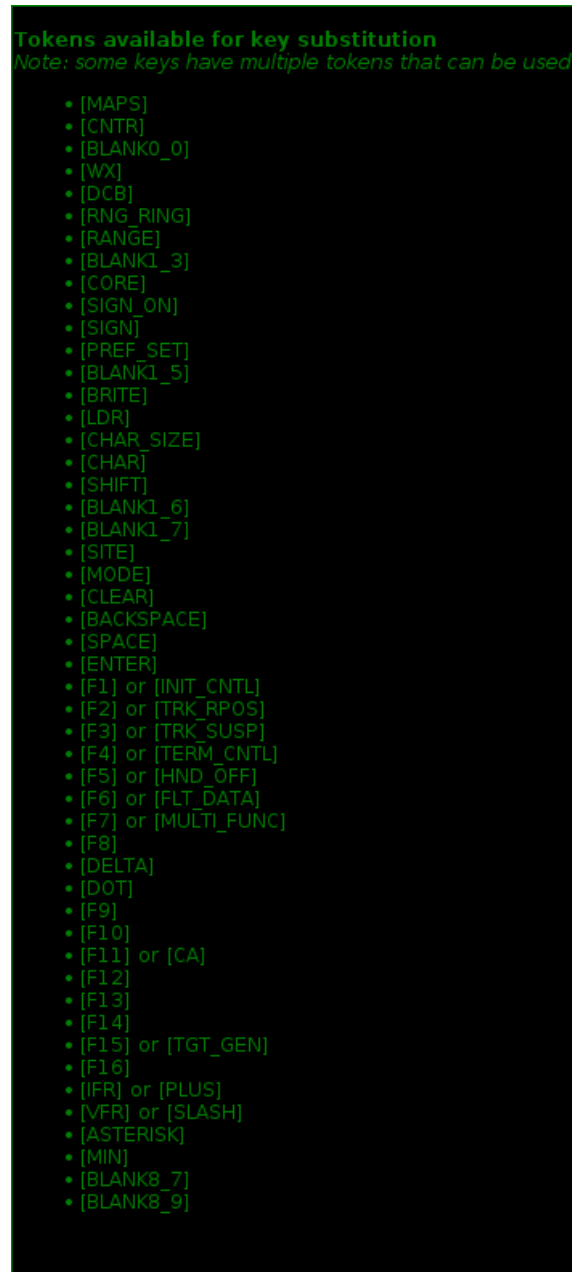


Figure 79. TCW Message Tokens

5.6. Targets

A Target is a representation of a flight with certain characteristics such as aircraft dynamics, equipment, route of flight, and events that control almost every aspect of its identity. The targets also include a set of messages, identical in structure to System Commands, but are associated with that particular target. The messages can be automatically derived based on the characteristics of the target, manually entered or be a combination of both.

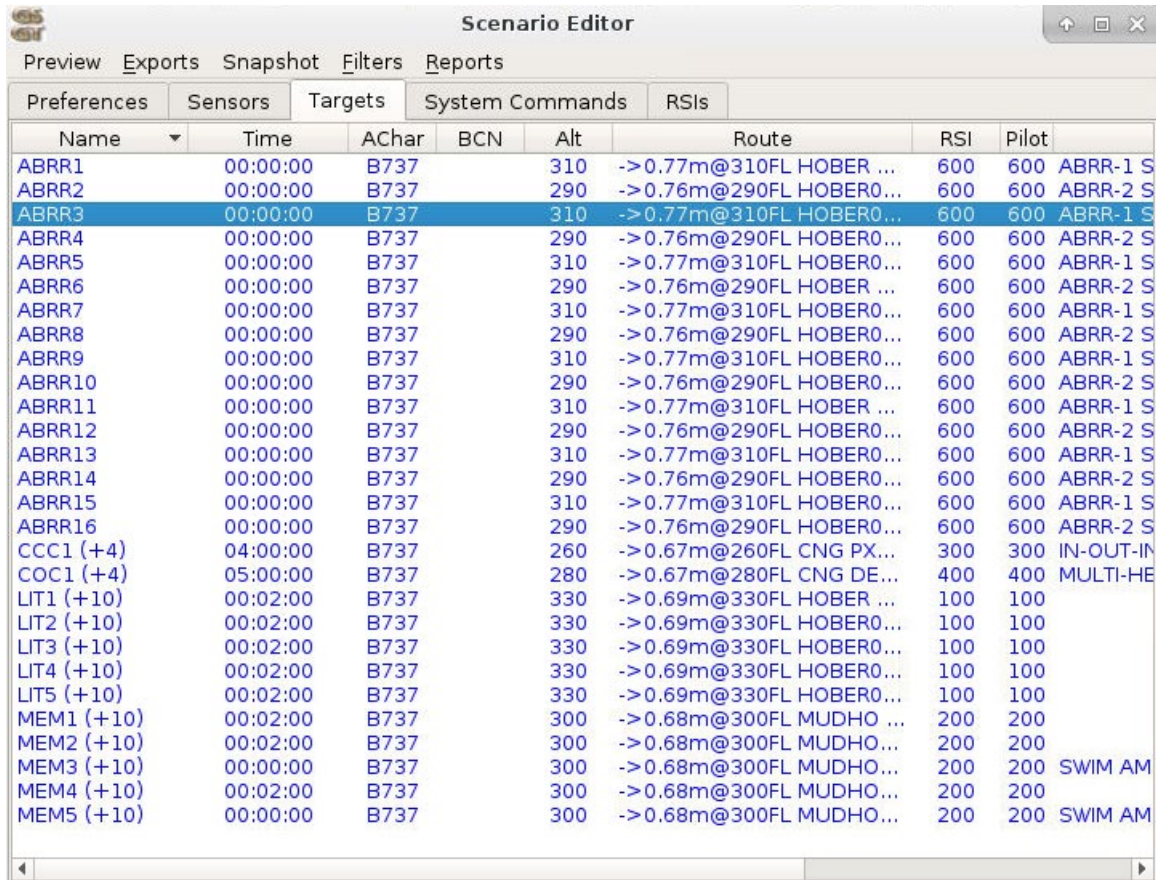

Name	Time	AChar	BCN	Alt	Route	RSI	Pilot
ABRR1	00:00:00	B737		310	-> 0.77m@310FL HOBER ...	600	600 ABRR-1 S
ABRR2	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR3	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR4	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR5	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR6	00:00:00	B737		290	-> 0.76m@290FL HOBER ...	600	600 ABRR-2 S
ABRR7	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR8	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR9	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR10	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR11	00:00:00	B737		310	-> 0.77m@310FL HOBER ...	600	600 ABRR-1 S
ABRR12	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR13	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR14	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR15	00:00:00	B737		310	-> 0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR16	00:00:00	B737		290	-> 0.76m@290FL HOBER0...	600	600 ABRR-2 S
CCC1 (+4)	04:00:00	B737		260	-> 0.67m@260FL CNG PX...	300	300 IN-OUT-IN
COC1 (+4)	05:00:00	B737		280	-> 0.67m@280FL CNG DE...	400	400 MULTI-HE
LIT1 (+10)	00:02:00	B737		330	-> 0.69m@330FL HOBER ...	100	100
LIT2 (+10)	00:02:00	B737		330	-> 0.69m@330FL HOBER0...	100	100
LIT3 (+10)	00:02:00	B737		330	-> 0.69m@330FL HOBER0...	100	100
LIT4 (+10)	00:02:00	B737		330	-> 0.69m@330FL HOBER0...	100	100
LIT5 (+10)	00:02:00	B737		330	-> 0.69m@330FL HOBER0...	100	100
MEM1 (+10)	00:02:00	B737		300	-> 0.68m@300FL MUDHO ...	200	200
MEM2 (+10)	00:02:00	B737		300	-> 0.68m@300FL MUDHO...	200	200
MEM3 (+10)	00:00:00	B737		300	-> 0.68m@300FL MUDHO...	200	200 SWIM AM
MEM4 (+10)	00:02:00	B737		300	-> 0.68m@300FL MUDHO...	200	200
MEM5 (+10)	00:00:00	B737		300	-> 0.68m@300FL MUDHO...	200	200 SWIM AM


Figure 80. Targets Tab

5.6.1. Create and Edit Target

To create a Target, right click on the **Targets** object label in the object list of the Scenario Editor Main Window. Select **New** from the context menu.

5.6.1.1. Target - Main

The general target attributes are located on the Main tab of the Target editor. The attributes describe the target's characteristics such as on-board navigation equipment and transponder types.

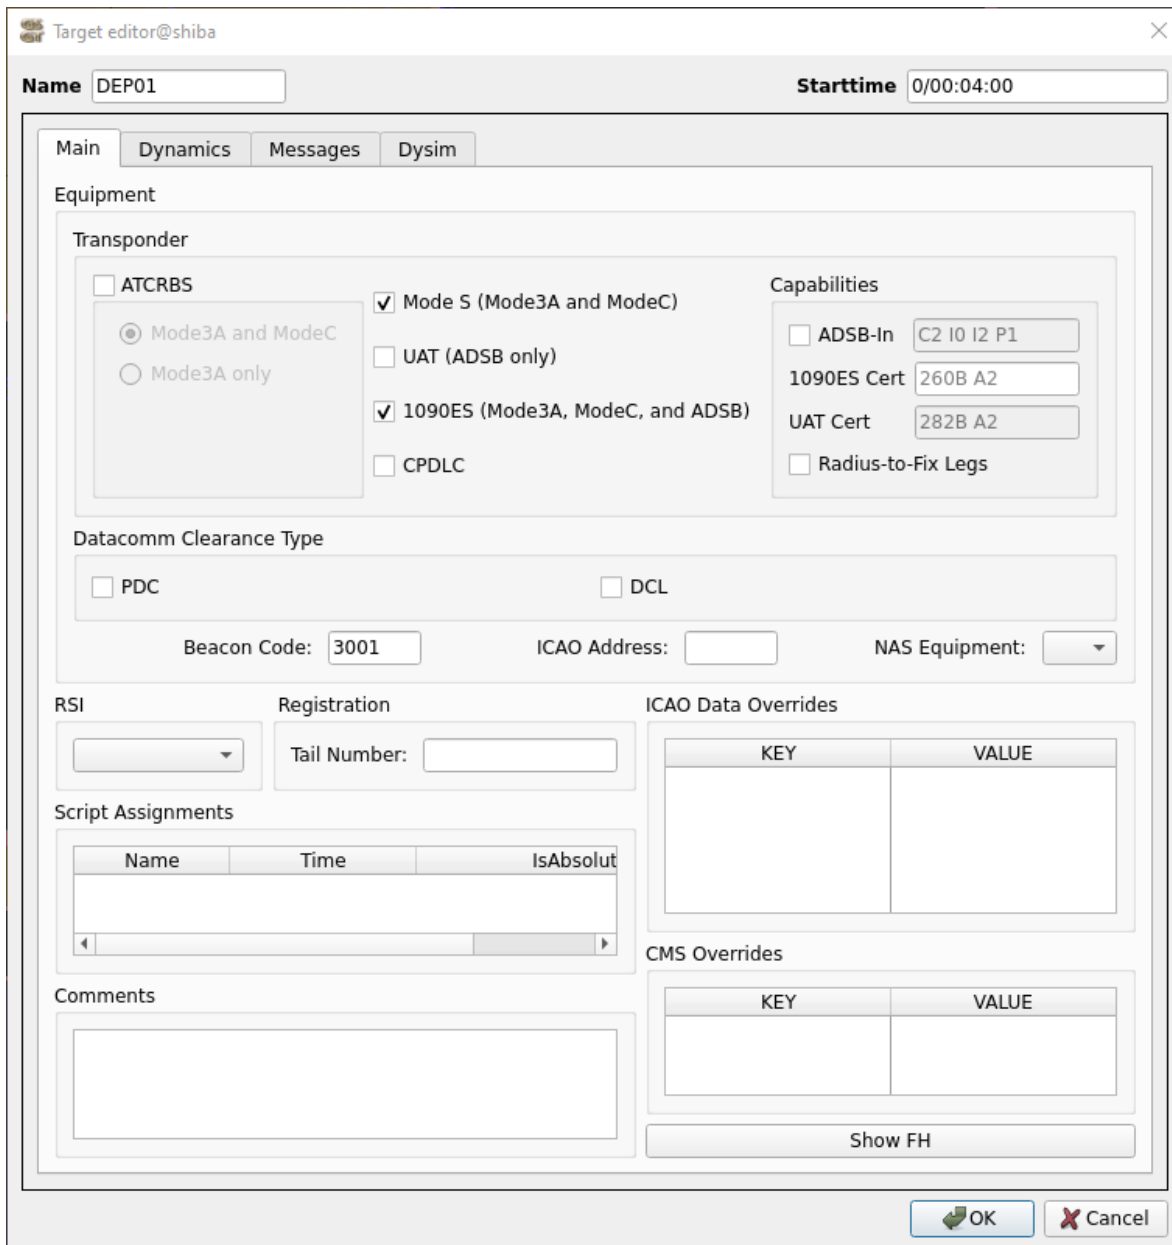

The screenshot shows the 'Target editor@shiba' window with the 'Main' tab selected. The 'Name' field is 'DEP01' and the 'Starttime' is '0/00:04:00'. The 'Equipment' section includes 'Transponder' settings (ATCRBS, Mode S, UAT, 1090ES, CPDLC) and 'Capabilities' (ADSB-In, 1090ES Cert, UAT Cert, Radius-to-Fix Legs). The 'Datacomm Clearance Type' section has 'PDC' and 'DCL' options. The 'Beacon Code' is '3001', 'ICAO Address' is empty, and 'NAS Equipment' is a dropdown. The 'RSI' section has a dropdown. The 'Registration' section has a 'Tail Number' field. The 'ICAO Data Overrides' section has a table with 'KEY' and 'VALUE' columns. The 'Script Assignments' section has a table with 'Name', 'Time', and 'IsAbsolute' columns. The 'Comments' section has a text area. The 'CMS Overrides' section has a table with 'KEY' and 'VALUE' columns. The 'Show FH' button is at the bottom right. The 'OK' and 'Cancel' buttons are at the bottom right.

Figure 81. Target Editor Main Tab

Name

Two to seven alphanumeric characters designating the identity of the flight. The first character must be alphabetic and may be followed by any combination of 1-6 alphanumeric characters. The minimum length is two (one letter and one digit). The minimum length for a letter-only name is three.

Starttime

The time at which the target becomes active. The time is specified in days, hours, minutes, and seconds.

Equipment

Transponder

ATCRBS

Mode3A and Mode C
Mode 3A only

Mode S

Mode3A and ModeC

UAT

ADSB only

1090ES

Mode3A, ModeC, and ADSB

CPDLC

Capabilities

ADSB-In

1090ES Cert

UAT Cert

Radius-to-Fix Legs

Datacomm Clearance Type

PDC

DCL

Beacon code

One to four octal digits designating the beacon code for the aircraft. Values less than four digits

will be left-padded with zeroes to reach a length of four. Supplying a beacon code is optional; GSGT will generate beacon codes for aircraft as needed.

ICAO Address

Six hex digits designating the ICAO address for the aircraft. Supplying an ICAO address is optional; GSGT will generate ICAO address for aircraft as needed.

NAS Equipment

The single-letter equipment id. It is appended to aircraft type in the FP message.

RSI

List of RSI descriptions for this target. Clicking 'Select' will open a scroll down menu allowing you to select the desired RSI.

Registration

Tail Number

Two to seven alphanumeric characters designating the aircraft's tail number. The first character must be alphabetic and may be followed by any combination of 1-6 alphanumeric characters. The minimum length is two (one letter and one digit).

Script definitions

If a Target has a script defined it will run the script at the time set by the user. The start of the script can be relative to the target start (activation) time or it can be triggered by a particular generated message. The script can be a set of common messages that can be applied to multiple targets without having to script each set individually for each target. This is primarily used for DataComm and TFDI Terminal Publication (TTP) message sets.

Comments

Any comments associated with the target. Comments are not displayed during scenario playback.

ICAO Data Overrides

ICAO Data overrides used for generating flight plan messages. New elements can be added by right mouse click, selecting **New Element** and entering the element key name. New Values can be added to an element by double clicking the **Value** field for the element. After creating at least one element right clicking again will give the option to **Delete** the highlighted element.

Some ICAO data is automatically generated in the flight plan message based on other inputs, such as registration and navigation and surveillance equipage. Entries in the ICAO Data Overrides will override the automatically generated values. Neither the element key nor the value is validated for correctness. It is up to the scenario developer to script the appropriate overrides. However, only

valid keys will be incorporated into the generated flight plan message.

The user can dwell the cursor over the ICAO Data Overrides input area to see a tool tip listing the valid key names. Each key also lists the ICAO field that will be updated in a FPL message and the CMS field that will be updated in a FH message.

Name	ICAO	CMS	Example
• EQP	- 10a - 910C	- include 'R' if PBN approved	
• SRV	- 10b - 910D		
• FLR	- 8a - 908A		
• FLT	- 8b - 908B		
• WAK	- 9c - 909C		
• EET	- 18 - 918B	- EET/KZOB1253 KZID1273	
• RIF	- 18 - 918C		
• REG	- 18 - 918D		
• SEL	- 18 - 918E		
• OPR	- 18 - 918F		
• STS	- 18 - 918G		
• TYP	- 18 - 918H		
• PER	- 18 - 918I		
• COM	- 18 - 918J		
• DAT	- 18 - 918K		
• NAV	- 18 - 918L	- NAV/GBAS RNA0.7D1.3 RNPA1E5	
• NAV/RNVAd(d)(.d(d))	- 18 - e.g. RNVA1 generates 0100 for 925A		
• NAV/RNPAd(d)(.d(d))	- 18 - e.g. RNPA1 generates 0100 for 925G		
• DEP	- 18 - 918M		
• DEST	- 18 - 918N		
• ALTN	- 18 - 918O		
• RALT	- 18 - 918P		
• CODE	- 18 - 918Q		
• RACE	- 18 - 918R		
• SUR	- 18 - 918S		
• DLE	- 18 - 918T		
• TALT	- 18 - 918U		
• DOF	- 18 - 918V		
• ORGN	- 18 - 918W		
• PBN	- 18 - 918X	- Up to 8 capability fields of the form Ld; e.g. PBN/O1	

Figure 82. ICAO Data Override Keys

NOTE: There are certain interdependencies between ICAO Data fields. For example, to make a flight eligible for an RNAV route, EQP must include the letter 'R' and PBN must include an 'A', 'B', 'C', or 'D'. For RNP flights, EQP must include the letter 'R' and PBN must include an 'L', 'O', 'S', or 'T'. Also, NAV should include the RNV and/or RNP accuracy for the applicable phase of flight.

CMS Overrides

CMS overrides used for generating FH messages in eramSimMode. New elements can be added by right mouse click, selecting **New Element** and entering the element key name. New Values can be added to an element by double clicking the **Value** field for the element. After creating at least one

element right clicking again will give the option to **Delete** the highlighted element.

Some CMS data is automatically generated in the FH message based on other inputs, such as registration and navigation and surveillance equipage as well as the ICAO Data Overrides. (For example, the RNAV accuracy specified in the ICAO Data NAV field is used to automatically generate the CMS field 925 elements.) Entries in the CMS Overrides will override the automatically generated values. Neither the element key nor the value is validated for correctness. It is up to the scenario developer to script the appropriate overrides. However, only valid keys will be incorporated into the generated messages.

Show FH

The **Show FH** button opens a pop-up window that shows what the current generated FH message would be for the target if it was launched in simDriver configured for eramSimMode.

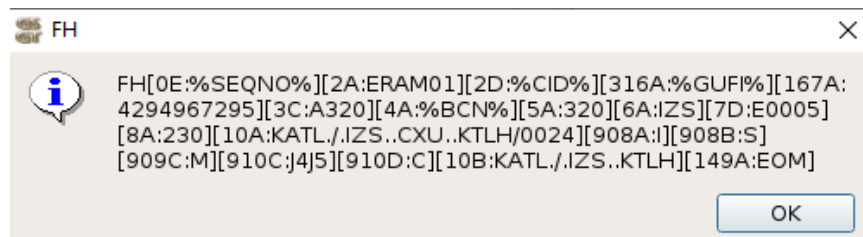


Figure 83. FH Message Preview

5.6.1.2. Target - Dynamics

The Dynamics tab of the Target Editor defines the type of aircraft, its speed and altitude, and the path the target is flying in an airspace. A target's aircraft trajectory can be specified as a route with defined points, such as fixes and airports.

When the first and/or last element on the route is an airport, GSGT can model appropriate departure or arrival from/to an airport, including modeling of airport runways. The runways must be predefined using Runways site definition to be available for inclusion.

Based on the target's route definition, GSGT generates radar and derives appropriate messages such as flight plans and handoffs.

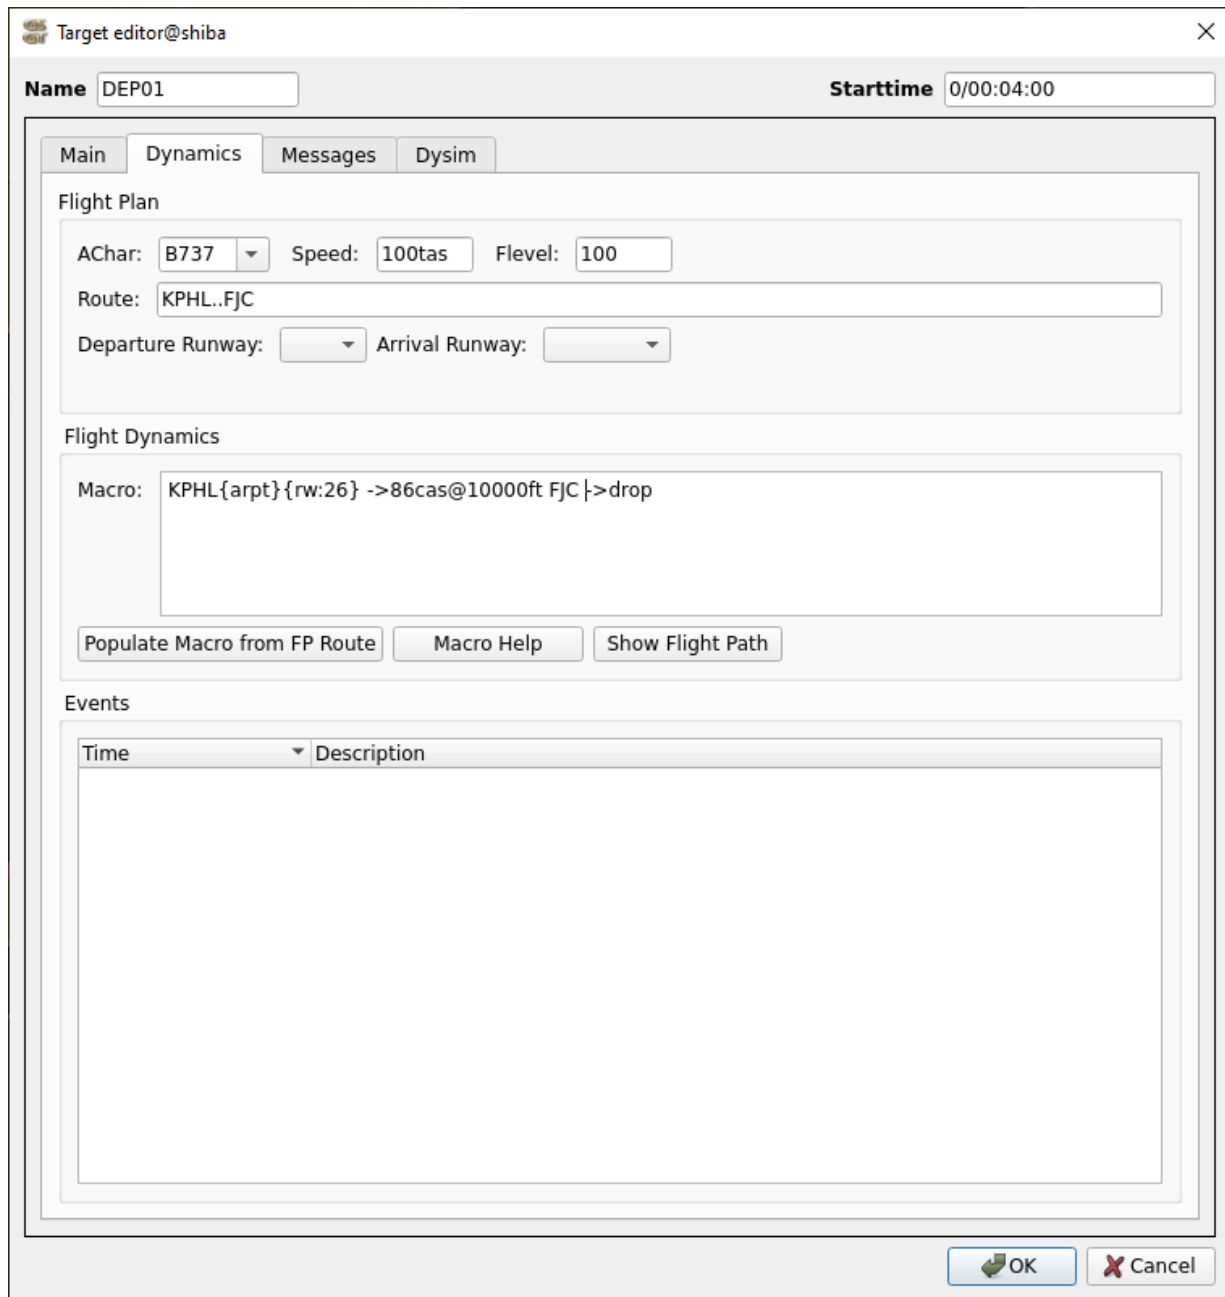


Figure 84. Target Editor Dynamics Tab

Flight Plan

AChar

Drop-down menu allowing the user to select the aircraft characteristics of the target from the adapted aircraft types.

Speed

Whole numbers specifying the aircraft speed in knots followed by the characters 'tas' or 'cas' or Mach speed in decimal format either preceded or followed by 'm'. If only digits are entered, TAS speed is assumed. The speed is not validated for the specified altitude or aircraft performance capabilities.

Flevel

Flight Level. 1-3 numeric characters designating the flight altitude in hundreds of feet.

Route

Text defining the planned flight route of the target. Routes can be made up of airports, fixes, lat/lon points, airways, and more.

Departure Runway

Drop-down menu allowing the user to select an adapted departure runway.

Arrival Runway

Drop-down menu allowing the user to select an adapted arrival runway.

Flight Dynamics

Macro

A text field where the user can change the path of a flight without changing its filed flight plan route.

Populate Macro from FP Route

Upon clicking this will populate the **Macro** text field with commands derived from the **Route**. If any changes are made to the macro, the target will fly as what is written in the macro, versus its filed flight plan.

Show Flight Path

Displays the target's route in the adaptation viewer with a target dynamics information box.

Macro Help

A help box that will give some macro format examples.

The flight route can be entered in two ways, using the point and click feature of GSGT or by manually typing the flight route text in the dialog box. To use the point and click function, click the Route text box, then place the cursor over the desired element such as a fix or an airport and left click the mouse. The element is added to the flight plan and displayed in the Route dialog box. As elements are added to the

flight plan, fixes and airports are highlighted in BLUE, the flight route is outlined in RED between fixes, and segments along airways are outlined in GREEN.

Point and click adds new elements to the end of the flight plan. To add or remove an element in the middle of the route, manually modify the fix text in the flight plan dialog box or place the cursor after the element (before "." or "..") where the additional elements are to be inserted.

NOTE: GSGT does not allow delay times to be typed directly in the route text. To create a delay, users must create a new target Delay Event.

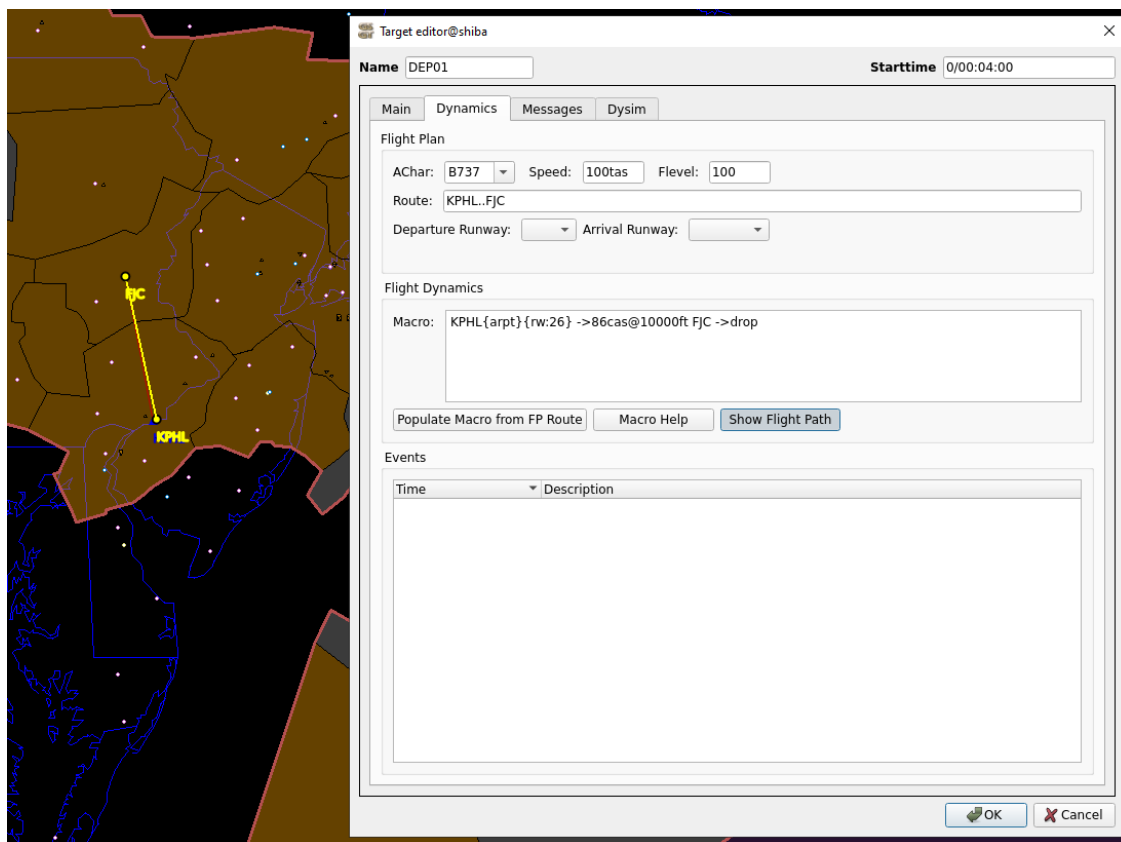


Figure 85. Show Flight Path

Events

List of events that are applied to the target. The list specifies the condition when the event is applied and shortly describes the event. Right click context menu options:

New

Opens the Target Event Editor dialog for a new event.

Edit

Opens an existing target event in Target Event Editor dialog.

Delete

Deletes the currently selected target event(s).

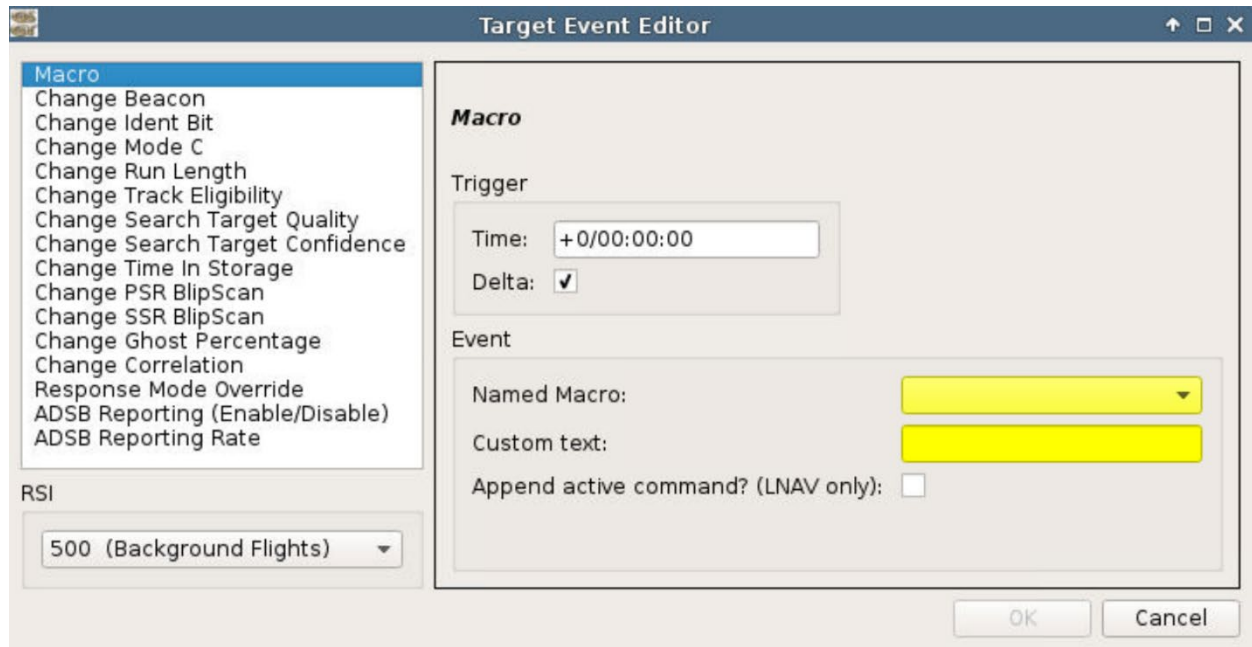


Figure 86. Target Event Editor

Target Events allow users to define a wide range of events that can be applied to a target to perform various tasks or change a target's characteristics. Reference table below describing all available events.

Event Type List

List of available event types that can be defined for the target.

Trigger

Allows user to set the time when the Target Event is performed as an offset of the target start time.

Event

The value(s) that will take effect when the Event is processed. The Drop Target Event does not have a Command value.

Generate Msg

If selected, a message reflecting the changed value will be generated. Only valid for ERAM scenarios and only for certain events such as change Acid, Altitude, Beacon, and Speed.

RSI

If selected, the RSI will be tied to the event for that Target. If that RSI is turned off the event will not trigger.

OK

Closes the dialog and creates the specified Event.

Cancel

Closes the dialog and returns to the Target editor.

Table 6. Target Event Types

Event	Description
Macro	Add a custom macro to be injected.
Change Beacon	Changes target's beacon code with option to change Mode 3A, ADSB or both
Change Ident Bit	Sets ident bit to enabled or disabled
Change Mode C	Sets Mode C to enabled or disabled
Change Run Length	Changes target's run length to a specific value
Change Track Eligibility	Changes target's track eligibility to a specific value
Change Search Target Quality	Changes target's search target quality to a specific value
Change Search Target Confidence	Changes target's search target confidence to a specific value
Change Time In Storage	Changes target's time in storage to a specific value
Change PSR Blip Scan	Changes target's primary search return (PSR) to a specific percentage value. When using ATCoach engine, PSR Blip Scan will only apply if its value is set to either 0 or 100.
Change SSR Blip Scan	Changes target's secondary search return (SSR) to a specific percentage value. When using ATCoach engine, SSR Blip Scan will only apply if its value is set to either 0 or 100.
Change Ghost Percentage	Changes target's ghost percentage to a specific percentage value (HCS version only)

Event	Description
Change Correlation	Changes target's correlation
Response Mode Override	Overrides NAS responses such as DR or DX, or NAM responses such as LRM
ADSB Reporting (Enable/Disable)	Enables or Disabled ADSB transponder reporting
ADSB Reporting Rate	Sets ADSB target reporting rate

Custom macro commands can also be scripted as target events. The table below lists the types of macro commands that are available.

Table 7. Custom Macro Commands

Command	Description
VNAV Commands	
->dddcas	Change the calibrated air speed of the target to the value specified.
->dddcas~dddkt/min	Change the calibrated air speed of the target to the value specified at a given rate of change.
->dddtas	Change the true air speed of the target to the value specified.
->dddtas~dddkt/min	Change the true air speed of the target to the value specified at a given rate of change.
->.ddm	Change the mach speed of the target to the value specified.
->.ddm~dddkt/min	Change the mach speed of the target to the value specified at a given rate of change.
->dddcas@ddddddft or ->dddtas@ddddddft or ->.ddm@ddddddft	Change the speed and altitude of the target to the values specified.
->(+ -)dddcas	Change the speed of the target by the specified amount.

->ddddft	Change the altitude of the target to the value specified in feet.
->ddddft~dddd	Change the altitude of the target to the value specified in feet at a given rate of change (in feet per minute).
->(+\-)ddddft	Change the altitude of the target by the specified amount.
LNAV Commands	
FIXNAME FIXNAME{attributes} Attributes: {arpt} {rw:dd} or {rw:ddA} {ils:dd} or {ils:ddA} {ddddft} {<ddddft} {>ddddft} {ddddftBddddft} {dddcas}, {dddtas}, or {.ddm} {<dddcas}, {<dddtas}, or {<.ddm} {>dddcas}, {>dddtas}, or {>.ddm} {rf}{dddmag}{turnDir:A}	Proceed to the fix. Proceed to the fix and obey additional instructions or restrictions specified as attributes of the fix. Some attributes (such as speed and altitude restrictions) may be combined for the same fix. On the first fix, auto-apply departure logic; on the last fix, auto-apply top of descent (TOD) restriction. Not valid on other fixes. In conjunction with {arpt} on departures, use a defined departure procedure for the specified runway. In conjunction with {arpt} on arrivals, perform an ILS approach to the specified runway. This disables TOD processing. Cross the fix at the specified restriction altitude. Cross the fix at or below the specified restriction altitude. Cross the fix at or above the specified restriction altitude. Cross the fix between the specified restriction altitudes. Order is of the restriction altitudes is irrelevant. Cross the fix at the specified restriction speed. Cross the fix at or below the specified restriction speed. Cross the fix at or above the specified restriction speed. Perform a radius to fix turn (in the specified turn direction), exiting the fix at the specified heading.

->dddmag	Change the heading of the target to the value specified in degrees from magnetic North.
->dddmag~ddddeg/sec	Change the heading of the target to the value specified in degrees from magnetic North at a given rate of change.
->dddtrue	Change the heading of the target to the value specified in degrees from true North.
->dddtrue~ddddeg/sec	Change the heading of the target to the value specified in degrees from true North at a given rate of change.
->(+)~ddddeg	Change the heading of the target by the specified amount.
->hold	Hold indefinitely with right hand turns and 1 minute leg lengths.
->hold{legTime:dmin}	Hold indefinitely with right hand turns and leg lengths as specified in minutes.
->hold{turnDir:A}	Hold indefinitely with 1 minute leg lengths and left or right hand turns as specified.
->hold{duration:dmin}	Hold with right hand turns and 1 minute leg lengths for the specified amount of time. Once the duration time has expired, complete the current turn and proceed with the remaining route.
->hold{count:d}	Hold with right hand turns and 1 minute leg lengths for the specified number of laps.
->drop	Drop the target.
Mode3A and Mode C Commands	
->Boooo	Set or change the beacon code.
->BE	Enable the Mode 3A beacon.
->BD	Disable the Mode 3A beacon.
->MCE	Enable Mode C.
->MCD	Disable Mode C.

->RADARE	Enable radar detection.
->RADARD	Disable radar detection.
->ADSBE	Enable ADSB detection.
->ADSBD	Disable ADSB detection.
Target Attributes	
->set:autoLogon=d	Set the autoLogon attribute to 0, off, or 1, on.
->set:cpdlcResponseMode=<mode>	Set the cpdlcResponseMode attribute to manual or auto.
->set:cpdlcResponseDelay=ddd	Set the cpdlcResponseDelay attribute to the specified number of seconds.
->set:script=name	Set the script attribute to the specified script name.
->set:tdls=name	Set the tdls attribute to the specified TDLS name.
->set:disableTracker=d	Set the disableTracker attribute to 1, disabled, or 0, enabled.
->set:freeText=text	Set the freeText attribute to the specified text. This appears in the datablock of the target.
->clear:<attribute>	Clear the target attribute specified.

NOTE: *A indicates an alphabetic character, d indicates decimal digits, o indicates octal digits, and ~ indicates a rate of change.*

5.6.1.3. Target - Messages

The Messages tab of the Target Dialog lists all non-radar messages associated with the target. The messages can be auto-generated (auto-derived) based on the route of the target or manually created. Messages are defaulted to auto-generate but can be turned off when **Auto-generate msgs** is deselected.

When target is set to auto-generate messages, GSGT will generate all appropriate non-radar messages such as flight plan, start tracking, and handoff control of the flight between controllers and/or facilities as needed.

Additionally, parameters controlling the creation of auto-generated messages can be set in the scenario Preferences or Target Preferences.

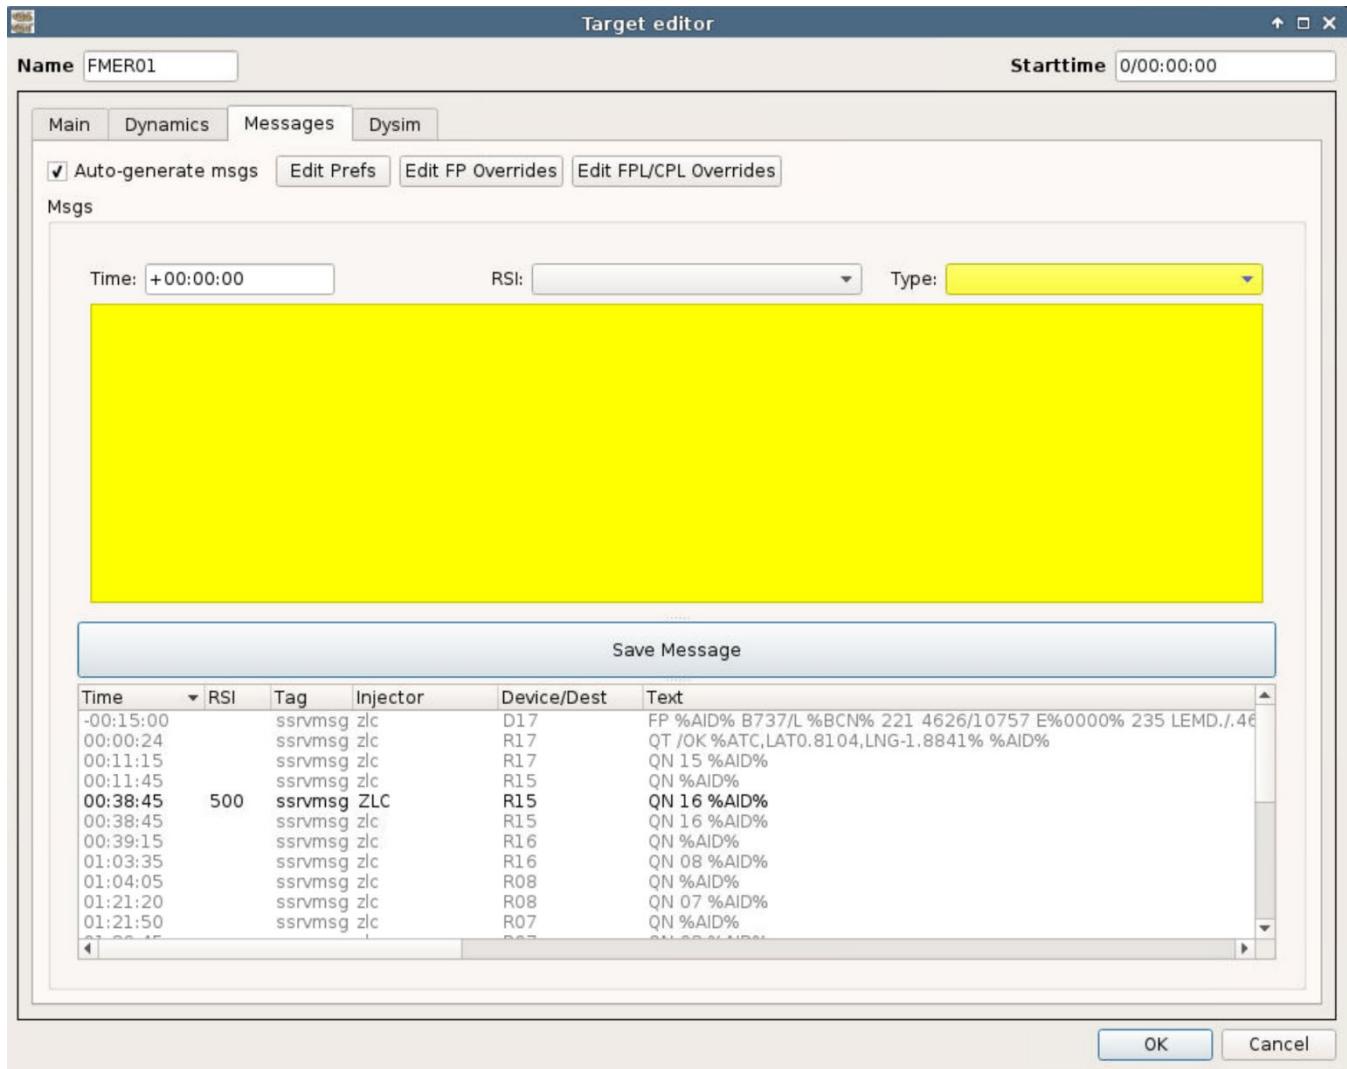


Figure 87. Target Editor Messages Tab

Table 8. Non-radar Message Color Coding

Color	Description
GRAY	auto-generated messages, cannot be edited unless frozen
BLACK	frozen messages

NOTE: Frozen messages are always associated with the target and are not automatically updated as target characteristics are changed, except for when replicating and changing name and timing of the target. Auto-generated messages on the other hand, are automatically regenerated on every change to the target.

NOTE: Once a target enters a 'live' sector, derived messages are no longer generated.

Auto-generate msgs

Enables auto generation of messages for the target.

Edit Prefs

Set target specific preferences for auto-generated messages.

Edit FP Overrides

Sets override values for auto-generated FP messages.

Edit FPL/CPL Overrides

Sets override values for auto-generated FPL/CPL messages.

Msgs

List of non-radar messages associated with the target. Clicking on the 'Time' header will sort the messages in time order. Clicking on 'Device/Dest', 'Injector', or 'Text' will sort appropriate column in alphanumeric order. Clicking on any of these headers twice will reverse the order of the sort.

Double click to edit a frozen message.

Right mouse click context menu options:

Delete

Removes selected message(s) from the list.

Replicate

Opens the Replication dialog, which provides the ability to produce copies of the selected message(s) from the list.

5.6.1.3.1.Auto Deriving Target Messages

When the **Auto-generate msgs** box is checked, GSGT calculates target positions along its entire route and derives appropriate non-radar messages, and then populates the messages list. In order to accomplish this, GSGT runs the simulation engine.

When the **Auto-generate msgs** box is unchecked while there are any derived messages in the list, a dialog box is displayed to confirm whether the derived messages should be saved as frozen messages or removed.


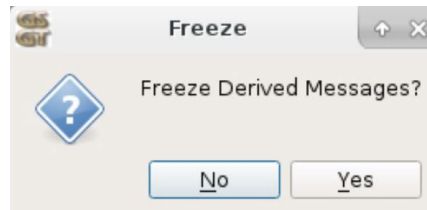


Figure 88. Freeze Derived Messages

5.6.1.3.2.Edit Prefs

Target Preferences override the scenario preferences on a per target basis. To enable override of any particular preference, select and check that preference. When a parameter is checked, its value will be applied to this target only. When unchecked, the general scenario Preference value will apply.

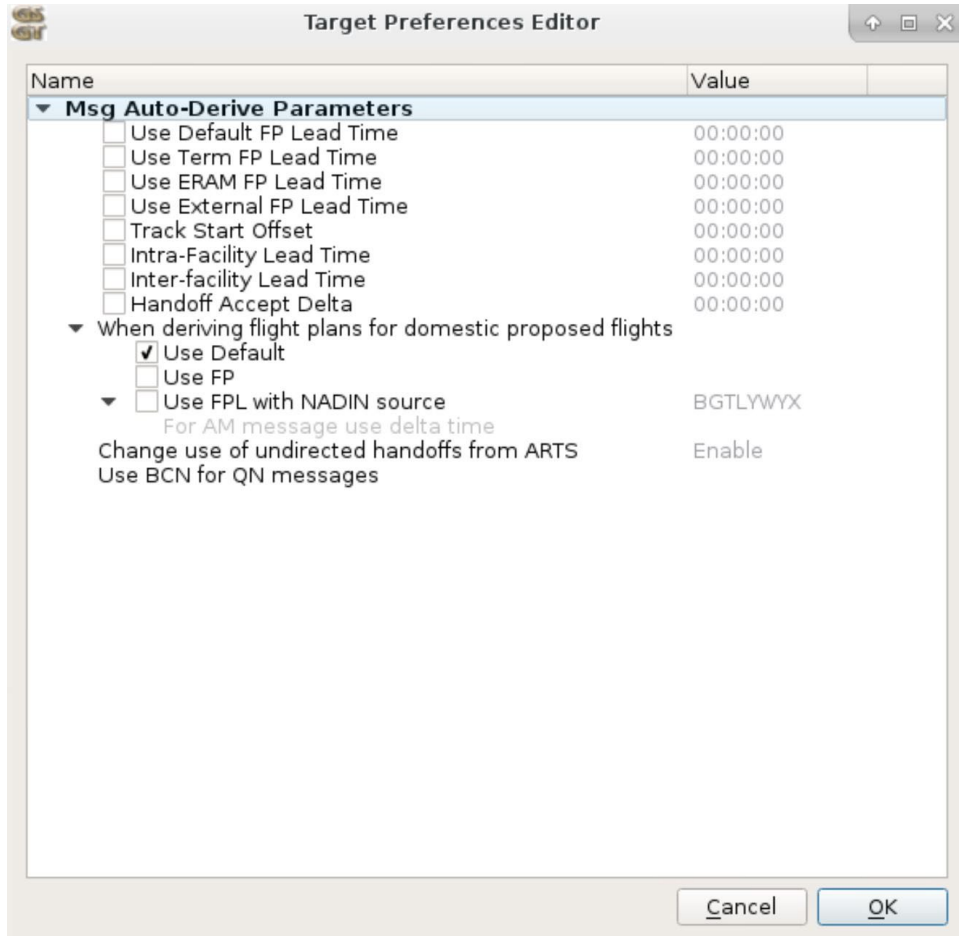

The image shows a 'Target Preferences Editor' dialog box with a table of settings. The table has two columns: 'Name' and 'Value'. The settings are organized into a tree structure under the heading 'Msg Auto-Derive Parameters'.

Name	Value
▼ Msg Auto-Derive Parameters	
☐ Use Default FP Lead Time	00:00:00
☐ Use Term FP Lead Time	00:00:00
☐ Use ERAM FP Lead Time	00:00:00
☐ Use External FP Lead Time	00:00:00
☐ Track Start Offset	00:00:00
☐ Intra-Facility Lead Time	00:00:00
☐ Inter-facility Lead Time	00:00:00
☐ Handoff Accept Delta	00:00:00
▼ When deriving flight plans for domestic proposed flights	
☒ Use Default	
☐ Use FP	
▼ ☐ Use FPL with NADIN source	BGTLYWYX
For AM message use delta time	
Change use of undirected handoffs from ARTS	Enable
Use BCN for QN messages	

At the bottom right of the dialog are 'Cancel' and 'OK' buttons.

Figure 89. Target Specific Preferences

Parameters in the Target Preferences behave exactly the same as in the scenario Preferences with an exception that target preferences are applied only per target basis. See section 5.1.1 details each preference option.

The section for deriving flight plans for domestic proposed flights is used to override the scenario preferences to force generation of FP or FPL.

Use Default

Uses default setting to generate FP or FPL according to scenario preference.

Use FP

Forces generation of FP regardless of scenario preference

Use FPL with NADIN source

Forces generation of FPL from specified NADIN device regardless of scenario preference. Additionally, in some situations AM messages are auto-derived from source device and with delta time as specified.

When any of the parameters in the Target Preferences Editor are changed from the default, the 'Edit Prefs' button will show an attention icon indicating that values are changed, as illustrated below.


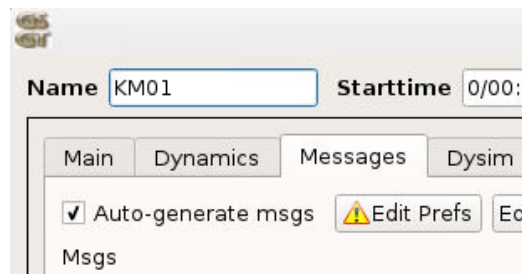


Figure 90. Edit Prefs Attention Icon

5.6.1.3.3.FP Overrides

The parameters in the FP Overrides Editor dialog override values in derived FP messages for this target only. When value is cleared, the default value in derived FP message is restored.

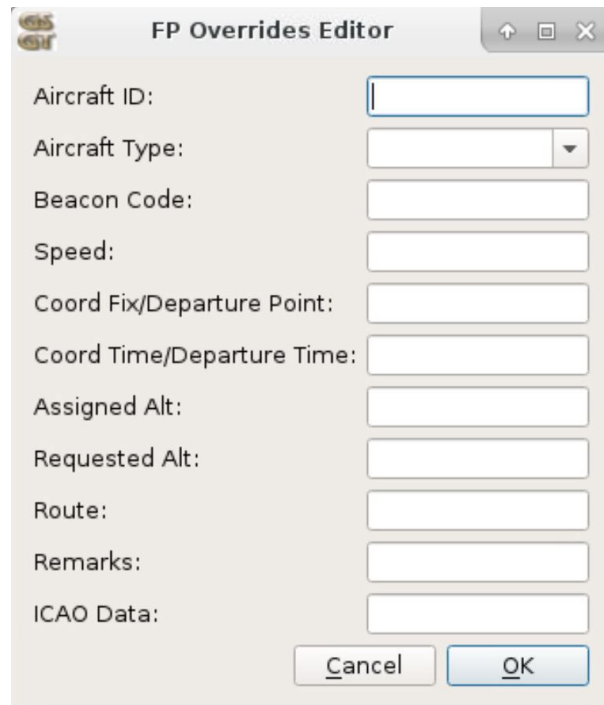


The image shows a dialog box titled "FP Overrides Editor". It contains several input fields for overriding flight plan parameters:

- Aircraft ID: [Text input field]
- Aircraft Type: [Dropdown menu]
- Beacon Code: [Text input field]
- Speed: [Text input field]
- Coord Fix/Departure Point: [Text input field]
- Coord Time/Departure Time: [Text input field]
- Assigned Alt: [Text input field]
- Requested Alt: [Text input field]
- Route: [Text input field]
- Remarks: [Text input field]
- ICAO Data: [Text input field]

At the bottom right, there are "Cancel" and "OK" buttons.

Figure 91. Flight Plan Override Editor

When any of the parameters in the FP Overrides Editor are set to be overwritten, the 'Edit FP Overrides' button will show an attention icon indicating that values are overridden, as illustrated below.

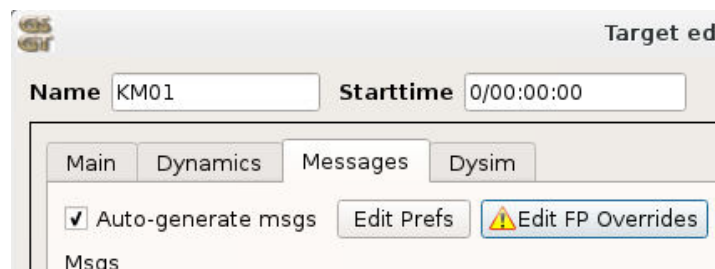


The image shows a "Target edit" dialog box. It has fields for "Name" (KM01) and "Starttime" (0/00:00:00). Below these are tabs for "Main", "Dynamics", "Messages", and "Dysim". Under the "Messages" tab, there is a checked checkbox for "Auto-generate msgs", an "Edit Prefs" button, and an "Edit FP Overrides" button. The "Edit FP Overrides" button has a yellow warning triangle icon next to it, indicating that values are overridden.

Figure 92. Edit FP Overrides Attention Icon

5.6.1.3.4.FPL/CPL Overrides

The parameters in the FPL/CPL Overrides Editor dialog override values in derived FPL/CPL messages for this target only. When value is cleared, the default value in derived FPL/CPL message is restored.

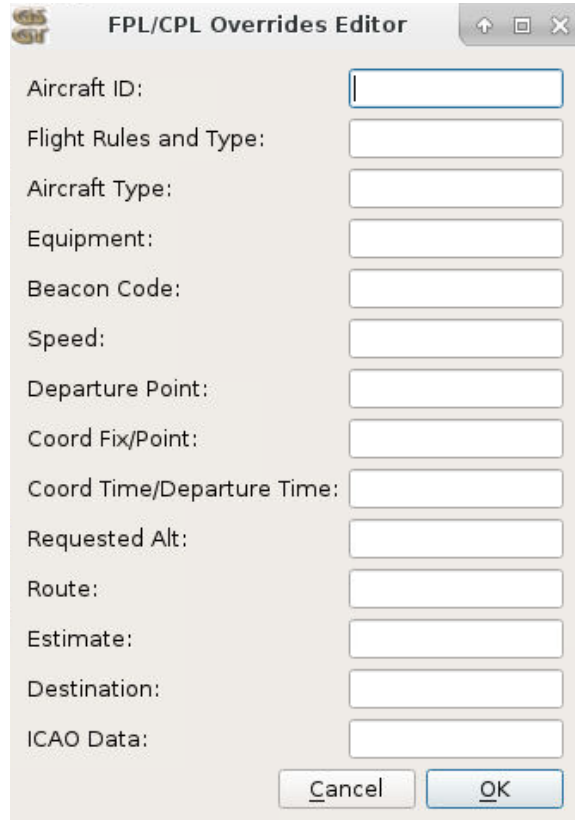


The image shows a dialog box titled "FPL/CPL Overrides Editor". It contains a list of parameters, each with a corresponding text input field:

- Aircraft ID:
- Flight Rules and Type:
- Aircraft Type:
- Equipment:
- Beacon Code:
- Speed:
- Departure Point:
- Coord Fix/Point:
- Coord Time/Departure Time:
- Requested Alt:
- Route:
- Estimate:
- Destination:
- ICAO Data:

At the bottom right of the dialog are two buttons: "Cancel" and "OK".

Figure 93. ICAO Flight Plan Overrides Editor

When any of the parameters in the FP Overrides Editor are set to be overwritten, the 'Edit FPL/CPL Overrides' button will show an attention icon indicating that values are overridden, as illustrated below.

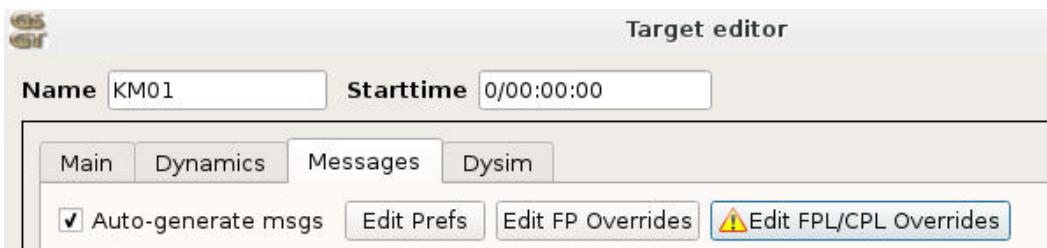

The image shows a "Target editor" dialog box. At the top, it has fields for "Name" (containing "KM01") and "Starttime" (containing "0/00:00:00"). Below these are four tabs: "Main", "Dynamics", "Messages", and "Dysim". Under the "Messages" tab, there is a checkbox labeled "Auto-generate msgs" which is checked. To the right of this checkbox are three buttons: "Edit Prefs", "Edit FP Overrides", and "Edit FPL/CPL Overrides". The "Edit FPL/CPL Overrides" button has a yellow warning triangle icon next to it, indicating that values are overridden.

Figure 94. Attention Icon

5.6.1.3.5. Manually Creating Messages

Creating non-radar messages for a target works identically as for System Commands with exception that messages are associated with the Target instead of being independent. The same set of message editors is used to edit the messages, which are automatically determined for appropriate type of message.

To create a new target message, select a message type and appropriate device(s) from the drop downs above the text input area. Enter a message injection time offset and select an RSI, if desired. Type the message contents into the free form text area and press enter or the 'Save Message' button. The new message is added to the message list below the text input area. Press 'OK' to update the target. Some message types will only accept specific formats; for example rtcsmsg will only accept a message in xml format.

Flight data messages scripted within the Target editor may include substitution tokens for target identification fields such as AID, CID, GUFi, etc. Upon execution, these tokens will be replaced with the appropriate values for the target.

Messages that are auto-derived cannot be edited until **Auto-generate msgs** is deselected. If the **Auto-generate msgs** is selected after being deselected and the original generated messages were frozen, the messages will be automatically re-derived and in essence making a duplicate message.

NOTE: Changes made in the Flight Plan Editor do NOT affect the target attributes set in the Target Attributes Editor.

5.6.1.3.6. Validating Messages (RTCS & TTP)

Manually created RTCS and TTP messages can be validated against the current schema. After creating and saving the message, right click and select Validate <message type>

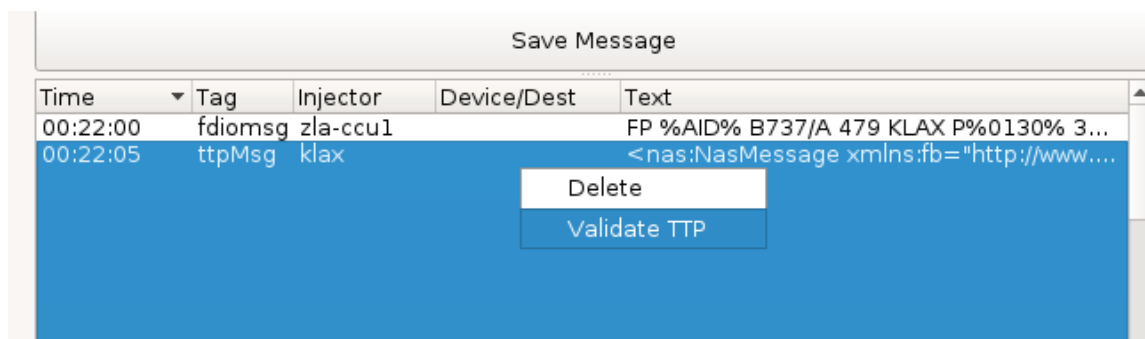


Figure 95. RTCS and TTP Message Validation

A popup box will appear confirming the messages validation or detailing why the message failed validation.

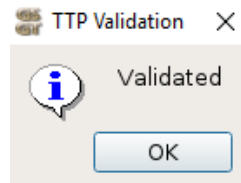


Figure 96. Validation Successful

5.6.1.4. Target Dysim Definitions

The Dysim tab of the Target editor provides ability to change engine specific options and define Pre-Programmed Events and Pilot Prompts. This tab is labeled Dysim when running with JVN simulation engine.

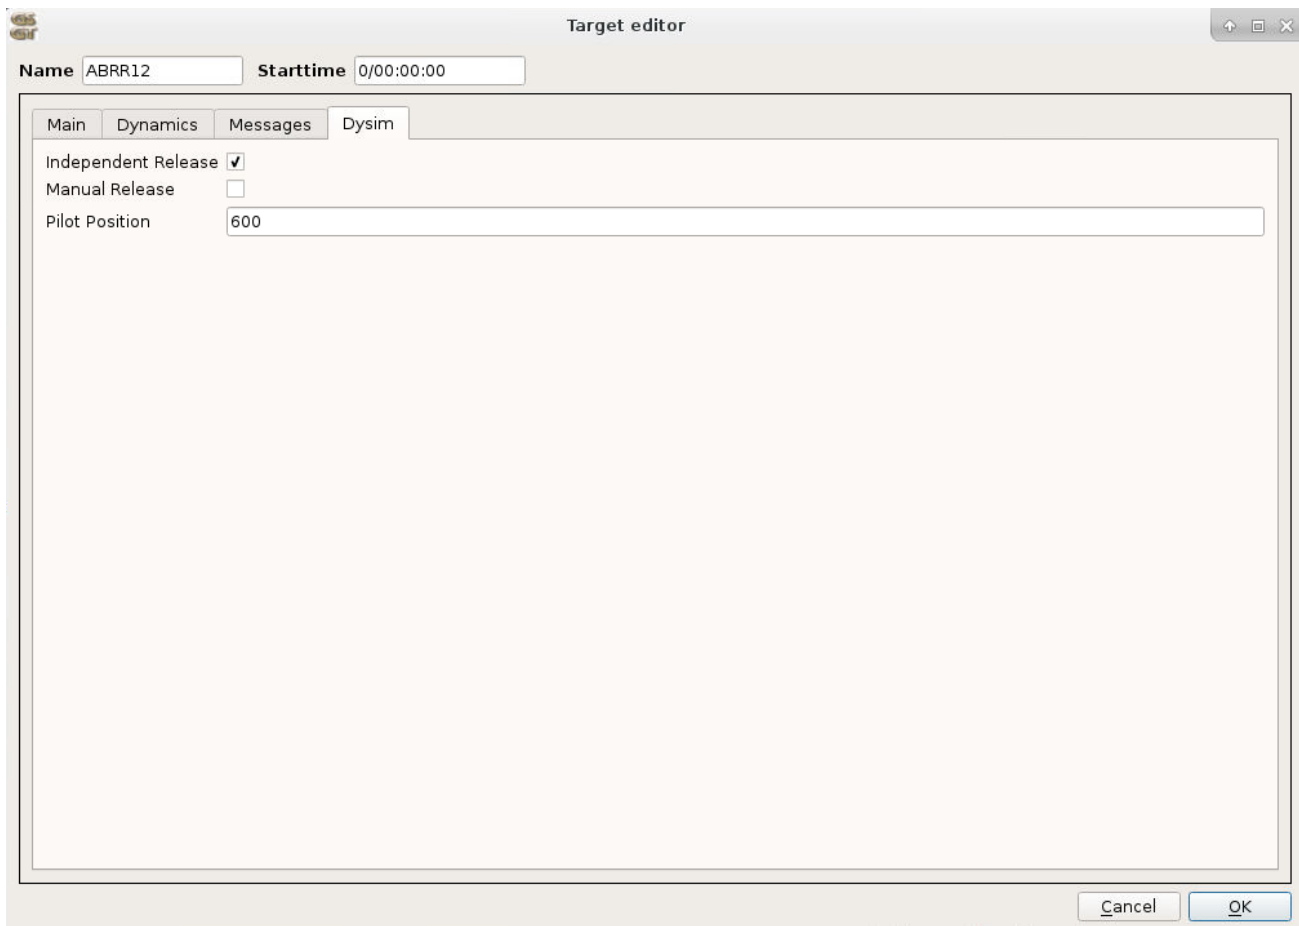


Figure 97. Target Editor Dysim Tab

Independent Release

Engine will not generate the target at the start time. It needs to be released from pilot position. The flight will be in the scenario but no flight data messages will inject nor will the target start until the user manually injects them.

Manual Release

Engine will generate the target's flight data messages but will not release the target at the start time.

Pilot Position

Pseudo Pilot assigned to the target (optional) (ERAM version only).

5.6.2. Target List Context Menu

Right clicking on selected target(s) in the object tree of the Scenario Editor Main Window opens a context menu with certain actions such as Replicate and Filter by AID.

ABRR700	00:00:00	B737	350	KLAX./,3724/11257..BCE..C...	500	500
ABRR701	00:00:00	B737	370	KMSP./,4642/10144..DIK..Hi...	500	500
ABRR702	00:00:00	B737	390	KATL./,3707/10507..ALS..H...	500	500
ABRR703	00:00:00	B737	410	KDFW./,3729/10137..DRAW...	500	500
ABRR704	00:00:00	B737	430	KPDJ./,4258/11447..BYI..EF...	500	500
ABRR800 (+9)	00:00:00	B737	300	CYUL./,4648/09335..FAR..K...	500	500
ADSB100 (+24)	00:00:00			KDAL./,3624/10730..ILC..KN...	300	
ASQ3946	00:00:00			KSMF./,4049/11925..PRNC...	500	500
ASQ4288	00:00:00			KMCO./,3413/08958..VLUST...	500	500
DAL923	07:13:00			KDWA./,SAC..HNW..ILC..DRO...	500	500
DAL2851	00:00:00			KRAP./,4134/10838..MLF..K...	500	500
DC334 (+19)	00:00:00			EGLL./,4527/11516..REO..F...	500	500
DNN01 (+24)	00:00:00			KSFO./,3842/11710..KU54...	500	500
EDV3910	00:05:00			KNUW./,NUW126016..ELN....	500	500
ENY3482	00:00:00			KDEN./,4328/11020..DBS....	500	500
ENY3616	02:11:00			KAFW./,FTI102046..FTI1020...	500	500
FARK500 (+30)	00:00:00			KSNA./,3757/11329..MLF..B...	500	500
FAVP1	00:00:00			KOAK./,3830/11629..MLF..H...	500	500
FDX860	00:51:00			KSMF./,RVRCT3..MACUS.Q124...	500	500
FMER01 (+80)	00:00:00			LEMD./,4626/10757..BIL..K...	500	500
FMT01 (+80)	00:00:00	B737	300	KAD./,4502/00445..BET..K...	500	500

Figure 98. Target List Context Menu

New

Display the Target Editor to create a new Target.

Delete

Delete the selected target(s).

Show Flight Path

Display the target's route in the adaptation viewer with a target dynamics information box for selected Targets.

Replicate

Opens the Replication dialog, which provides the ability to produce copies of the selected target.

Clear Replication(s)

Clears all non-frozen replications, leaving only the original Target.

Selection Count

Displays how many Targets are currently selected.

Assign RSI

Assign the selected Targets the given RSI.

Filter by AID

Filters the Editor with only the selected Target(s).

Deselect All

Deselects each selected target.

5.6.3. Target Conflict Message

Any modification to the target's beacon code that results in a conflict is reported and must be confirmed by the user.

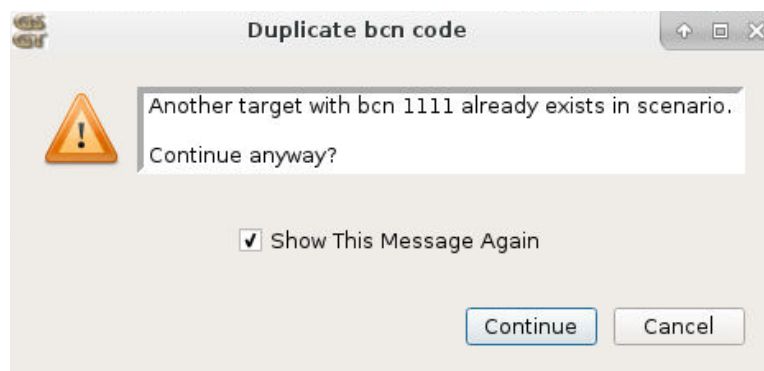


Figure 99. Target Conflict Warning

Continue

Saves the target with a duplicate beacon code.

Cancel

Closes the dialog and returns to the Target editor without applying the changes.

5.7. Script Definitions

Scenario developers can create sets of messages such as DataComm logon scripts or TTP flight updates. The DataComm logon scripts can be edited using the Script Definitions tab of the Scenario Editor. However, the XML formatted TTP messages must be manually edited with a text editor such as **vi**. The script can be a set of common messages that can be applied to multiple targets without having to script each set individually for each target. If a Target has a script defined it will run the script at the time set by the user. The start of the script can be relative to the target start (activation) time or it can be triggered by a particular generated message.

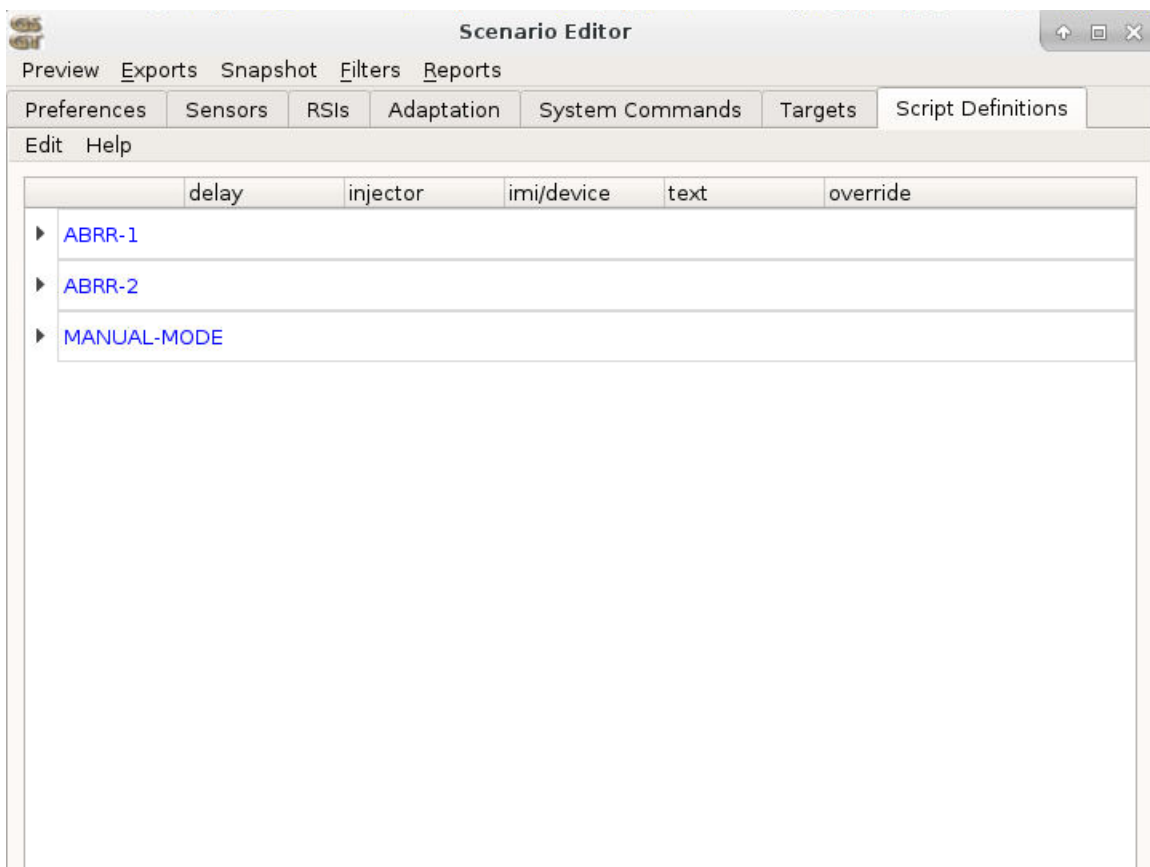


Figure 100. Script Definitions Tab

6. Preview

The Preview function provides a dry-run simulation capability in GSGT where users can visually examine targets defined in the scenario in a time-based environment. Preview simulates the entire scenario if no targets are selected and no filters are in effect. If a filter is in effect, only the targets displayed in the Targets list display will be previewed. If one or more targets in the list are selected (highlighted), only the selected targets will be included in the preview. The Show Flight Path option can be selected for an individual target in the Target list display to preview dynamics and messages along the target's route.

When Preview is invoked, a dialog is presented to select options for the preview, including the time to start the preview and display options. The preview can be started from the beginning of the scenario or at any specific time between the start and end of the scenario. Users can choose to display the datablocks for preview targets and to include preview of manual release targets.

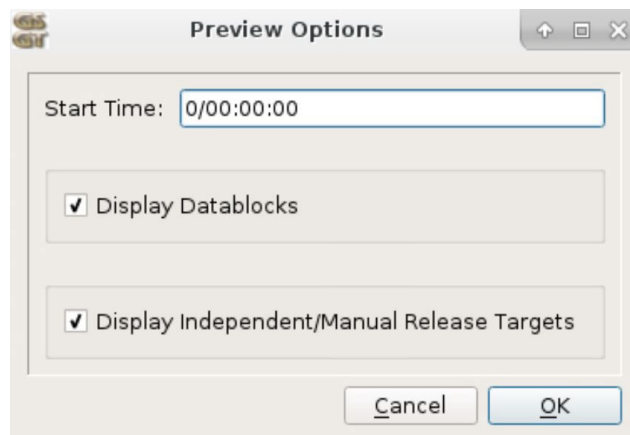


Figure 101. Preview Options

Start Time

Select the time to start the Preview.

Display Datablocks

The selected targets in preview will have datablocks with their callsign, heading, speed and altitude.

Display Independent Release Targets

If selected the targets tagged for Independent Release will inject at their assigned starttime.

OK

Begins Preview Mode, starting at the specified Start Time.

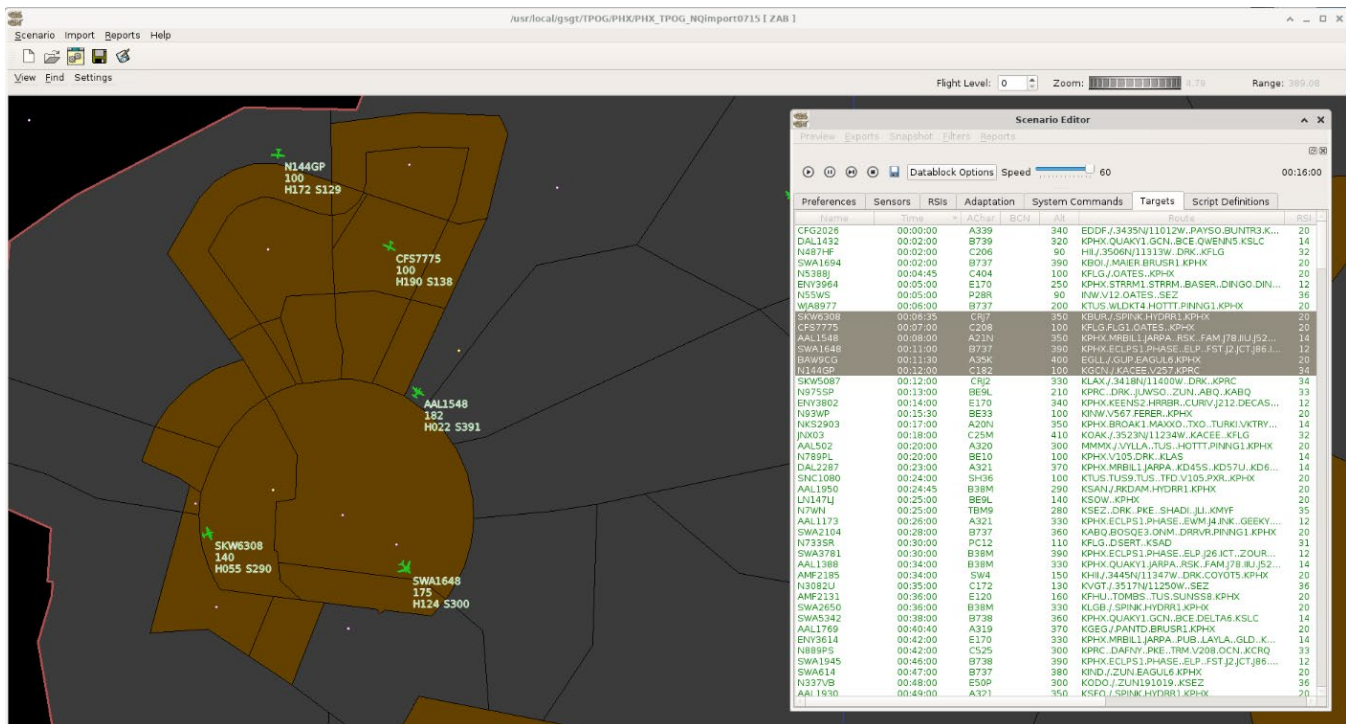


Figure 103. Preview on Selected Targets

When Preview is invoked, the standard toolbar is replaced with a toolbar for controlling the preview. The controls include the ability to start, pause, and step through the preview. Additionally, the preview can be run at a variable speed from 1 (real time) to 60 (1 minute of the sim = 1 second wall clock).



Figure 104. Preview Controls

Play

Starts playing the preview at the specified run speed.

Pause

Pauses the preview.

Step

Steps through the preview at time intervals of Speed value.

Stop

Stops the preview and returns to normal edit mode.

Save

Saves cloned targets.

Datablock Options

Opens the Datablock Visibility Manager to show or hide datablocks for all targets or those tagged with an RSI.

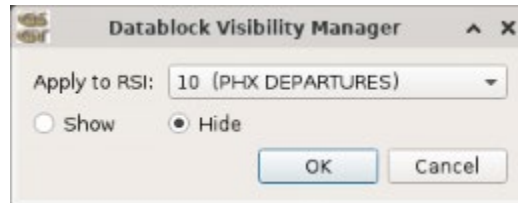


Figure 105. Preview Datablock Visibility Manager

Speed

Specifies the preview rate relative to the time in seconds. Valid range is 1-60 scenario seconds per real time second.

Time

The elapsed time of the preview - current scenario time.

Targets can be highlighted using right mouse click on a target, which toggles the display of the macro route of the flight with each fix being a yellow dot and the yellow lines being the route the target will follow to its next fix. In addition, a context box is displayed with the target details such as its current position, speed, heading, and altitude.

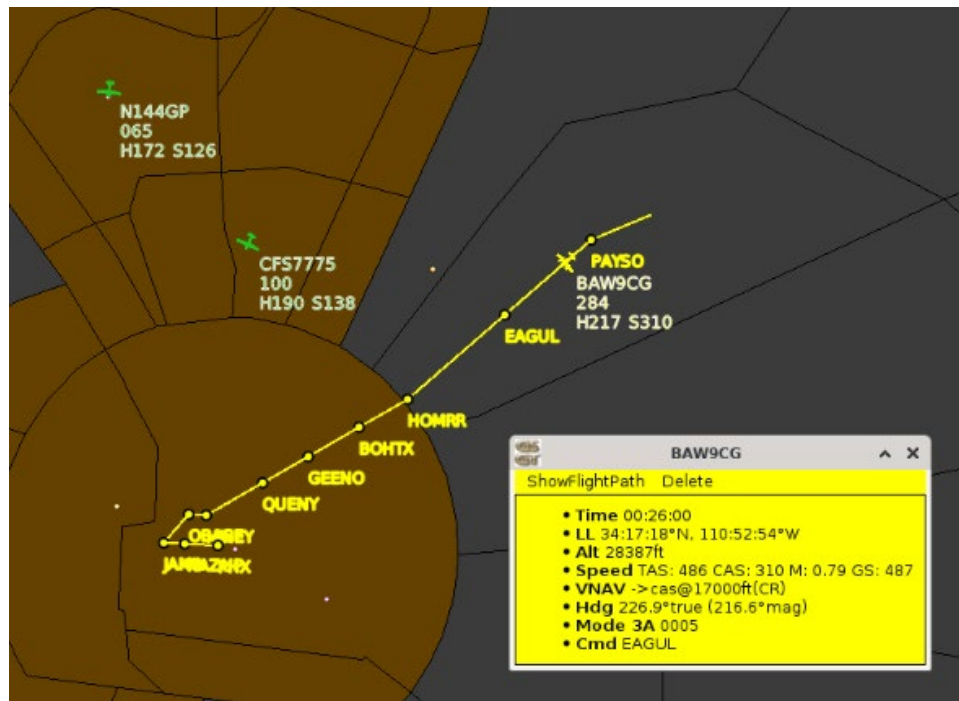


Figure 106. Target Highlighted within Preview

6.2. Show Flight Path

The Show Flight Path function enables previewing targets while editing the scenario. Every target in this mode is previewed independently of other targets and can be moved back and forth along its preview. There are no controls to start or pause the preview. The preview is simply done by mouse dragging the airplane along its route.

Scenario Editor								
Preview Exports Snapshot Filters Reports								
Preferences		Sensors	RSIs	Adaptation	System Commands	Targets	Script Definitions	
Name ▼	Time	AChar	BCN	Alt	Route		RSI	Pilot
ABRR100 (+9)	00:00:00	B738	0210	319	KSFO./3831/11706..MLF..H...		500	500
ABRR200 (+9)	00:00:00	B738	0145	430	KSFO./4928/11305..YXE..5...		500	500
ABRR300 (+9)	00:00:00	B738	0355	430	KSLC./3622/11410..LAKRR...		500	500
ABRR500 (+9)	00:00:00	B738	0232	430	KNUW./4540/11953..BOI..K...		500	500
ABRR600 (+9)	00:00:00	B738	0273	430	KRDU./3932/08755..GEG.....		500	500
ABRR700	00:00:00	B737		350	KLAX./3724/11257..BCE..C...		500	500
ABRR701	00:00:00	B737		370	KMSP./4642/10144..DIK..HI...		500	500
ABRR702	00:00:00	B737		390	KATL./3707/10507..ALS..H...		500	500
ABRR703	00:00:00	New			KDFW./3729/10137..DRAW...		500	500
ABRR704	00:00:00	Delete			KPDJ./4258/11447..BYI..EF...		500	500
ABRR800 (+9)	00:00:00	Show Flight Path			CYUL./4648/09335..FAR..K...		500	500
ADSB100 (+24)	00:00:00	Replicate			KDAL./3624/10730..ILC..KN...		300	
ASQ3946	00:00:00	Clear replications			KSMF./4049/11925..PRNC...		500	500
ASQ4288	00:00:00	Selection count			KMCO./3413/08958..VLUST...		500	500
DAL923	07:13:00	Assign RSI			KDWA..SAC..HNW..ILC..DRO...		500	500
DAL2851	00:00:00	Filter by AID			KRAP./4134/10838..MLF..K...		500	500
DC334 (+19)	00:00:00	Deselect All			EGLL./4527/11516..REO..F...		500	500
DNN01 (+24)	00:00:00				KSFO./3842/11710..KU54...		500	500
EDV3910	00:05:00				KNUW./126016..ELN.....		500	500
ENY3482	00:00:00				KDEN./4328/11020..DBS.....		500	500
ENY3616	02:11:00				KAFW./FTI102046..FTI1020...		500	500
FARK500 (+30)	00:00:00				KSNA./3757/11329..MLF..B...		500	500

Figure 107. Show Flight Path

While a target is displayed in Show Flight Path preview, its flight plan route is displayed using yellow fixes connected by lines and dashes between segments along airways. Additionally, the target's route of flight, which corresponds to surveillance positions, is displayed using plus symbols. The target's actual route will reflect target events such as holds or heading changes. Also, a context box is displayed with details such as current position, speed, heading and altitude which are updated as the target is dragged along the route. This provides target details at a particular point in space and time. When the dialog is closed or user right mouse clicks on the target, the target exits the Show Flight Path preview.

To start a Show Flight Path preview for any set of targets, from the Scenario Editor window, select single target or group of targets using **SHIFT** or **CTRL** keys and left mouse click. Then right click on the selected targets to open a context menu and select **Show Flight Path**.

Optionally, all non-radar messages associated with the target can be previewed on its route, which are placed at position corresponding to the time when the messages are injected. To preview messages associated with the target, select **View** button from the target context box and select **Show Messages**. Messages can be moved on the display using left mouse click and drag to unclutter any part of the display.

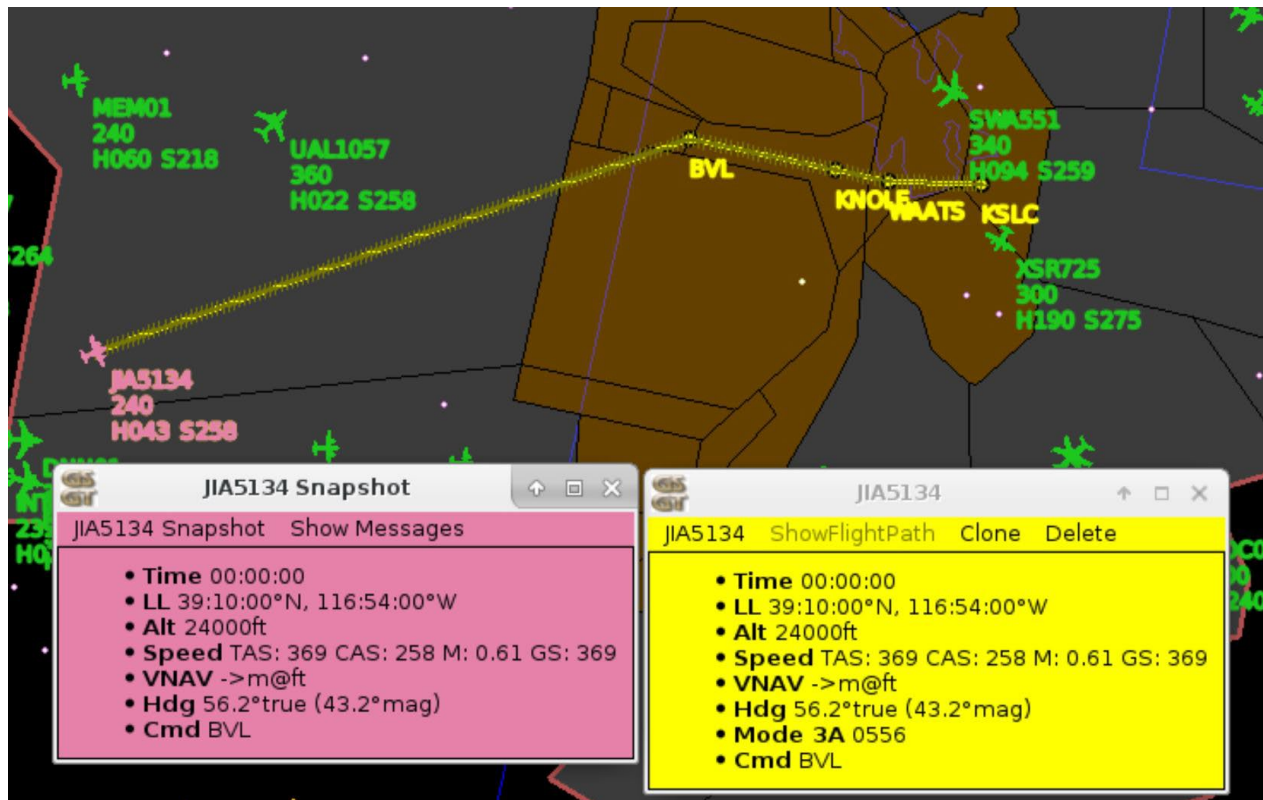


Figure 108. Target Flight Path

6.3. Clone a Flight

To clone a flight in GSGT, start preview mode from the Scenario Editor. Make sure to have the flight that will be cloned already created in the scenario. Then right click the flight on the map, and click ShowFlightPath. This will enable the clone option for that flight to be selected.

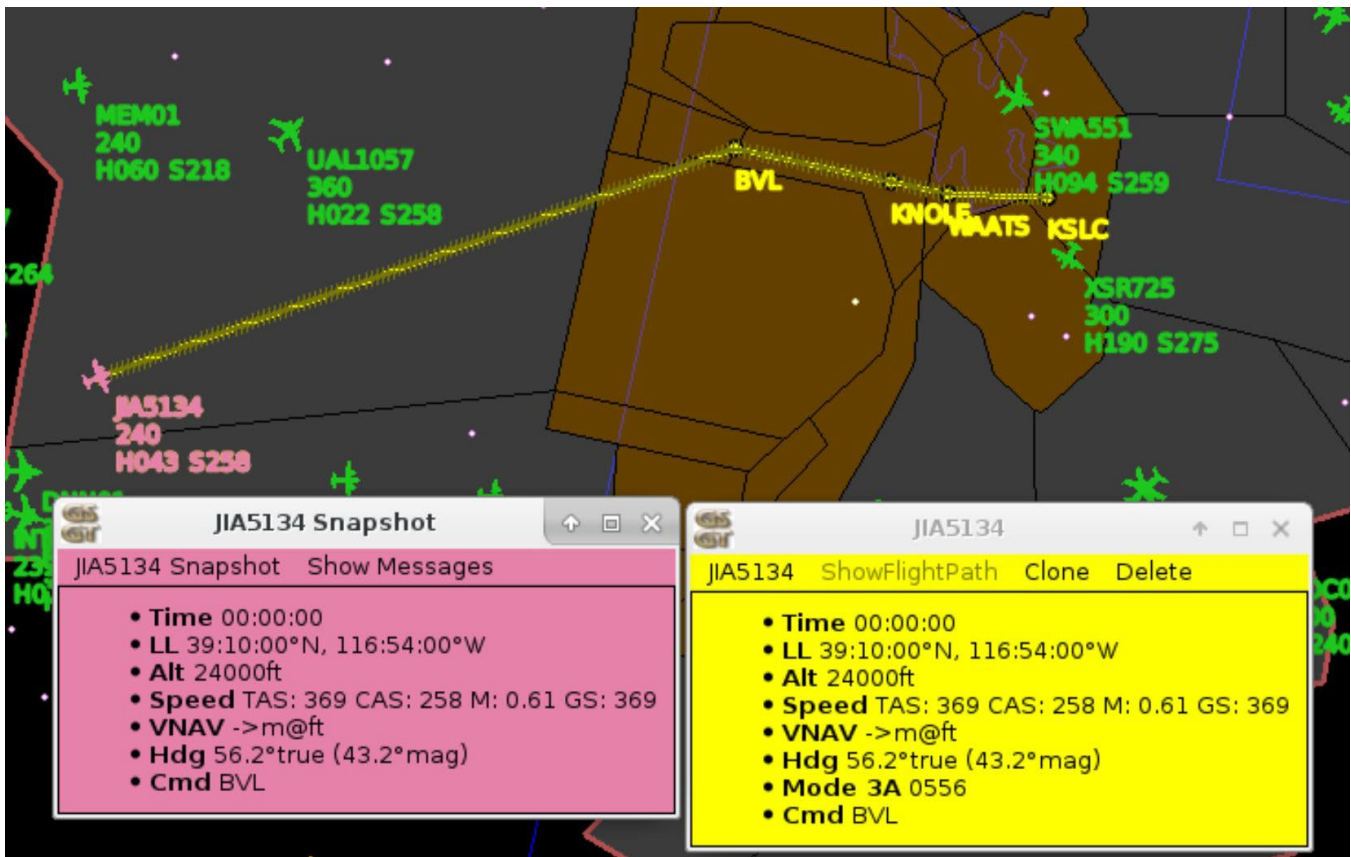


Figure 109. Cloning a Flight in Preview

7. Import Functions

GSGT includes functionality to import data from several different sources such as GSGT scenarios, directly from NASQuest, from a comma separated values (CSV) file created from Command Message Set (CMS) data, or a STARS CDR file.

Import must be performed in a currently open scenario. Before starting the Import process, users must create a new scenario or open an existing scenario.

7.1. Import GSGT Scenario

The GSGT Scenario import functionality enables the user to import an already existing GSGT scenario into the current scenario, in whole or in part.

To start the import process, select **Import->GSGT Sim** from the GSGT Main Window.

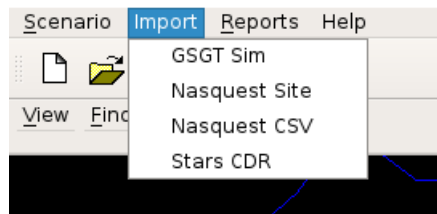


Figure 110. Import Scenario

Select the GSGT scenario to import into current scenario.

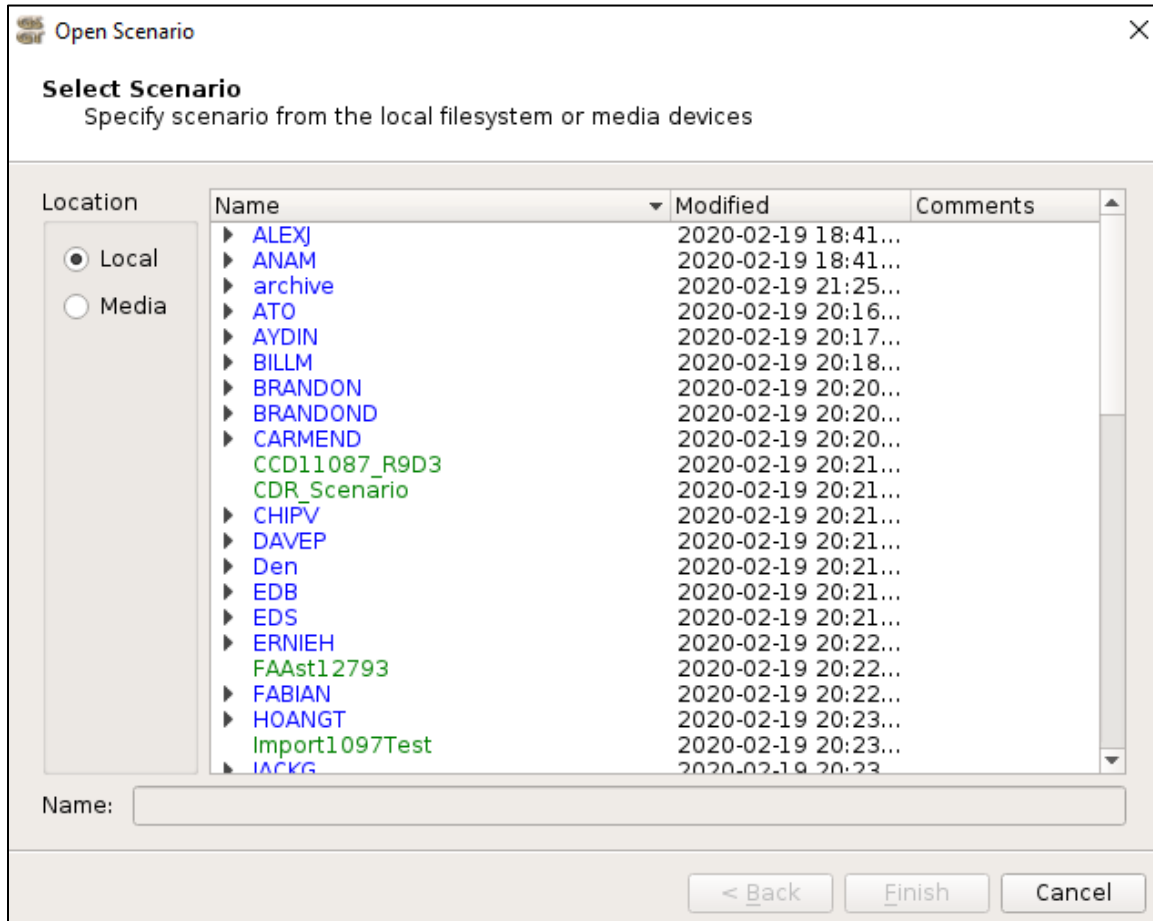


Figure 111. Scenario Selection

Back

Disabled in this window.

Finish

Opens the selected scenario.

Cancel

Closes the window and cancels the import scenario action.

After selecting a scenario, the following dialog is presented which allows the user to select the elements from the scenario to import. The first page allows the selection of preferences (Prefs), record select indicators (RSIs), Targets, System Commands, and Script Definitions.

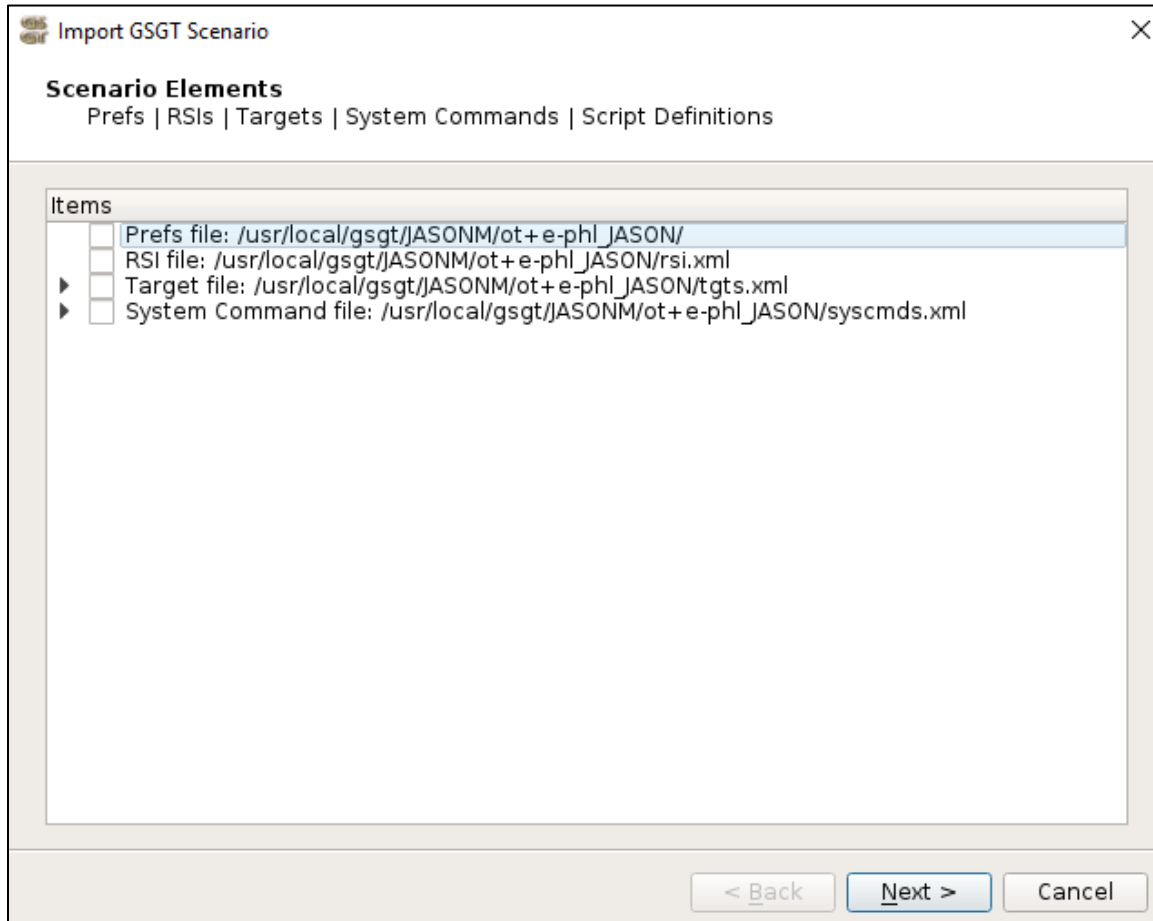


Figure 112. Select Scenario Elements

Back

Returns to previous page of the import dialog.

Next

Advances to the next page of the import dialog.

Cancel

Closes the scenario import dialog.

The second page allows the selection of user defined custom maps (if the selected scenario includes any).

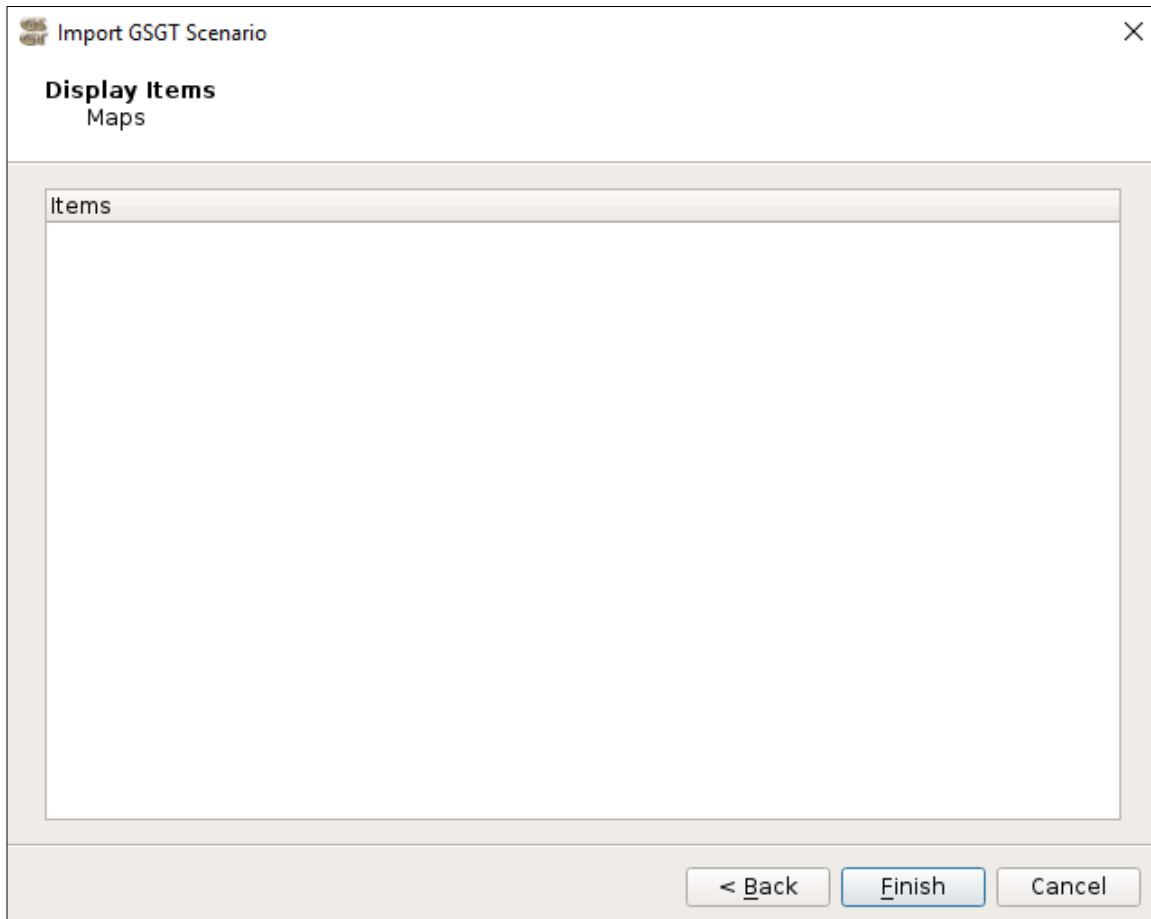


Figure 113. Select Display Items

Back

Returns to previous page of the import dialog.

Finish

Imports the selected items into the current scenario.

Cancel

Closes the scenario import dialog.

After import is complete, a message box is presented to review status of import and errors during parsing or opening of the selected scenario.

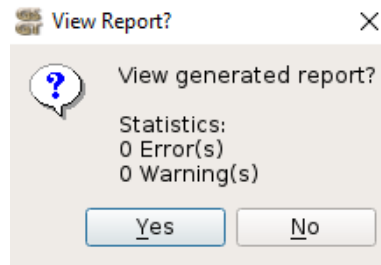


Figure 114. Import Errors and Warnings

7.1.1. Import NASQuest Site

To import data directly from the NASQuest server, start the process by selecting **Import->Nasquest Site** from the GSGT Main Window.

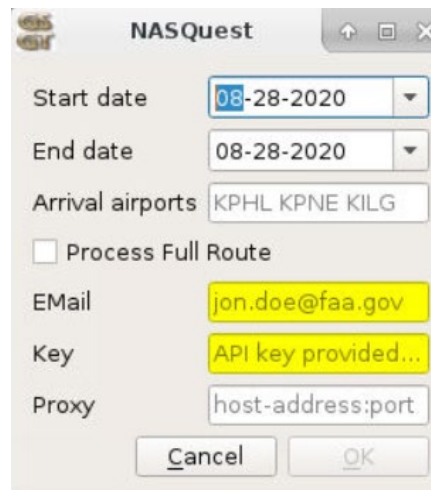


Figure 115. NASQuest Site Import

7.1.2. Import NASQuest CSV

To import data from a NASQuest CSV file, start the process by selecting **Import->Nasquest CSV** from the GSGT Main Window.

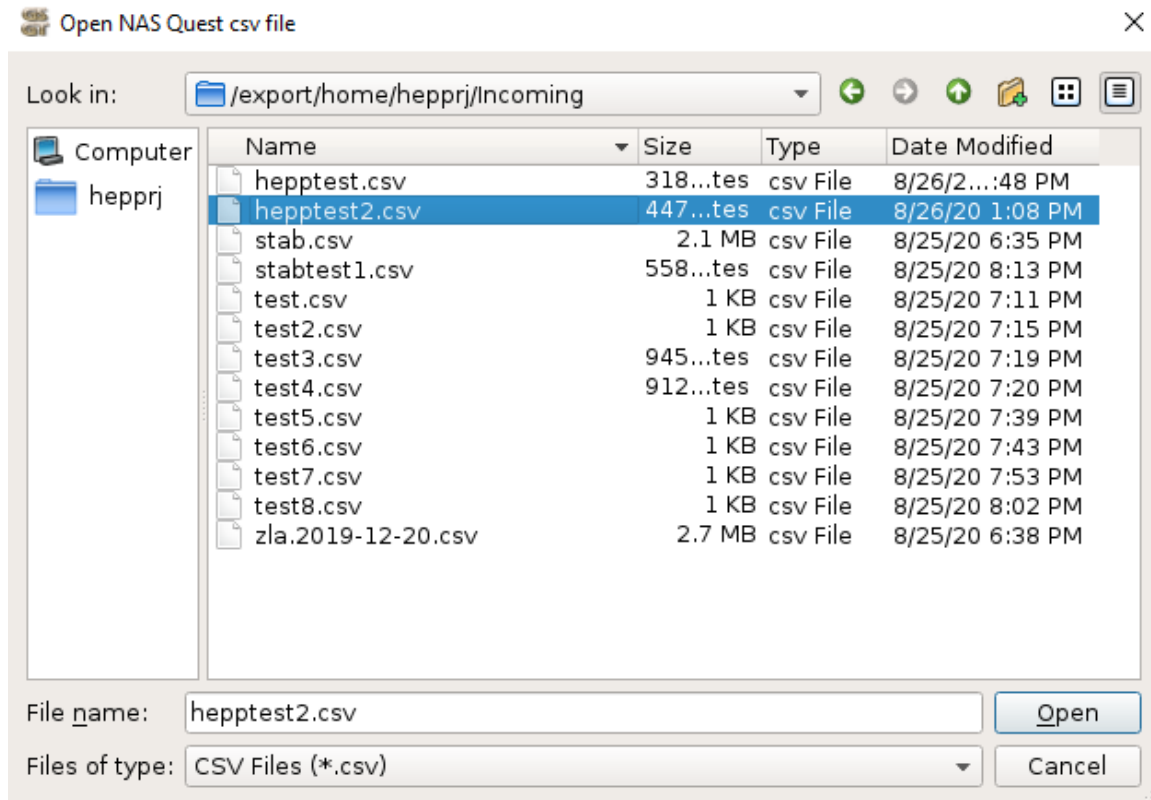


Figure 116. Import CSV File

Users have the option to filter the CSV file based on airports of interest.

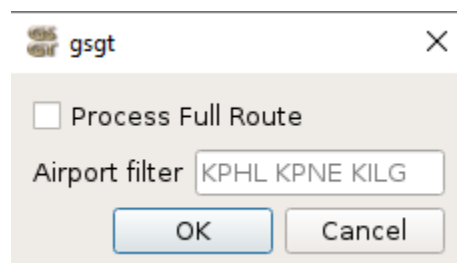


Figure 117. Import CSV Options

The Finished CSV Import dialogue box will inform how many targets from the CSV file were imported. Click 'OK' when finished.

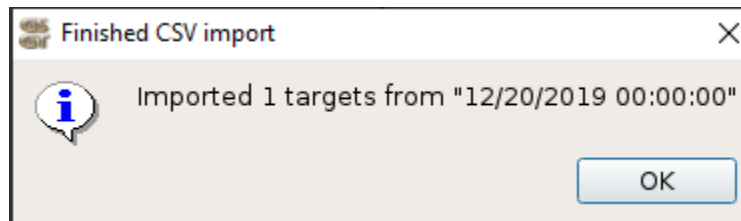


Figure 118. CSV Import Status

7.1.3. Import STARS CDR

The STARS CDR import function allows the user to import a CDR file that will generate Time Based Targets into the scenario. This function can be used to update older CDR radar data against today's latest adaptation, including true north.

Time Based Targets can be used in SimDriver for playback. In SimDriver, users can take control and dynamically pilot the targets. Please reference the Dysim Manual for more information.

To start the import process, select **Import->Stars CDR** from the GSGT Main Window.

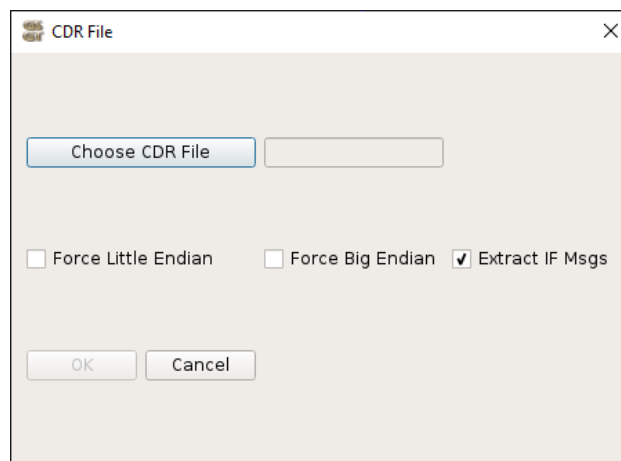


Figure 119. STARS CDR Options

Users have the option to Force Little Endian, Force Big Endian, or Extract IF Msgs. By default, GSGT will automatically detect the correct Endian type.

Select a CDR file that ends with the file type (*.cdr).

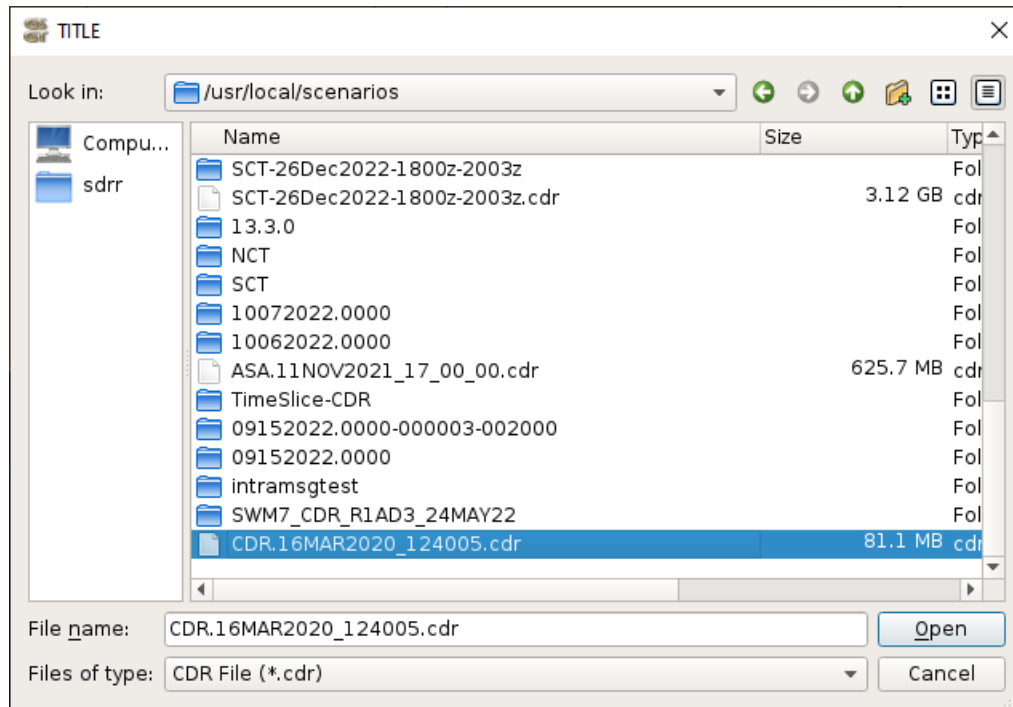


Figure 120. Import CDR File

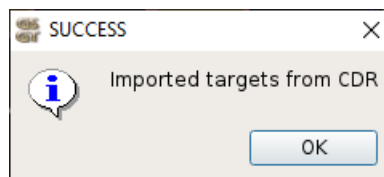


Figure 121. CDR Import Status

Time Based Targets are imported into the scenario.

Scenario Editor

Preview Exports Snapshot Filters Reports

Name	Time	AChar	BCN	Alt
ADSB01	00:02:00	B737	2001	
ARR01	00:00:02	B737	4001	
ARR2	00:02:00	B737	0601	
ARR3	00:03:59	B737	4003	
DEP01	00:04:09	B737	3001	
DEPARR1	00:01:10	B737	1201	
DEPARR2	00:03:15	B737	1202	
IOI01	00:00:00	B737	7001	
MS01	00:00:01	B737	1001	
RR01	00:00:10	B737	1101	
RSI01	00:00:11	B737	1601	
STARS01	00:00:02	B737	1401	

Figure 122. Time Based Targets

Time Based Targets are point based with latitude and longitude fixes. These fixes cannot be modified under the Dynamics tab; however, they can be dynamically controlled while using Dysim/simDriver.

Target editor

Name: Starttime:

Main Dynamics Messages Dysim

Flight Plan

AChar: Speed: Flevel:

Route:

Departure Runway: Arrival Runway:

Flight Dynamics

Macro:

Events

Time	Description
------	-------------

Figure 123. Time Based Targets - Dynamics

8. Export Functions

GSGT provides two export functions, Export SDRR and Export GSGT, from the Scenario Editor window.

8.1. Export SDRR

The Export SDRR function converts the GSGT scenario into a static scenario for SDRR injection and playback. The exported scenario includes surveillance data and non-surveillance messages. Once the scenario is exported, it should be transferred to an SDRR processor for static scenario execution.

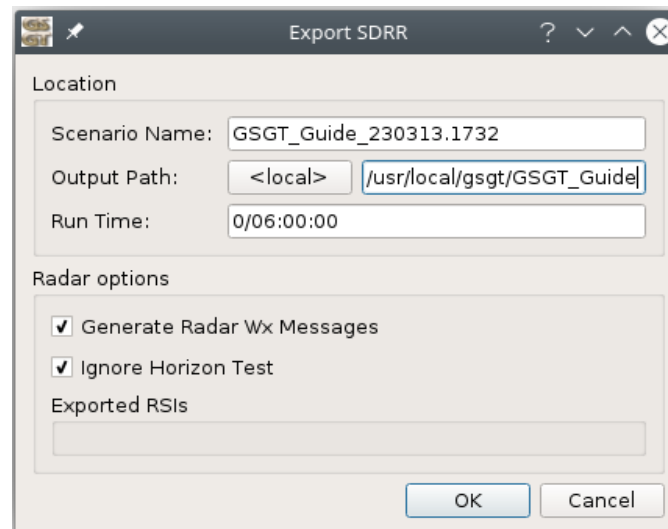


Figure 124. Export SDRR

8.2. Export GSGT

The Export GSGT function is essentially the opposite of the Import GSGT function. Export GSGT allows the user to create new GSGT scenarios from the currently opened scenario. For example, the user can filter the current scenario and then export the filtered version to new scenario name.

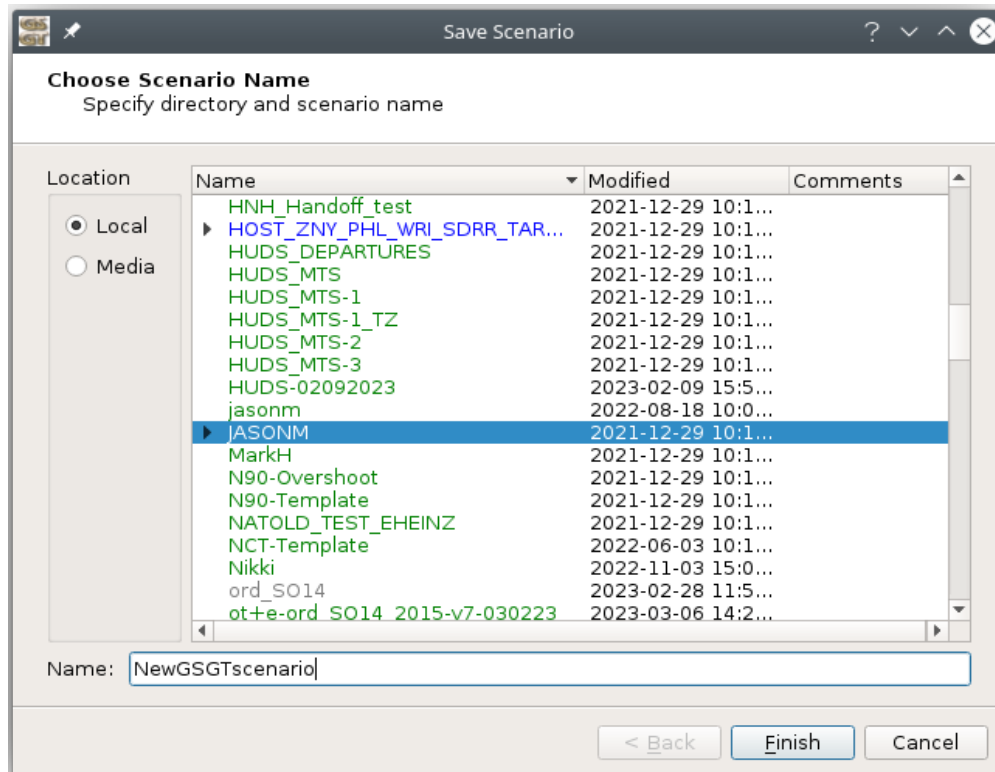


Figure 125. Export GSGT

9. Reports and Tools

GSGT includes the ability to generate various reports such as Traversal reports. All reports (as well as import and export logs) are written to files that can be viewed by any HTML browser outside of the GSGT application.

After selection of the report and its options (if applicable), a dialog is displayed to choose a file name where the report will be saved. If the file name already exists, a prompt will be displayed to confirm that the old file will be overwritten. While the report is being created, a window is displayed indicating that the report is being generated. Once the report is complete, a dialog is displayed asking to preview the report. The report is always saved to a specified file, and it may be viewed at a later time by any HTML browser.

The following reports are located on the main GSGT menu: GSGT Session Log, Simulated Target Position, FAV Traversal Report, and Simulated Radar Target Count.

The rest of the reports are located in the scenario editor under reports: Sorted Scenario Listing and Message Injection Report.

Table 9. List of Reports

Report Name
GSGT Session Log
Sorted Scenario Listing
Message Injection Report
Simulated Target Position
FAV Traversal Report
Simulated Radar Target Count

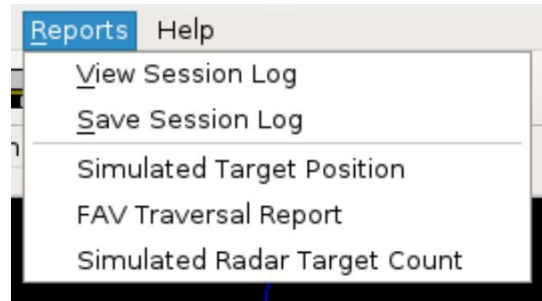


Figure 126. Main Reports Menu

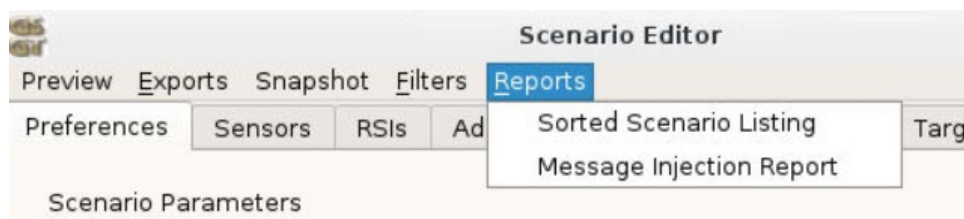


Figure 127. Scenario Editor Reports Menu

9.1. GSGT Session Log

The Session Log displays messages that were generated during the current session while performing certain task. Messages are logged for start and end of GSGT session, loading of a scenario, and import and export functions.

To generate the report, select Reports->View/Save Session Log from the GSGT Main Window.

The task that generated the message is shown in GRAY. Status and completion messages are shown in GREEN. Warnings are shown in YELLOW and error messages are shown in RED.

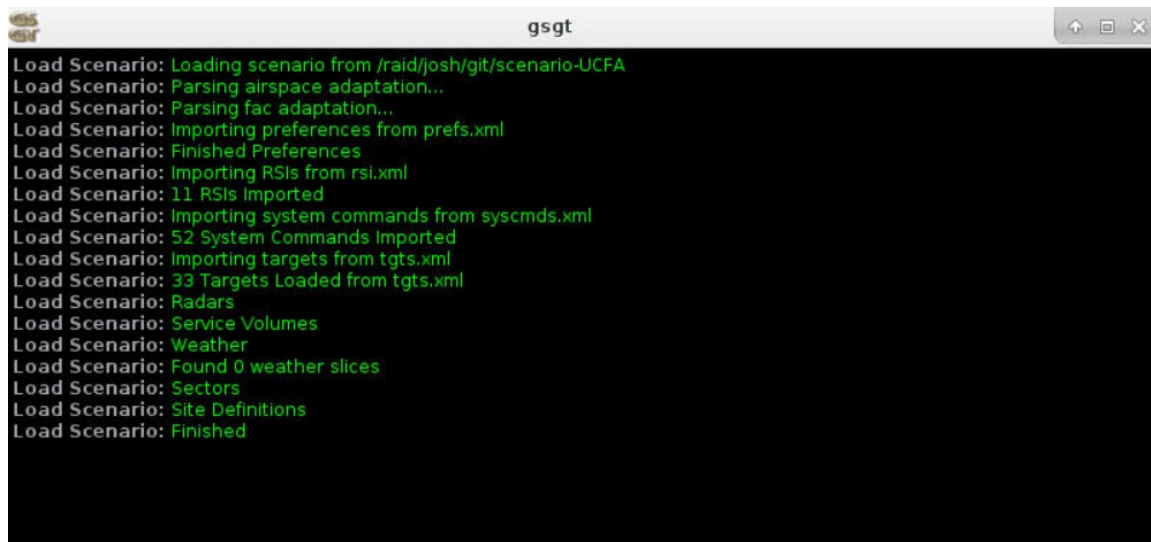


Figure 128. GSGT Session Log

9.2. Sorted Scenario Listing

The Sorted Scenario Listing displays the injected messages for each target. The targets can be sorted by name and RSI.

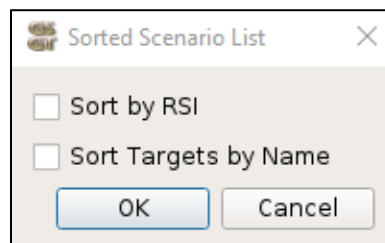


Figure 129. Sorted Scenario List Options

To generate the report, select Reports->Sorted Scenario Listing from the GSGT Main Window.

Sort by RSI

Group and sort the output by RSI.

Sort Targets by Name

Group and sort the output by the targets name.

OK

Generates the report using the specified criteria.

Cancel

Closes the dialog and cancels the report.

RSI 1
ZDC ARRIVALS
AAL745
00:43:10.00
CID 98N; TRKNO 209
ZDC ARRIVALS (1)
00:54:10.00 [ZNY] FP AAL745 MD82/Q 0003 450 MXE278051 E0055 320 LGA../PARKE.J6.HVQ 00:57:10.00 [ZNY] TI W04 AAL745/@@@ (268.000,575.625) (-388,-228) 320 0003 ZCN01 00:57:15.00 [R04] QN AAL745 01:06:30.00 [R04] QN 03 AAL745 01:06:35.00 [R03] QN AAL745 01:19:40.00 [R03] QN I01 AAL745 01:19:45.00 [ZID] TA AAL745 C01 # # AAL745 - C 00:00:43:10 A AAL745 0003 MD82 320 450T PARKE_K6 AWAY_J6 HVQ_K6 ->D
AWI734
00:44:46.00
CID 999; TRKNO 39
ZDC ARRIVALS (1)
00:39:46.00 [SH1A(ANK3)] FP AWI734 CRJ2/G 0006 470 KIAD P0045 290 KIAD../JERES.J220.BUF../LINNG.LINNG1.CYY 00:44:41.00 [PCT] DM @@@ 0045

Figure 130. Sorted Scenario List Report

9.3. Message Injection Report

The Message Injection Report lists all scenario messages in chronological order based on injection time.

To generate the report, select Reports->Message Injection Report from the GSGT Main Window.

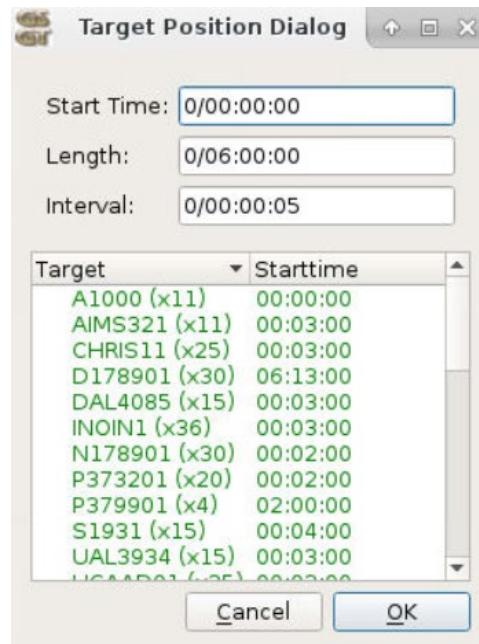


Figure 132. Target Position Report Options

Start Time

Start time of the report.

Length

The length of time the report will cover.

Interval

The time interval of each target report.

Targets

The targets listed in the report. Hold down CTRL to select multiple targets. Clicking on Target ID or Starttime will sort the targets appropriately.

OK

Generates the report using the specified criteria.

Cancel

Closes the dialog and cancels the report.

The first file displayed is a summary containing links to the report for each selected target. Clicking on a link will display the individual target report.


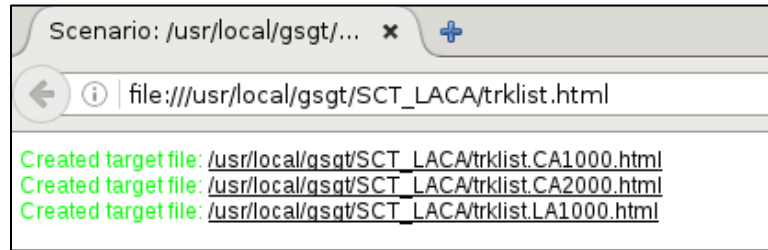


Figure 133. Target Position Report File List

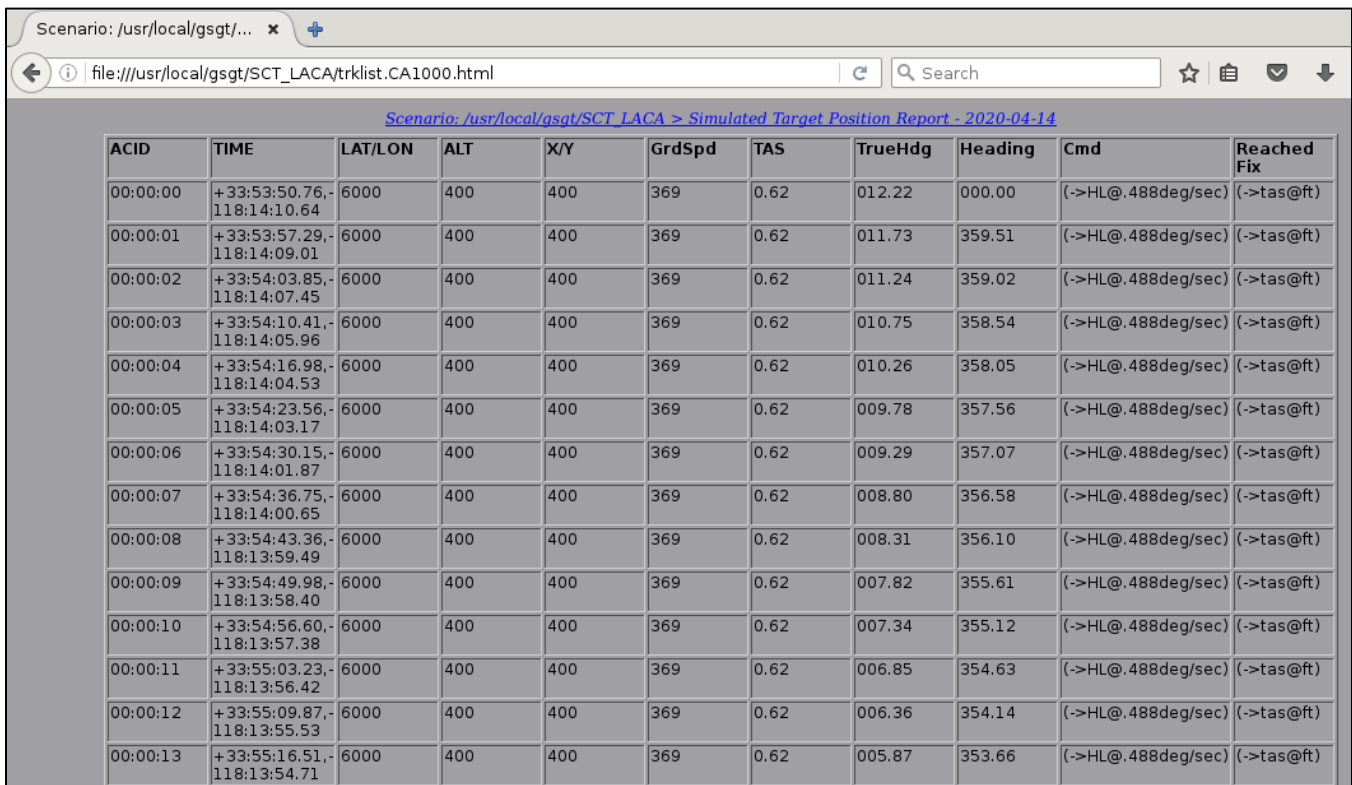

ACID	TIME	LAT/LON	ALT	X/Y	GrdSpd	TAS	TrueHdg	Heading	Cmd	Reached Fix
00:00:00	+33:53:50.76,-118:14:10.64	6000	400	400	369	0.62	012.22	000.00	(->HL@.488deg/sec)	(->tas@ft)
00:00:01	+33:53:57.29,-118:14:09.01	6000	400	400	369	0.62	011.73	359.51	(->HL@.488deg/sec)	(->tas@ft)
00:00:02	+33:54:03.85,-118:14:07.45	6000	400	400	369	0.62	011.24	359.02	(->HL@.488deg/sec)	(->tas@ft)
00:00:03	+33:54:10.41,-118:14:05.96	6000	400	400	369	0.62	010.75	358.54	(->HL@.488deg/sec)	(->tas@ft)
00:00:04	+33:54:16.98,-118:14:04.53	6000	400	400	369	0.62	010.26	358.05	(->HL@.488deg/sec)	(->tas@ft)
00:00:05	+33:54:23.56,-118:14:03.17	6000	400	400	369	0.62	009.78	357.56	(->HL@.488deg/sec)	(->tas@ft)
00:00:06	+33:54:30.15,-118:14:01.87	6000	400	400	369	0.62	009.29	357.07	(->HL@.488deg/sec)	(->tas@ft)
00:00:07	+33:54:36.75,-118:14:00.65	6000	400	400	369	0.62	008.80	356.58	(->HL@.488deg/sec)	(->tas@ft)
00:00:08	+33:54:43.36,-118:13:59.49	6000	400	400	369	0.62	008.31	356.10	(->HL@.488deg/sec)	(->tas@ft)
00:00:09	+33:54:49.98,-118:13:58.40	6000	400	400	369	0.62	007.82	355.61	(->HL@.488deg/sec)	(->tas@ft)
00:00:10	+33:54:56.60,-118:13:57.38	6000	400	400	369	0.62	007.34	355.12	(->HL@.488deg/sec)	(->tas@ft)
00:00:11	+33:55:03.23,-118:13:56.42	6000	400	400	369	0.62	006.85	354.63	(->HL@.488deg/sec)	(->tas@ft)
00:00:12	+33:55:09.87,-118:13:55.53	6000	400	400	369	0.62	006.36	354.14	(->HL@.488deg/sec)	(->tas@ft)
00:00:13	+33:55:16.51,-118:13:54.71	6000	400	400	369	0.62	005.87	353.66	(->HL@.488deg/sec)	(->tas@ft)

Figure 134. Target Position Report

9.5. FAV Traversal Report

The FAV Traversal Report displays the FAV crossing times for the selected targets.

To generate the report, select Reports->FAV Traversal Report from the GSGT Main Window.

The dialog with report options is the same as in Simulated Target Position report.

The FAV Listing displays each aircraft ID and the time it enters each FAV.

Scenario: /usr/local/gsgt/... x +			
file:///usr/local/gsgt/SCT_LACA/fpalist.html			
Acid	Time	FPA	Fix
LA1000	00:00:00	ZLA:RRR	LAX
	00:03:38	ZLA:TTT	LAX
	00:08:10	ZLA:JJJ	LAX
	00:28:23	ZLA:0400	LAX
	00:32:17	ZLA:1300	LAX
	00:36:50	ZLA:1400	LAX
	00:37:32	ZLA:NNN	LAX
	00:40:01	ZLA:AAA	LAX
	00:42:12	ZLA:NNN	LAX
	01:00:02	ZLA:PPP	LAX
	01:02:33	ZLA:2800	LAX
	01:05:03	ZLA:FFF	LAX
	01:16:32	ZLA:TTT	LAX
	01:20:08	ZLA:TTT	LAX
	01:23:06	ZLA:TTT	LAX
	01:26:10	ZLA:TTT	LAX
	01:28:29	ZLA:RRR	LAX
	01:31:59	ZLA:TTT	LAX
	01:36:11	ZLA:JJJ	LAX
	01:56:18	ZLA:0400	LAX
	00:00:00	ZLA:RRR	LAX

Figure 135. FAV Traversal Report

9.6. Simulated Radar Target Count

The GSGT Simulated Radar Target Count.

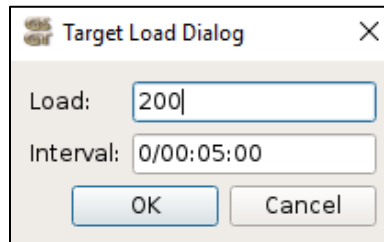


Figure 136. Target Count Report Options

To generate the report, select Reports->Simulated Radar Target Count from the GSGT Main Window.

Load

The aircraft load to report.

Interval


The time interval used in the report.

OK

Generates the report using the specified criteria.

Cancel

Closes the dialog and cancels the report.

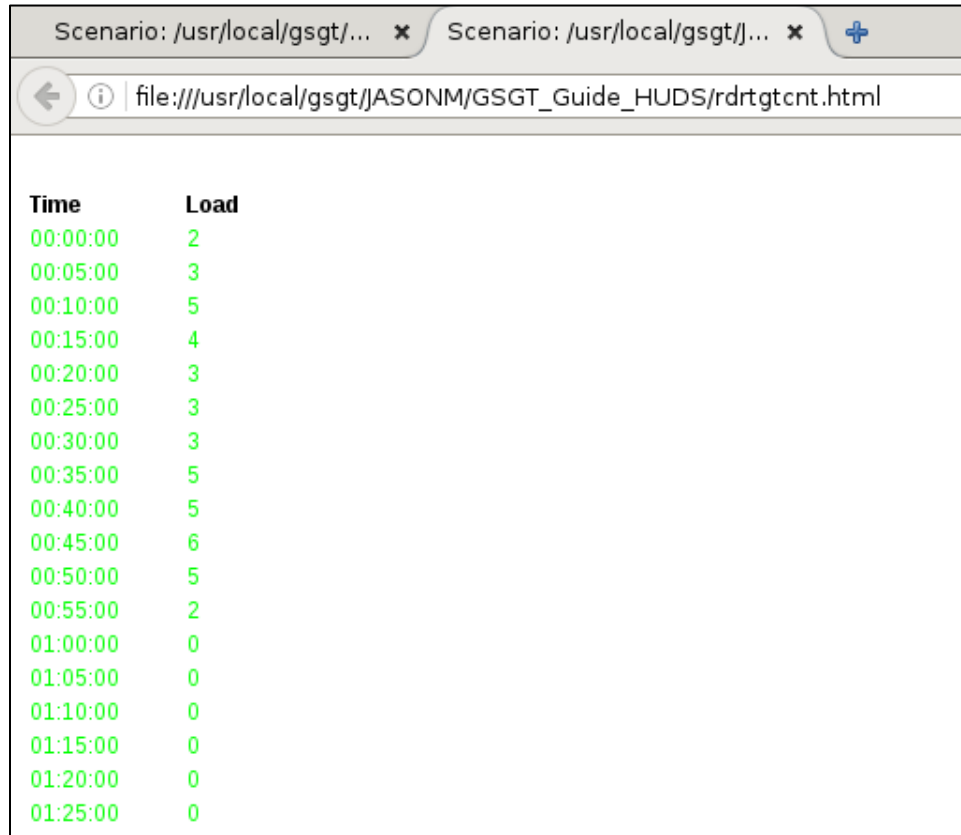

Time	Load
00:00:00	2
00:05:00	3
00:10:00	5
00:15:00	4
00:20:00	3
00:25:00	3
00:30:00	3
00:35:00	5
00:40:00	5
00:45:00	6
00:50:00	5
00:55:00	2
01:00:00	0
01:05:00	0
01:10:00	0
01:15:00	0
01:20:00	0
01:25:00	0

Figure 137. Target Count Report

10. Weather Editor

The weather scenarios can be included in GSGT scenarios to provide more realistic simulation. They are created using GSGT Weather Editor, which is a part of GSGT distribution. The Weather Editor closely resembles the Scenario Editor; however, it is only designed to create and edit weather scenarios. Weather scenarios and regular scenarios are saved in different paths, so they may have exactly the same names. However, it is recommended to use different names to be able to distinguish them easily.

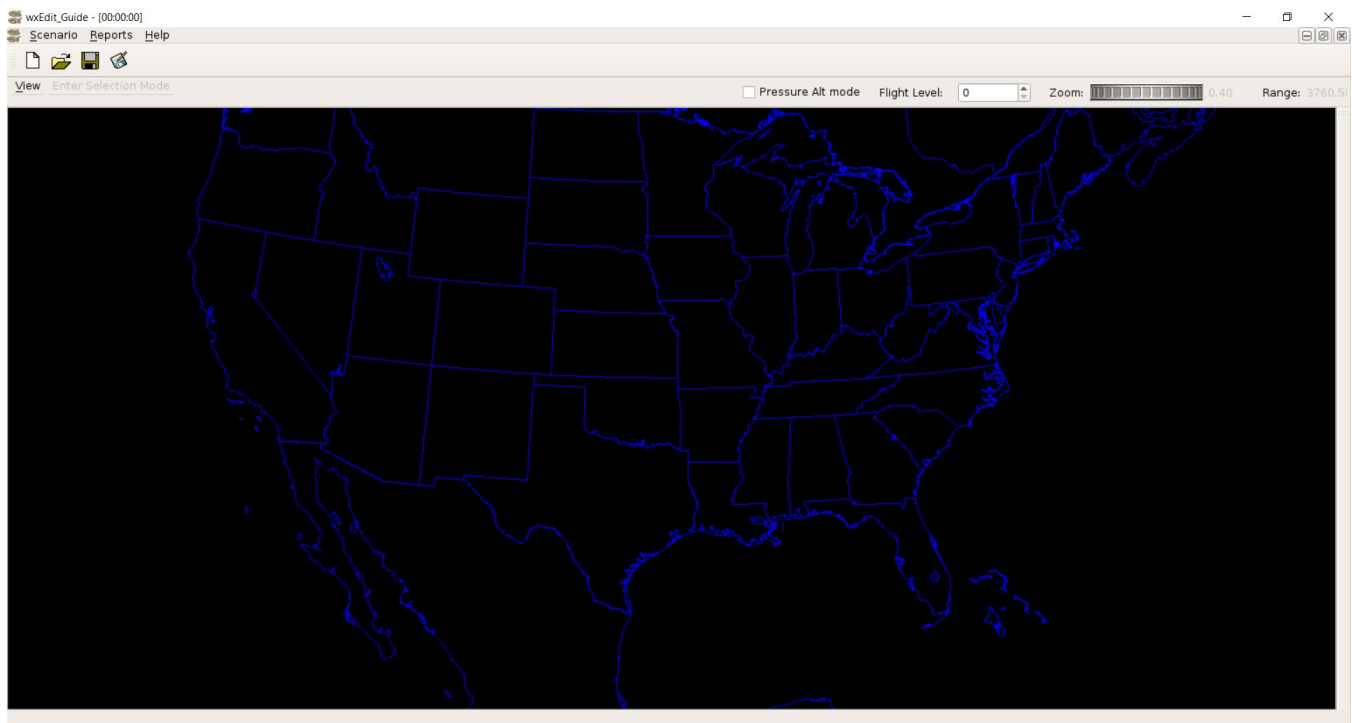


Figure 138. Weather Editor

Since weather scenarios can be included into multiple GSGT scenarios they are included as read-only and can't be modified from within a regular scenario. Also since they are shared, any change in the weather scenario will affect all scenarios that use that particular weather scenario.

10.1. Starting the Weather Editor

The GSGT Weather Editor is executed using the executable wxEdit.

To start the Weather Editor from the command line, enter:

```
> wxEdit
```

To launch a version of the Weather Editor that is not the default version, enter:

```
> /usr/local/jvn.x.x.x/bin/wxEdit
```

NOTE: Starting the Weather Editor from a command line while inside a weather scenario directory will automatically open that scenario.

10.1.1. Command Line Options

The Weather Editor can be started with options which control its operation.

Table 10. Parameters for the Weather Editor

Parameter	Description
--tbfmFormat	TBFM mode for generating GRIB2 formatted weather.
--native	Default mode. Same as no parameter. Native mode provides the ability to export the scenario to SDRR for execution with the ERAM system.
--proxy=server/port	Opens wxEdit with specific server/port
--version	Display the Weather Editor version.
--nofullscreen	Not full screen mode; the Weather Editor will be started in a window roughly half the size of the screen.
--help	Display application parameters.

For example, to start the Weather Editor in TBFM Mode, enter:

```
> wxEdit --tbfmFormat
```

10.1.2. Loading Adaptation

The weather editor, by default, does not display any adaptation information because it's not adaptation specific, meaning it does not require an adaptation for creating or editing weather patterns. However, it allows the user to load adaptation for a better visual reference but the adaptation is not saved with scenario.

To load adaptation select **Scenario->Load adaptation** from the Weather Editor Main Window.

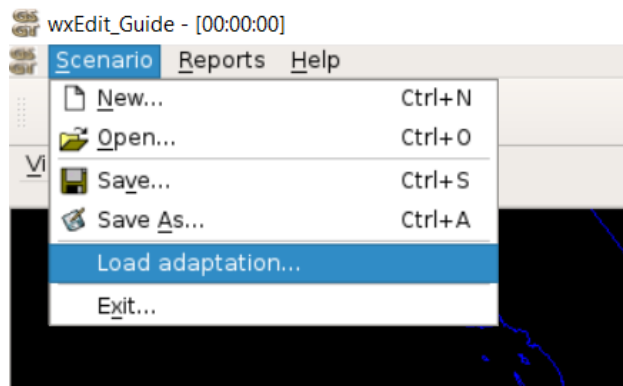


Figure 139. Loading Adaptation

The adaptation selection is performed in same manner as when selecting adaptation for regular scenario. Multiple adaptations can be selected to better aid creation of weather patterns. Once the adaptation is loaded it may not be changed to a different adaptation during the same session. To change adaptation, close the editor and restart to select a different adaptation.

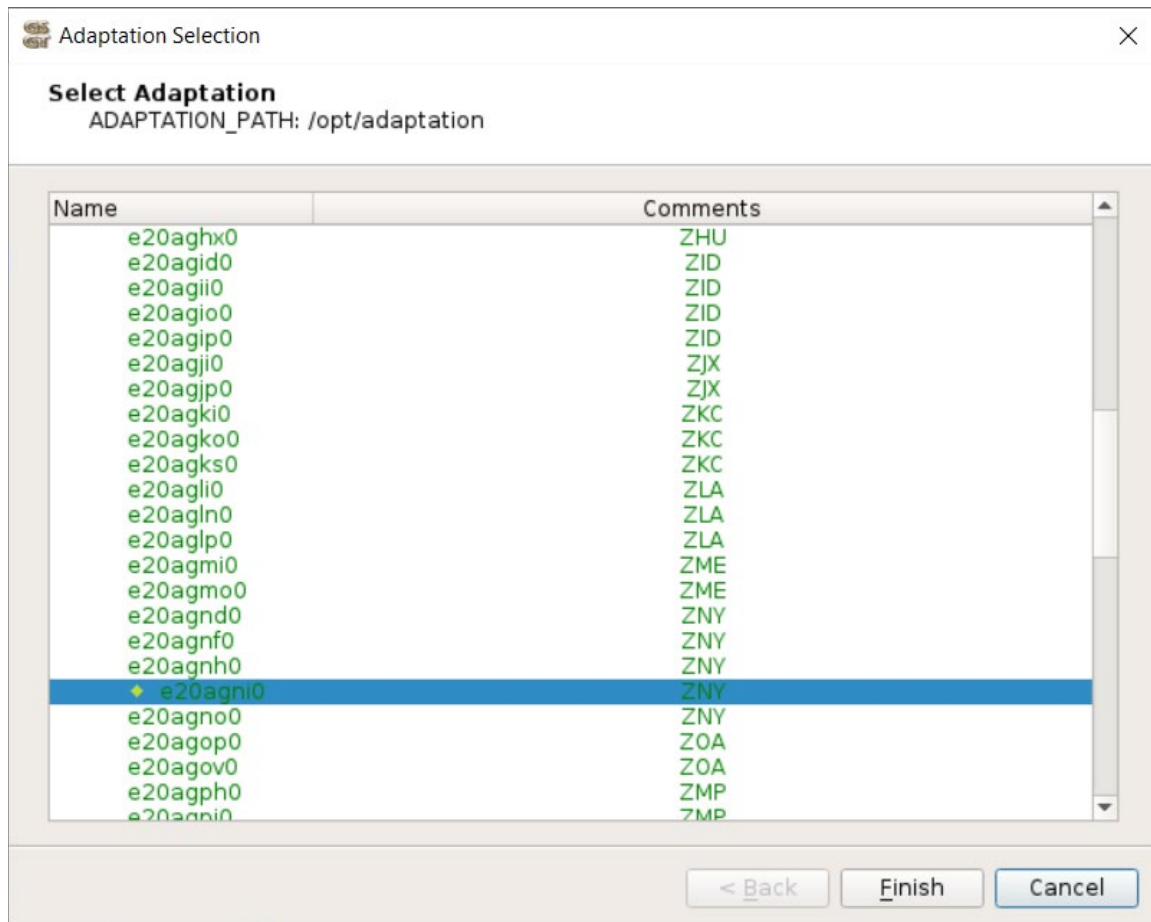


Figure 140. Selecting an Adaptation

NOTE: The weather scenario is defined on a national grid, in other words weather patterns are defined on a national scope. A single weather scenario can be used by many site specific scenarios that in turn will use only a specific sub grid of the national weather.

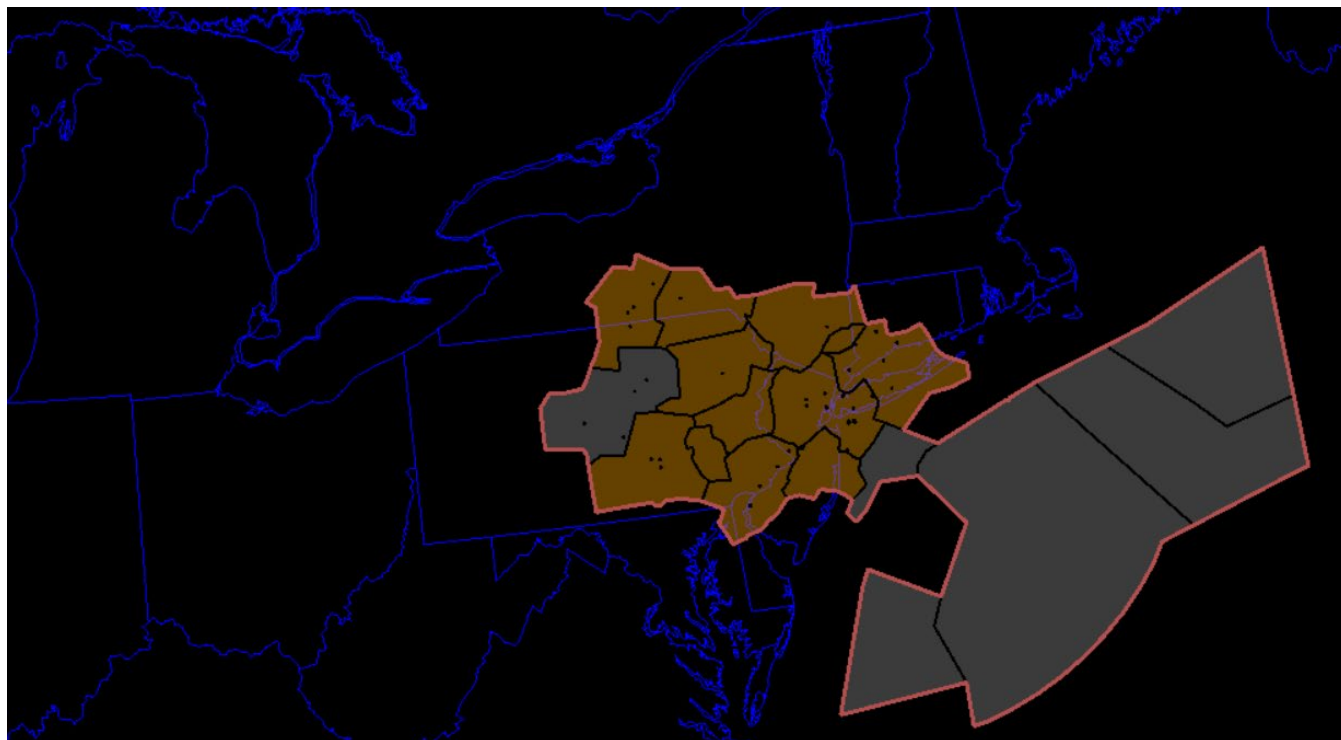


Figure 141. Adaptation Display

10.2. Weather Editor GUI

10.2.1. Weather Time Slice Windows

Weather scenarios can consist of multiple time slices. Time slices can only be defined during initial creation of a weather scenario. The beginning time of the time slice is displayed in the title bar of the window or in the main title bar if the window is maximized.

Every time slice in the weather scenario is contained in its own editor window. Each of these windows can be separately adjusted to view maps and different types of weather. Additionally, changing the stratum allows the user to view the different wind and temperature values for a particular level. Stratum can be specified in pressure altitude (millibars or mb) or by flight level (FL). Changing stratum does not affect the preview of pressure or precipitation. Only wind and temperature may have different values at different stratum levels.

Table 11. Weather Types

Event	Description
Wind	It's depicted by WHITE vectors indicating heading, and length indicating speed. Default speed and heading is 0
Temperature	It's depicted by gamma colors (blue being cold, red being hot) outlined every 10 degrees. Default temperatures vary by stratum. For example default temperature at 1000mb is 57.7 F and at 100mb it is -69.70 F.
Pressure	It's depicted by red and blue intensity colors, where red is high and blue is low pressure. The default pressure is 1013.25mb.
Precip	It's depicted by intensity in colors (blue, green, yellow, red, purple and white) ranging from light to most severe precipitation.

10.2.2. Weather Editor Menus

To preview weather, from the wxEdit window menu select **View->Wx**. This opens a list of weather views (Wind, Temperature, Pressure, and Precip). Select desired weather types to be viewed by repeating this step as necessary. To remove wx data from the display select **View->Wx** and deselect the appropriate weather types.

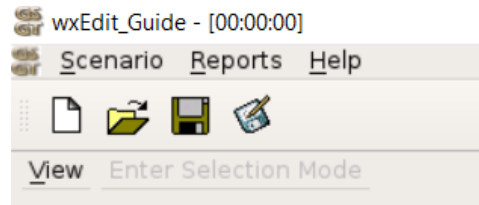


Figure 142. Menu Bar

View

The pull-down menu is used to select weather data and map data for background display. The background functions may be displayed individually or in combination.

Maps

US Map (BLUE)

Canada (BLUE)

Mexico (BLUE)

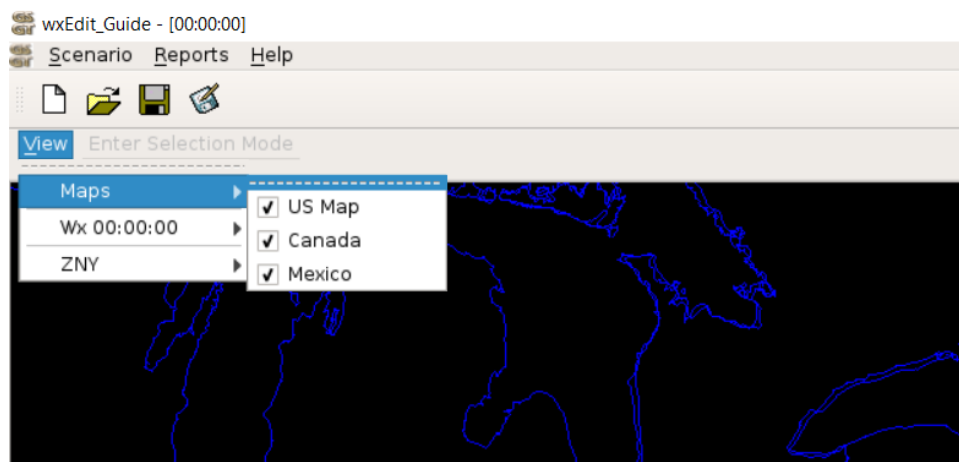


Figure 143. Map Selection

Wx

Temperature – Display the temperature.

Pressure – Display the air pressure.

Wind – Display the wind.

Precip – Display the precipitation.

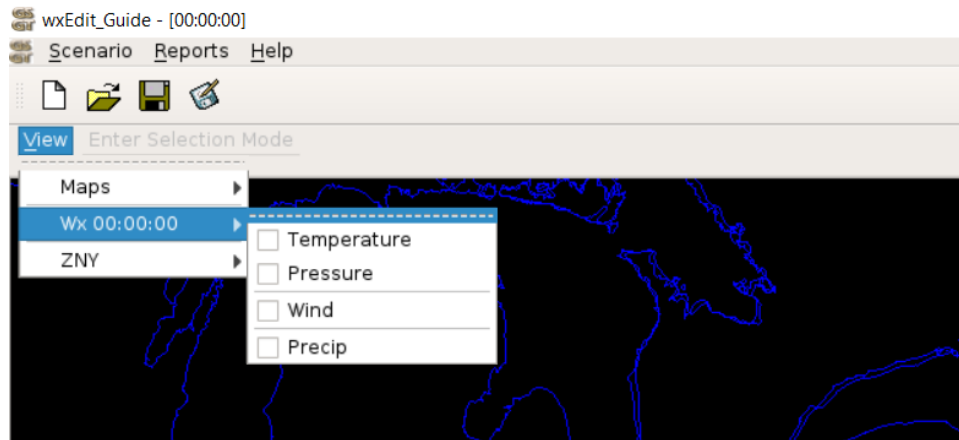


Figure 144. Weather Data Selections

ARTCC

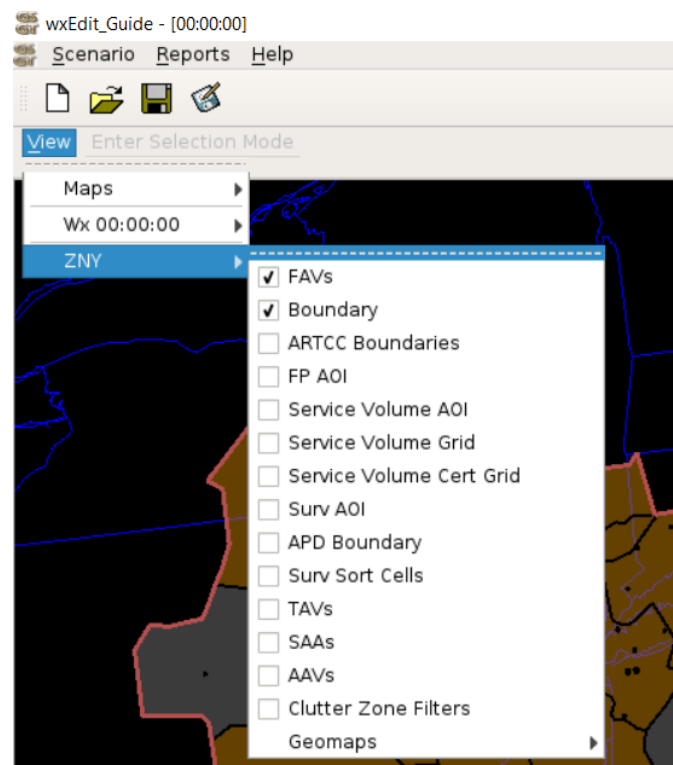


Figure 145. ARTCC Options

Enter Pointer Mode

Enter Pointer Mode – Default mode that enables selecting and editing weather values. Disables adding weather.



View Enter Pointer Mode

Figure 146. Enter Pointer Mode Menu Button

Tool used for activities such as repositioning/centering map display, rubber band zoom, weather cell info.

Moving map - Use left mouse button click and drag to move the map display

Centering map - Use left mouse button click while holding **CTRL** key. This will reposition display so that the point on the map where mouse click occurred will be positioned in the center of display.

 
Rubber band zoom - Use left mouse button click and drag while holding **CTRL** and **SHIFT** keys. This will draw a rectangular area representing the zoom detail after the mouse button is released.

Weather cell info - Use right mouse click to display weather pattern information, such as temperature, pressure and winds in and particular point on the weather grid. The information is displayed in the status bar on the bottom of the display view.

Adaptation info - If the adaptation is loaded in the view, use right mouse click within the FAV to display adaptation specific information such as FAV. This works in same fashion as in general GSGT Editor.

Enter Selection Mode

Enter Selection Mode – Enables modifying and adding weather.



View Enter Selection Mode

Figure 147. Enter Selection Mode Menu Button

Pressure Alt Mode

Pressure Altitude mode - Altitude in millibars of pressure. Each pressure level corresponds directly to one of 37 RUC layers. (1000 mb is sea level, lower values indicate higher elevations)

 


Figure 148. Pressure Altitude Options

Flight Level

Altitude in hundreds of feet.

 


Figure 149. Flight Level

Zoom

Provides a zoom function for the GSGT Adaptation Window. The zoom function is controlled three ways. The slide bar on the top right area of the window can be moved to set the zoom level. Clicking on the slide bar and then pressing the Page Down and Page Up keys will zoom the view in and out, respectively. The user may also use the scroll wheel on their mouse if applicable.



Figure 150. Zoom

Range

Provides range of the current view in nm. The measurement of the range is taken horizontally across the middle of the viewer.

 


Figure 151. Range

10.2.3. Weather Information

Information for the existing RUC weather (Temperature, Pressure and Wind) is displayed in the status bar using a right mouse click on any specific point on the map. The information for each cell includes temperature, pressure, and wind speed and direction.

Cell: 66,39 Temperature: 57.70F Pressure: 1013.25mb Wind: 0.00,0.00 (U/V) 0.00,0.00 (X/Y) S0.00 H90.00 (true north) S0.00 H90.00 (RUC grid)

Figure 152. Weather Information Bar

10.2.4. Viewer Configuration

Weather scenarios are created with predetermined size of the viewer that covers continental US. To adjust zoom (Scale), location (Reference) and size (Width and Height) of the viewer select **Scenario -> Edit Viewer Config** from the Weather Editor Main Window.

NOTE: *The change is applied to all time slices and viewer is restarted. Make sure to save scenario changes before editing viewer configuration.*

Width

Width of the working size of the viewer in nautical miles centered at Reference point.

Height

Height of the working size of the viewer in nautical miles centered at Reference point.

Scale

Scale determines the maximum zoom-out of the display viewer. Working size of the viewer (Width/Height) is not affected. Increasing the Scale, zooms-in and decreasing Scale zooms-out the maximum view.

Reference

Reference point is the center of display viewer.

10.3. Creating a New Weather Scenario

A New Weather Scenario Wizard allows selection of scenario name and weather time slices to be defined in the new scenario. Newly created weather scenario includes standard temperature and pressure, zero wind and no precipitation.

To create a new scenario, select **Scenario->New** from the Weather Editor Main Window.

The wizard allows a back and forth navigation through pages of the wizard allowing the user to return to previous screen to modify any options before pressing **Finish** button.

Back

Goes to the previous screen.

Next

Goes to the next screen.

Finish

Completes scenario wizard and creates a new scenario according to selected options.

Cancel

Quits the scenario wizard without creating a new scenario.

10.3.1. Location and Name

The selection of a name and location for new a weather scenario is identical as in the new GSGT scenario with the difference that weather scenarios are saved in a different location. The location of weather scenarios is controlled by \$WX_PATH environment variable.


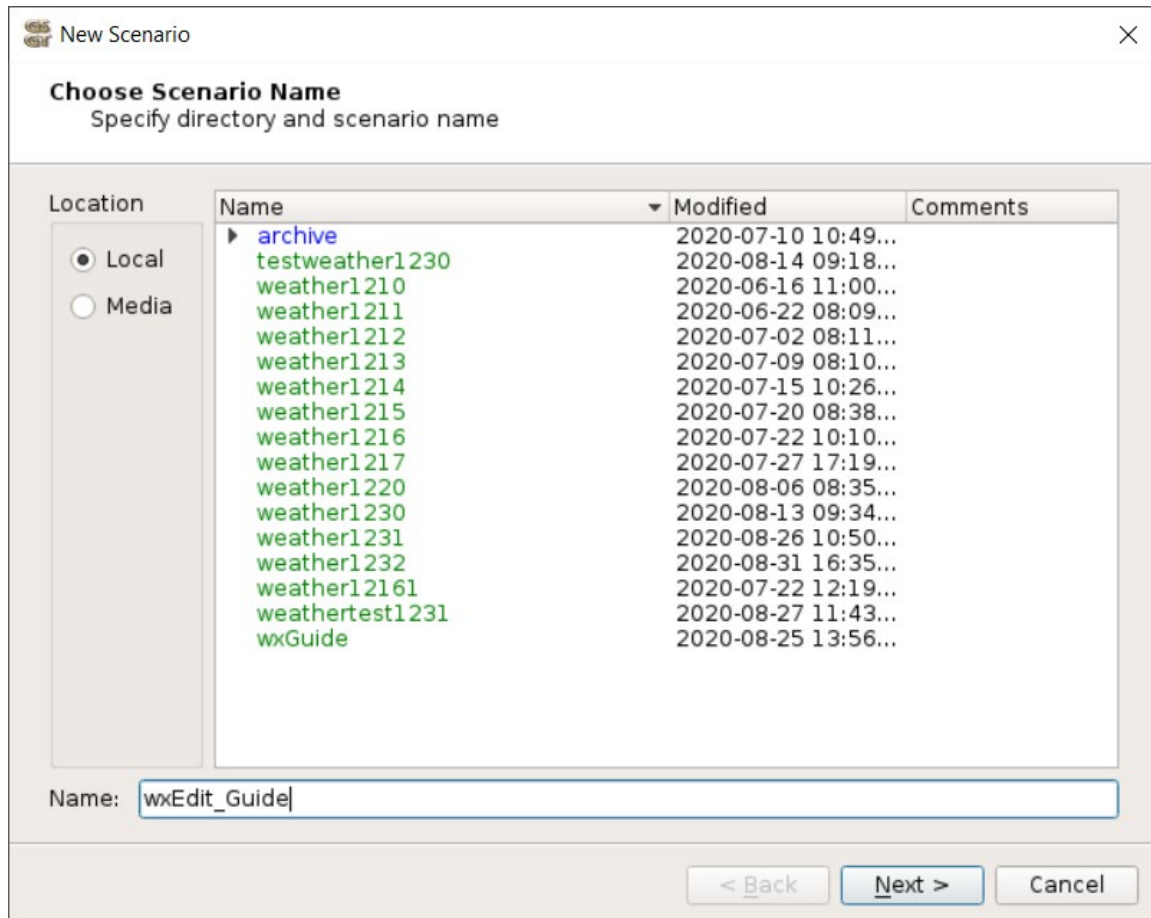


Figure 153. Weather Scenario Name and Location

10.3.2. Weather Time Slices

To add a time slice to a weather scenario, use the up/down arrows to select time slice hour, then click **Add Time**. Weather scenario may include multiple time slices. Add desired number of time slices for every hour before pressing **Finish** button. Time slices cannot be easily added after weather scenario is created.

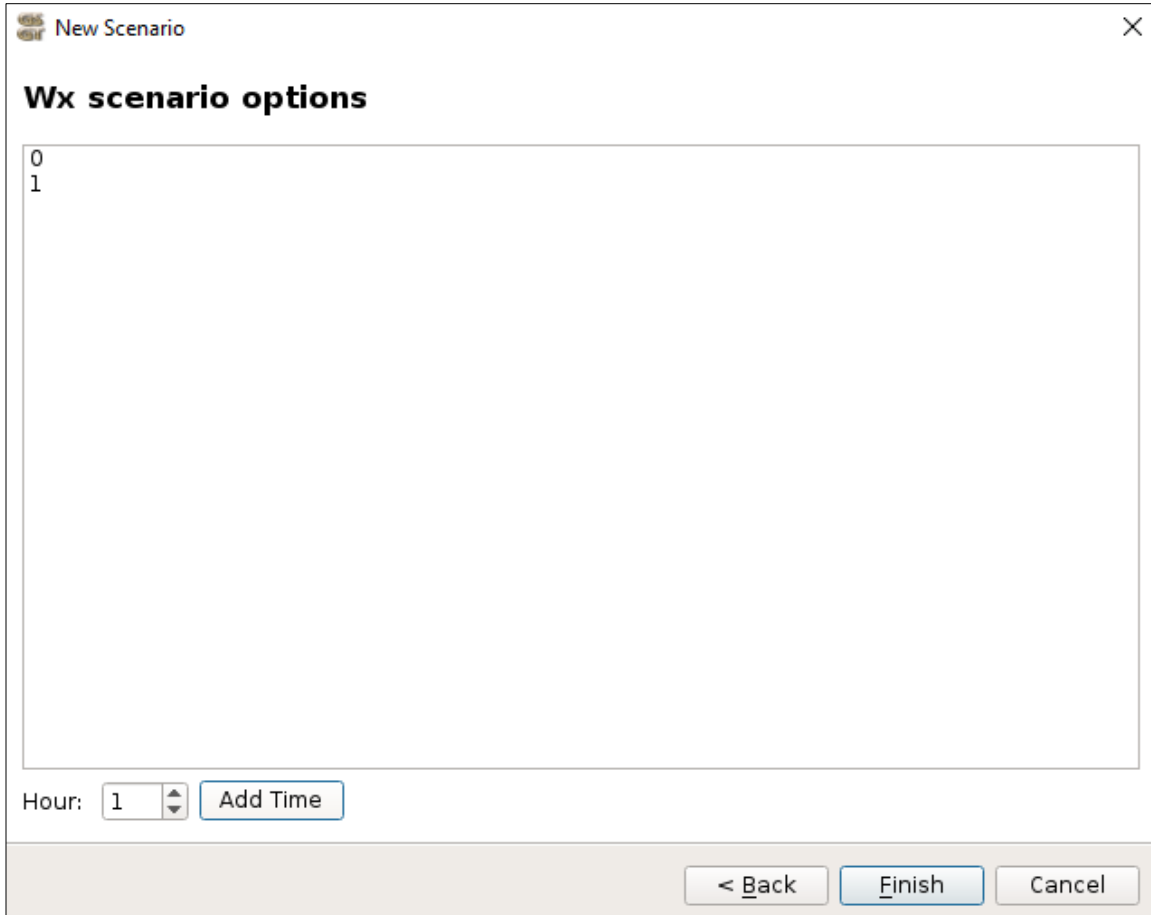

The screenshot shows a dialog box titled "New Scenario" with a close button (X) in the top right corner. Below the title bar, the text "Wx scenario options" is displayed. A large text area contains the numbers "0" and "1" stacked vertically. At the bottom left, there is a label "Hour:" followed by a spinner box containing the number "1" and an "Add Time" button. At the bottom right, there are three buttons: "< Back", "Finish", and "Cancel".

Figure 154. WeatherTime Slices

Hour

List of hourly time slices to include in the scenario.

Add Time

Adds desired time slice (as selected in Hour field) at which weather should be injected into the scenario by setting time using up/down arrows. The only allowable time slices are in 1 hour

increments. Defined time slices are displayed in the list. To delete unwanted time slice, right click on that particular time in the list and select **Delete**.

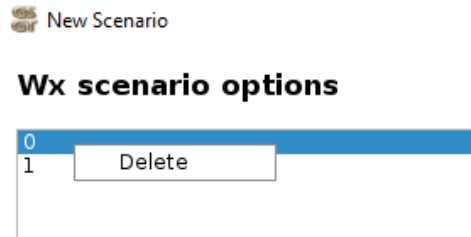


Figure 155. Deleting a Time Slice

Repeat this as many times as needed to create all time slices at which the weather should be injected, selecting a single time slice or multiple time slices for injection. Rethink how long weather scenario needs to be and include a time slice for each hour. Once the weather scenario is created, the additional time slice is difficult to add as it requires a manual edit of the scenario files.

10.4. Open an Existing Weather Scenario

Weather scenarios are opened in a similar matter as regular GSGT scenarios; however, wxEdit is used to open weather scenarios. To open an existing scenario, select **Scenario->Open** from the wxEdit Main Window.

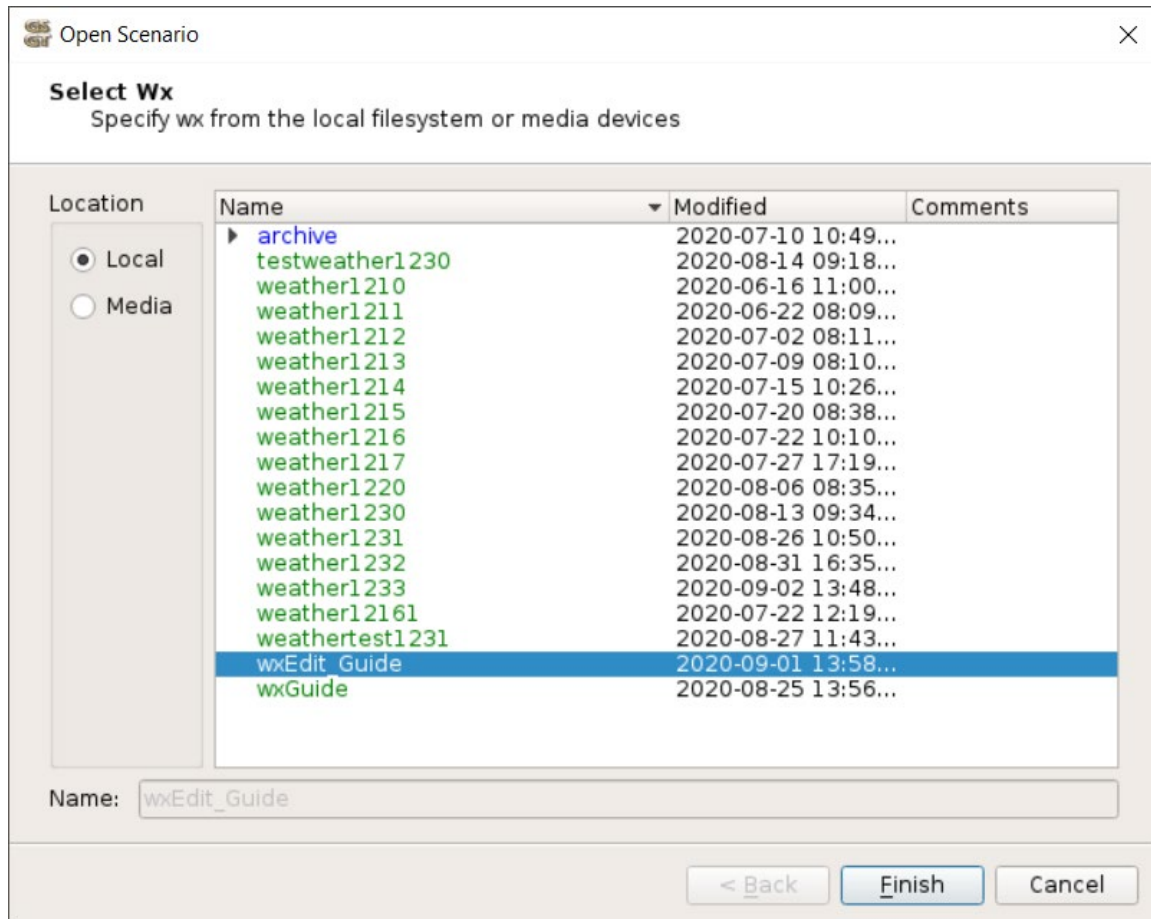


Figure 156. Select Existing Weather Scenario

10.5. Edit weather scenario

To edit weather attributes, preview the desired weather type from the **View** menu to aid selection and view changes. Also select desired Flight Level (or pressure altitude) from the menu bar, as temperature and wind may be different at different altitudes.

To make changes to any of the weather patterns, select the weather attribute and click **Enter Select Mode**. Temperature, pressure and wind are modified using RUC editor, while precipitation is modified using Precipitation Editor.


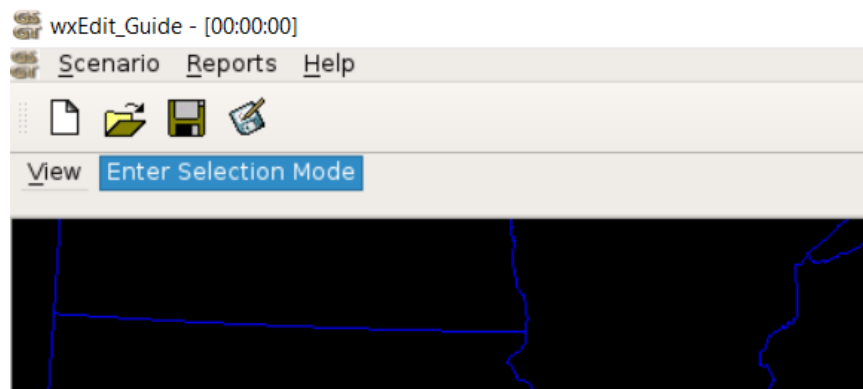


Figure 157. Enter Selection Mode

10.5.1. RUC Editor

To start editing RUC select one of the following weather attributes: Temperature, Pressure and Wind. The editor opens docked on the right side of the screen and may be repositioned on the screen if needed by grabbing its selection bar. To exit edit mode, use **Close** button on the editor dialog.

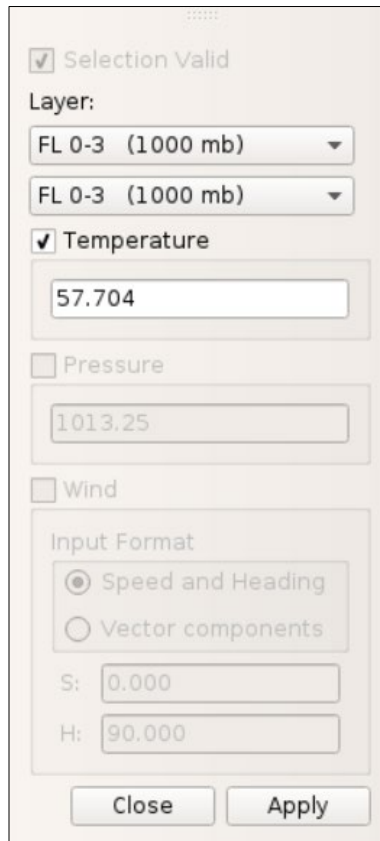

The RUC Editor dialog box is shown with the following settings:

- ☒ Selection Valid
- Layer:
 - FL 0-3 (1000 mb)
 - FL 0-3 (1000 mb)
- ☒ Temperature
 - 57.704
- ☐ Pressure
 - 1013.25
- ☐ Wind
 - Input Format:
 - ☒ Speed and Heading
 - ☐ Vector components
 - S: 0.000
 - H: 90.000

Buttons: Close, Apply

Figure 158. RUC Editor

Layer

The Strata layers that the new Temperature and Wind values will be applied to in hundreds of feet.

Temperature and Wind have separate values for each RUC layer. The list displays 37 layers with corresponding range of altitudes. A single or multiple layers can be selected at once to apply a specific value.

Weather Types

The values for each of the weather types can be applied individually or in combination by enabling or disabling individual weather types.

Add Weather

While in Enter Selection Mode, hold the **SHIFT** or **CTRL** button and use left mouse click and drag to draw a loop around the desired area to edit the weather values. Additional cells may be selected by holding **CTRL** button and selecting additional area using left mouse click and drag or

by right mouse click on desired cell. A right mouse click on a cell clears previous selection and selects a single cell. Also a left mouse click clears current selection.

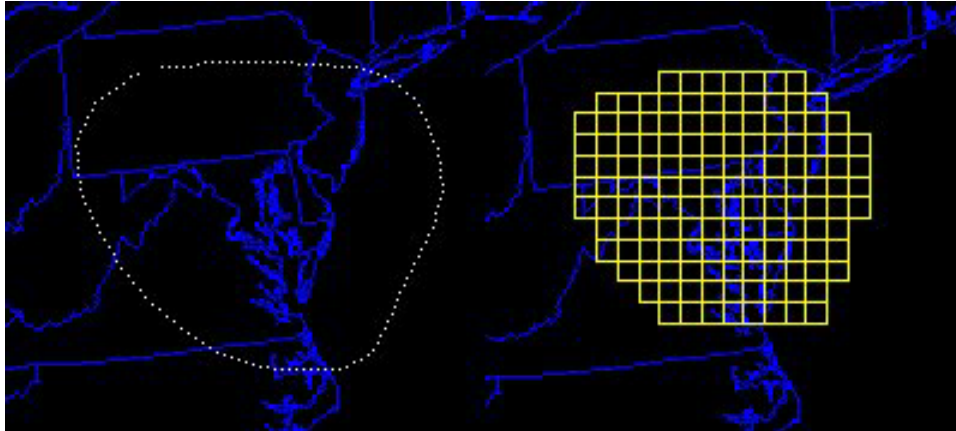


Figure 159. Selecting Weather Cells

One of the tools in RUC editor is ability to flood fill a contiguous area of the weather with the same value based on a single cell selection. To apply flood fill, select a single cell and fill in desired value for temperature or pressure, and press appropriate icon on the **Tools toolbar**, for either temperature or pressure. To aid selection and preview, enable appropriate weather type in the view.

10.5.1.1. Temperature

Temperature values can be specified in several temperature scales, such as Fahrenheit, Celsius or Kelvin. The default is Fahrenheit, to specify Celsius append C or for Kelvin append K after temperature value. Also different temperature values can be specified at a different stratum layers.

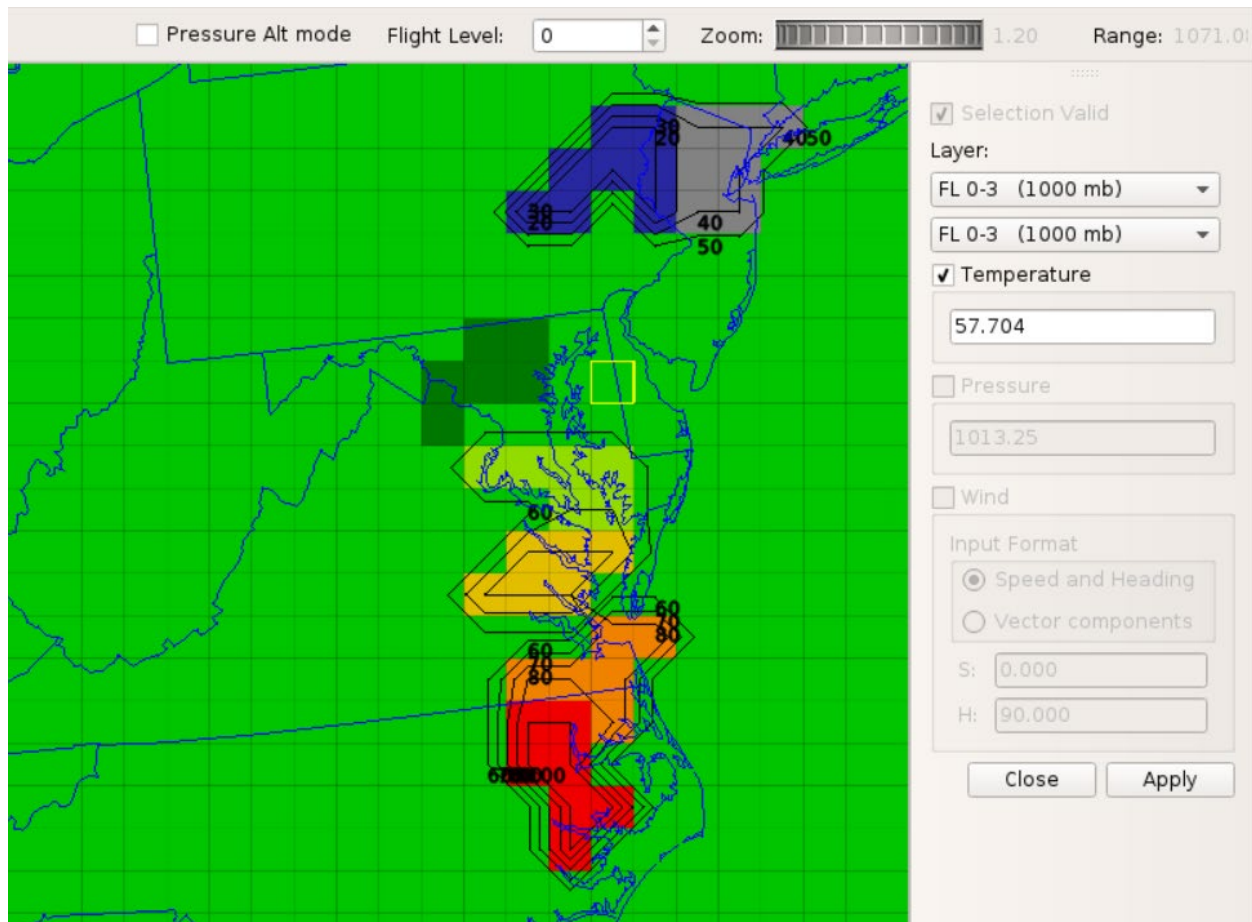


Figure 160. Defining Temperature

10.5.1.2. Pressure

Pressure values are specified in millibars (mb) units of pressure. The "standard" sea level pressure is 1013.25 mb. The range of pressure is 100 mb - 1100 mb. Only a single pressure value can be specified for all stratum levels.

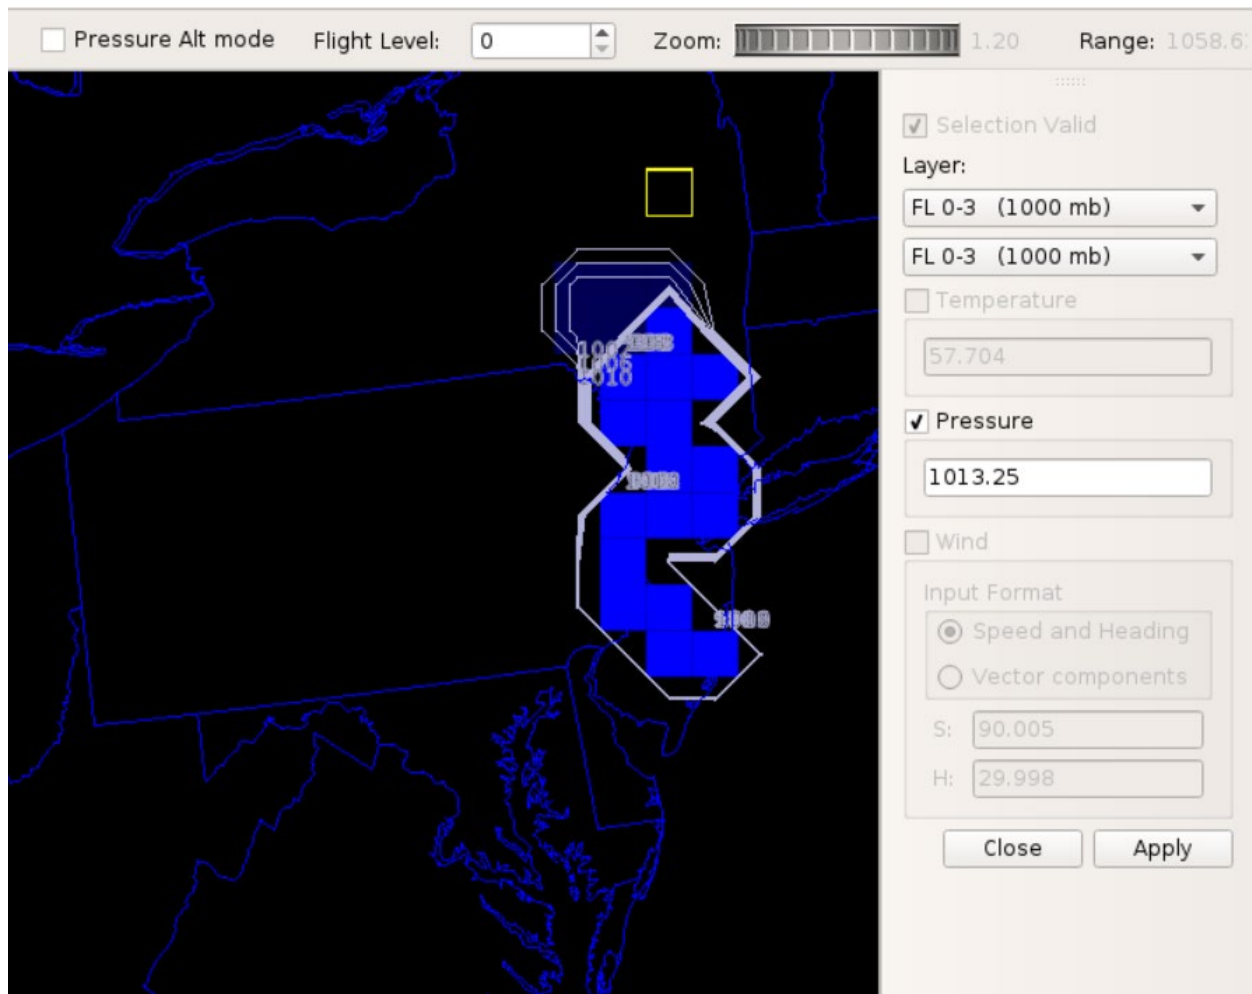


Figure 161. Defining Pressure

10.5.1.3. Wind

Wind values can be specified in several ways, such as speed and heading, U and V components, or X and Y components depending on type of the input format selected. Also different wind values can be specified at a different stratum levels.

The Speed and Heading input format defines wind speed in knots and heading in degrees. Depending on selected option **Use X/Y coords**, the wind values are aligned to true north (when turned on) or to RUC grid (when turned off).

The Vector component input format defines wind using X/Y or U/V vectors in meters/sec. Depending on selected option **Use X/Y coords**, the wind values are aligned to true north (when turned on) or to RUC

grid (when turned off). The X/Y vectors are aligned to the true north, where X is E/W component and Y is N/S component. The U/V components are aligned to RUC grid, where U corresponds x axis of the grid plane and V corresponds the y axis of the grid plane.

NOTE: When option **Use X/Y coords** is not set, the relative orientation of the axis does not correspond to true north orientation (North-South / East-West) due to the fact that RUC #236 grid is represented using lambert conformal projection with offset focal point. That is the projection focal point is not on an axis passing through the two geographic poles and grid plane axes do not follow constant latitude and longitude lines.

When option **Use X/Y coords** is set, the orientation values are converted from True North to RUC grid orientation specific to location on the grid. RUC #236 grid data is always represented using lambert conformal projection regardless of input orientation.

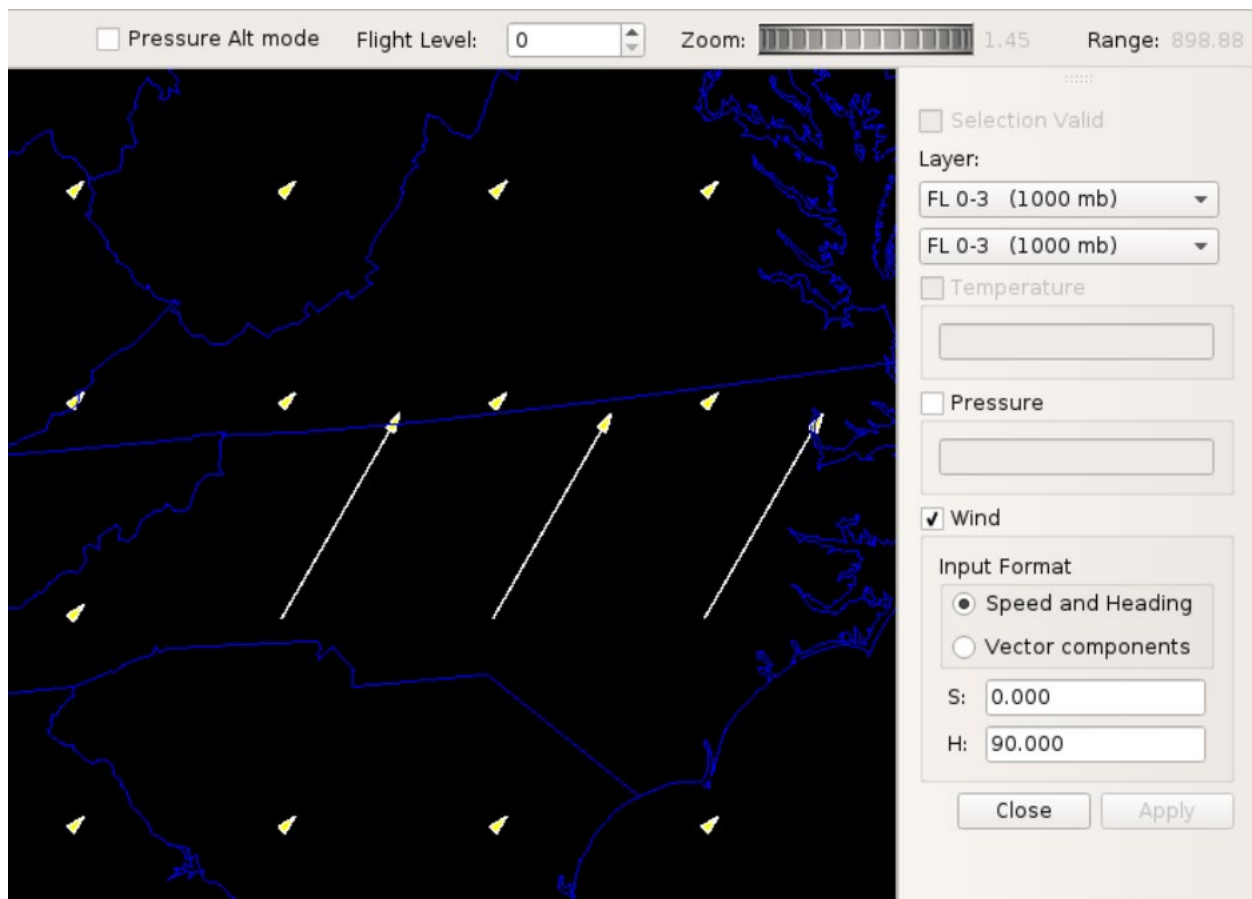



Figure 162. Defining Wind

Vector lines on the map represent wind direction and speed: longer lines representing higher wind speeds, shorter lines representing lower wind speeds.

Wind affects precipitation areas, causing them to drift and morph much as real weather is affected by winds aloft. Precipitation is only affected when winds are defined at the 1000mb layer. Adding wind values to specific layers also affect aircraft performance for targets at a particular level causing them to slow down in a head wind and speed up with a tail wind.

10.5.2. Precipitation Editor

To start editing precipitation select the Precip weather attribute. The editor opens docked on the right side of the screen and may be repositioned on the screen if needed by grabbing its selection bar. To exit edit mode, use **Close** button on the editor dialog.

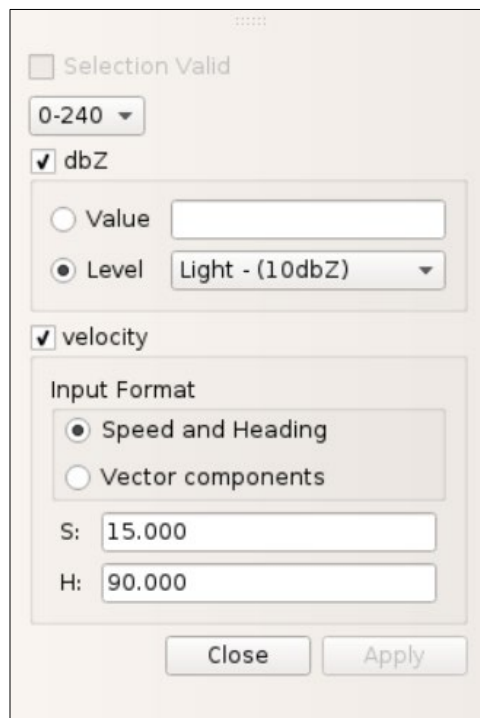

The screenshot shows the 'Precipitation Editor' dialog box. It has a title bar with a close button. Inside, there is a 'Selection Valid' checkbox. Below it is a dropdown menu showing '0-240'. There is a checked checkbox for 'dbZ'. Underneath, there are two radio buttons: 'Value' (unselected) and 'Level' (selected). The 'Level' dropdown shows 'Light - (10dbZ)'. Below that is a checked checkbox for 'velocity'. Under 'velocity', there is an 'Input Format' section with two radio buttons: 'Speed and Heading' (selected) and 'Vector components' (unselected). Below the radio buttons are two input fields: 'S:' with the value '15.000' and 'H:' with the value '90.000'. At the bottom are 'Close' and 'Apply' buttons.

Figure 163. Precipitation Editor

Strata / Interval

The Strata / Interval levels are in 5 increments (0-240, 240-600, 330-600, 600-0), that the new precipitation values can be applied to.

dbZ

The value of intensity of precipitation. A specific weather level value can be entered in the Value dialog or select Level and choose between Light, Moderate or Heavy.

velocity

The speed and direction of moving precipitation. The values can be input in several formats as well as relative to true north or precip grid. The orientation precip direction is based on the same projection as winds. The values applied here take precedence over RUC wind values for defining moving precipitation.

While in Enter Selection Mode, hold the **SHIFT** button and use left mouse click and drag to draw a loop around the desired area to edit the weather values. Additional cells may be selected by holding **CTRL** button and selecting additional area using left mouse click and drag or by right mouse click on desired cell. A right mouse click on a cell clears previous selection and selects a single cell. Also, a left mouse click clears current selection.

10.5.2.1. Precipitation

Precipitation value is specified in decibels (dbZ) units of precipitation and range from 0-99. This determines the intensity of the precipitation cell that was selected. The "default" precipitation in new scenario is 0 - no precipitation. Additionally, precipitation can be specified with a velocity using the same input format as Wind in RUC editor.

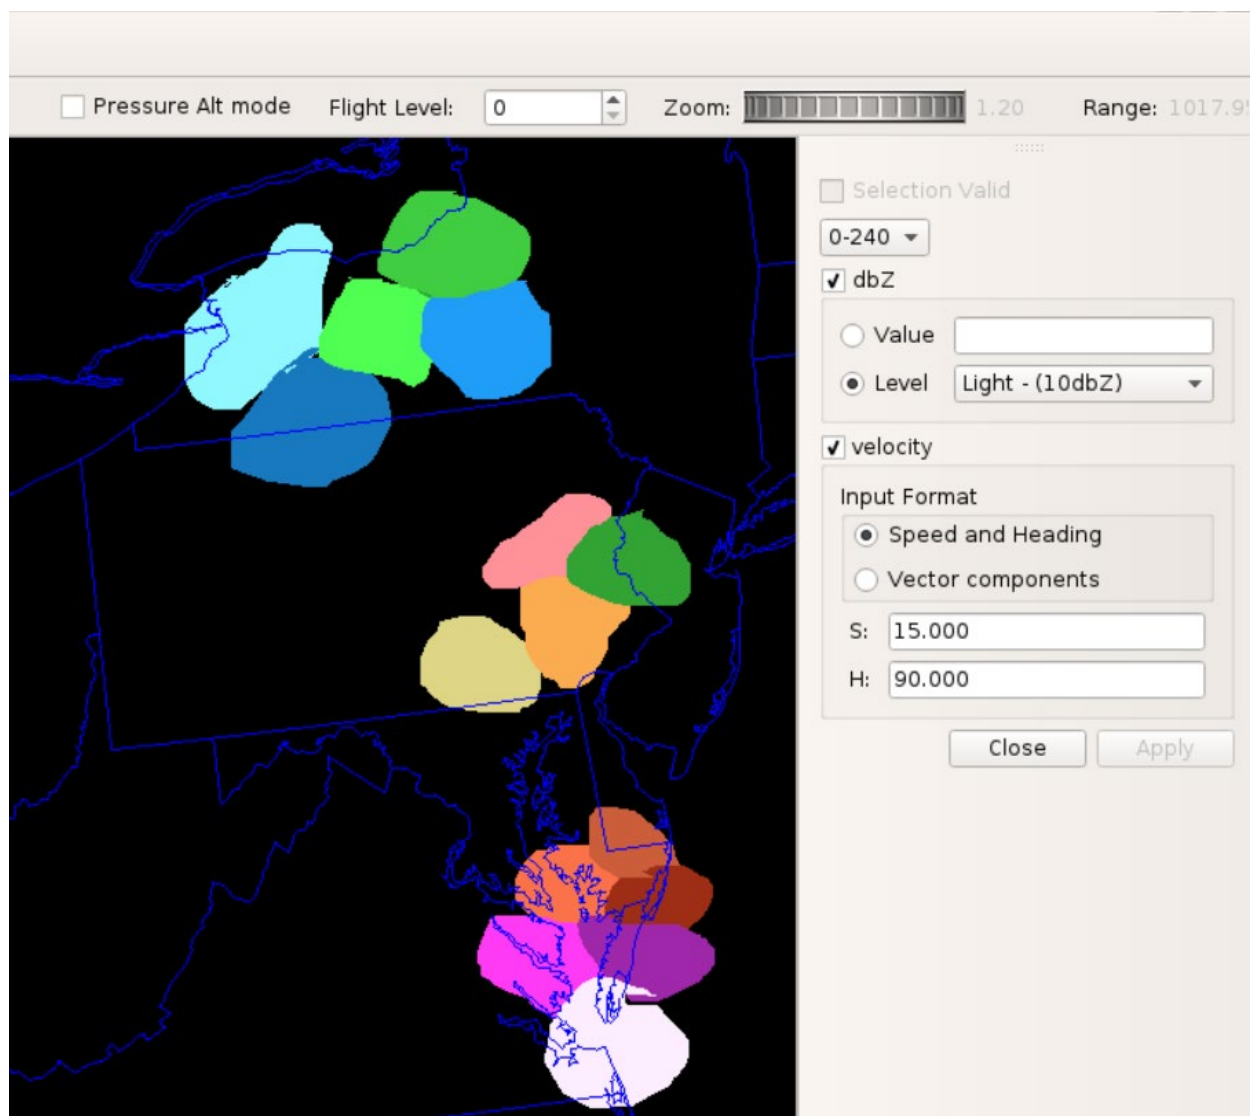


Figure 164. Defining Precipitation

Precipitation level can also be specified by one of the preset levels Low, Moderate or High. For additional reference below tables can be used to specify precipitation intensity for specific radar type.

Table 12. ASR Precipitation Levels

Level	Description
9 – 29	level 1
30 – 40	level 2
41 - 45	level 3
46 - 49	level 4
50 - 56	level 5
57 +	level 6

Table 13. ARSR Precipitation Levels

Level	Description
10 – 29	Light precipitation
30 – 49	Moderate precipitation
50 +	Heavy precipitation

11. Source Scenario Files

When a scenario is created, a directory is made with the name of the scenario in the location that is specified. All aspects of the scenario are written to a set of files within the scenario directory.

11.1. Scenario Components

The scenario.xml file defines the components of the scenario. All adaptation and customization that was selected when the scenario was created is listed in this file, including ERAM (eadp), STARS (dms), TBFM, and MEARTS. The scenario.xml file lists each of the files that contain scenario targets, system commands, preferences, record select indicators, script definitions, active runways, restrictions, pilot controls, and device controls. This file also lists the name of the weather scenario if one was selected when the scenario was created.

NOTE: The MEARTS entry in the Facility portion of scenario.xml does not contain airspace but defines MEARTS radars.

```
<scenario version="13.4.19">
  <airspace>
    <eadp dir="ERAM/ZNY_f20e3no0">
      <override product="STAR.xml.75">./STAR.xml</override>
      <tbfm dir="TBFM/ZNY_T4.8.3_2.0"/>
    </eadp>
  </airspace>
  <facility>
    <eadp dir="ERAM/ZNY_f20e3no0">
      <override product="STAR.xml.75">./STAR.xml</override>
      <dms file="STARS/phl/phl_s6r8a01_y7_08a_Y708A.bl_j3011092022.rpt" name="PPP"/>
      <mearts file="./mearts.txt" name="ppp"/>
      <tbfm dir="TBFM/ZNY_T4.8.3_2.0"/>
    </eadp>
    <eadp dir="ERAM/ZBW_f20e3bo0"/>
  </facility>
  <targets>tgts.xml</targets>
  <syscmds>syscmds.xml</syscmds>
  <prefs>prefs.xml</prefs>
  <rsi>rsi.xml</rsi>
  <scriptDefinitions>scriptDefinitions.xml</scriptDefinitions>
  <activeRunways>activeRunways.xml</activeRunways>
  <restrictions>restrictions.xml</restrictions>
  <pilotControls>pilotControls.xml</pilotControls>
```

```
<devctl>devctl.xml</devctl>
<wx dir="./wx-weather-scenario"/>
</scenario>
```

11.2. Targets

The tgts.xml file contains all of the targets that have been created or imported into the scenario. It includes all of the attributes of each target, such as name, start time, aircraft type, equipage, route, dynamics, timed events, and any target specific messages that have been scripted or frozen.

Example tgts.xml generated with a DMS Report File:

```
<tgtlist>
  <target autogen="1" bcn="3001" name="DEP01" time="00:04:00"
transponderType="modes,1090es,cpdlc">
    <scriptAssignments/>
    <dynamics achar="B737" flevel="100" speed="100tas">
      <route>KPHL..FJC</route>
      <macro>KPHL{arpt} -&gt;100tas@10000ft FJC -&gt;drop</macro>
    </dynamics>
    <replication timeDelta="12000">3</replication>
  </target>
  <target autogen="1" bcn="4001" name="ARR01" time="00:00:00"
transponderType="modes,1090es,cpdlc">
    <scriptAssignments/>
    <dynamics achar="B737" flevel="100" speed="100tas">
      <route>QWEST..KPHL</route>
      <macro>-&gt;86cas@10000ft QWEST KPHL{arpt} -&gt;drop</macro>
    </dynamics>
    <events>
      <macro appendActiveCmd="1" delta="00:00:00">-
&gt;hold{turnDir:L}{duration:500sec}{legs:100sec}</macro>
    </events>
  </target>
  <target autogen="1" bcn="1701" name="INJEC01" time="00:00:00"
transponderType="modes,1090es,cpdlc">
    <scriptAssignments/>
    <dynamics achar="B737" flevel="100" speed="100tas">
      <route>QWEST..KPHL</route>
      <macro>-&gt;86cas@10000ft QWEST KPHL{arpt} -&gt;drop</macro>
    </dynamics>
    <msgList>
```

```
<tcwMsg fac="PPP" position="*" time="00:00:00">[MULTI_FUNC]C[DELTA]ALL[ENTER]
</tcwMsg>
</msgList>
</target>
```

Example tgts.xml generated with a STARS Site File:

```
<tgtlist>
  <target autogen="0" bcn="0353" icaoAddress="0x111111" name="CA03" nasEquip="A"
time="00:22:04" transponderType="modes">
    <dynamics achar="B737" flevel="080" speed="200tas">
      <route>ACY..PHL</route>
      <macro>-&gt;200tas@8000ft +39:35:27.73,-074:17:41.88 PHL -&gt;drop</macro>
    </dynamics>
    <events>
      <macro delta="00:00:00">-&gt;hold{turnDir:R}{legs:1}</macro>
    </events>
  </target>
  <target autogen="0" bcn="0354" icaoAddress="0x111112" name="CA04" nasEquip="A"
time="00:22:04" transponderType="modes">
    <dynamics achar="B737" flevel="080" speed="200tas">
      <route>ACY..PHL</route>
      <macro>-&gt;200tas@8000ft +39:34:16.99,-074:13:36.38 +39:34:14.31,-074:13:26.67 -
&gt;drop</macro>
    </dynamics>
    <events>
      <macro delta="00:00:00">-&gt;hold{turnDir:L}{legs:1}</macro>
    </events>
  </target>
  <target autogen="0" bcn="0357" icaoAddress="0x111113" name="CA07" nasEquip="A"
time="00:23:01" transponderType="modes">
    <dynamics achar="B737" flevel="080" speed="200tas">
      <route>ACY..PHL</route>
      <macro>-&gt;200tas@8000ft +40:05:03.34,-075:02:53.22 -&gt;090 +40:05:03.44,-
075:02:53.22 -&gt;drop</macro>
    </dynamics>
    <events>
      <macro delta="00:00:00">-&gt;hold{turnDir:R}{legs:1}</macro>
      <ssrBlipScanChange delta="00:03:49" value="0"/>
      <psrBlipScanChange delta="00:03:49" value="0"/>
      <psrBlipScanChange delta="00:06:58" value="1"/>
      <ssrBlipScanChange delta="00:06:58" value="1"/>
    </events>
```

```
</target>  
</tgtlist>
```

Example tgts.xml file with script assignments, timed events, and capability overrides:

```
<tgtlist>
  <target autogen="1" bcn="0145" isDCL="1" name="ABRR200" nasEquip="L" pilotPosition="500"
rsi="500" tailNumber="ABR200" time="00:00:00" transponderType="modes,1090es,cpdlc">
    <scriptAssignments>
      <script delta="-00:15:00">ABRR-2</script>
    </scriptAssignments>
    <dynamics achar="B738" flevel="430" speed="229tas">
      <route>KSFO../.4928/11305..YXE..5500N/09900W..5800N/09000W..DUGNO..TEFFO..KAGLY..
EMBOK..6400N/05000W..6400N/04000W..6300N/03000W..6200N/02000W..BALIX</route>
    </dynamics>
    <field9180overrides>
      <DAT>1FANSE2PDC</DAT>
      <EQP>SDE1E2E3FGHIJ2J3J4J5M1RXYZW</EQP>
      <NAV>RNVA1D1E2</NAV>
      <PBN>A1B1C1D1L101S2</PBN>
    </field9180overrides>
    <events>
      <macro delta="00:00:00">-&gt;set:cpdlcResponseDelay=15</macro>
    </events>
    <replication icaoAddrDelta="0" targetIDDelta="0" timeDelta="24000">9</replication>
  </target>
  <target autogen="1" bcn="0355" isDCL="1" name="ABRR300" nasEquip="L" pilotPosition="500"
rsi="500" tailNumber="ABR300" time="00:00:00" transponderType="modes,1090es,cpdlc">
    <scriptAssignments>
      <script delta="-00:27:00">ABRR-3</script>
    </scriptAssignments>
    <dynamics achar="B738" flevel="430" speed="420tas">
      <route>KSLC../.3622/11410..LAKRR..ZZYZX..HAKMN..SHTNR..SMASH..SALYY..GLESN..ANJLL..
CAANN..BOYEL..CRCUS..KLAX</route>
    </dynamics>
    <field9180overrides>
      <DAT>1FANSE2PDC</DAT>
      <EQP>SDE1E2E3FGHIJ2J3J4J5M1RXYZW</EQP>
      <NAV>RNVA1D1E2</NAV>
      <PBN>A1B1C1D1L101S2</PBN>
    </field9180overrides>
    <events>
      <macro delta="00:00:00">-&gt;set:cpdlcResponseDelay=15</macro>
    </events>
    <replication icaoAddrDelta="0" targetIDDelta="0" timeDelta="24000">9</replication>
  </target>
```

11.3. System Commands

The syscmds.xml file contains messages not related to a particular target. Messages such as combine sector, switch activity, change parameter, map request, etc. can be scripted as general set-up messages.

```
<syscmdlist>
  <ssrvmsg device="E1" injectorName="zlc" rsi="100" sysSetup="1" time="00:00:00.00">CP DCST
  FACS/ON</ssrvmsg>
  <ssrvmsg device="E1" injectorName="zlc" rsi="100" sysSetup="1" time="00:00:04.00">CP DCST
  IC/ON</ssrvmsg>
  <ssrvmsg device="E1" injectorName="zlc" rsi="100" sysSetup="1" time="00:01:01.00">PF 02
  132.25</ssrvmsg>
  <ssrvmsg device="R02" injectorName="zlc" rsi="100" sysSetup="1" time="00:01:04.00">MR 02
  ZLCMAP</ssrvmsg>
  <ssrvmsg device="R10" injectorName="zlc" rsi="100" sysSetup="1" time="00:01:23.00">MR 10
  ZLCMAP</ssrvmsg>
  <ssrvmsg device="R01" injectorName="zlc" rsi="100" sysSetup="1" time="00:01:24.00">MR 01
  ZLCMAP</ssrvmsg>
</syscmdlist>
```

11.4. Preferences

The prefs.xml file lists global scenario preferences such as scenario run time, system setup time, and flight plan lead time.

```
<Prefs>
  <comments>Default prefs</comments>
  <syssetuptime>00:02:00</syssetuptime>
  <tgtintermsgtime>00:00:03</tgtintermsgtime>
  <defaultFpLeadTime>00:15:00</defaultFpLeadTime>
  <termFpLeadTime>00:02:00</termFpLeadTime>
  <trackStartOffset>00:00:24</trackStartOffset>
  <qnleadtime>00:00:20</qnleadtime>
  <tileadtime>00:02:00</tileadtime>
  <hoacceptdelta>00:00:30</hoacceptdelta>
  <deriveFPLsSource>BGTLYWYX</deriveFPLsSource>
  <allTargetsCpdlc>1</allTargetsCpdlc>
  <externalFacRouteDistance>50</externalFacRouteDistance>
</Prefs>
```

11.5. Record Select Indicators

The rsi.xml file lists all of the record select indicators including the number and description of each RSI.

```
<rsilist>
  <rsi description="RADAR ONLY FLIGHTS">200</rsi>
  <rsi description="ADSB ONLY FLIGHTS">300</rsi>
  <rsi description="ZKC SYSCMDS">100</rsi>
  <rsi description="Background Flights">500</rsi>
  <rsi description="WMSCR MSGS">101</rsi>
</rsilist>
```

11.6. Script Definitions

The scriptDefinitions.xml file is the place where scenario developers can create sets of messages such as DataComm logon scripts or TTP flight updates. The DataComm logon scripts can be edited using the Script Definitions tab of the Scenario Editor. However, the XML formatted TTP messages must be manually edited with a text editor such as **vi**.

```
<scripts>
  <scriptDefinition name="ACID-mismatch">
    <triggerable processor="avionics" trigger="U163">
      <afnmsg delay="00:02:30.00"
injectorName="avionics">FMHTEST01,@{paddedTailNo},@{address},%TS%/FPO@{arptSpos},1/FCOADS,0
1/FCOATC,01</afnmsg>
    </triggerable>
    <afnmsg injectorName="avionics"
time="00:00:00.00">FMH@{aid},@{paddedTailNo},@{address},%TS%/FPO@{arptSpos},1/FCOADS,01/FCO
ATC,01</afnmsg>
    </scriptDefinition>
    <scriptDefinition name="ACID-mismatch_after_session">
      <afnmsg injectorName="avionics"
time="00:00:00.00">FMH@{aid},@{paddedTailNo},@{address},%TS%/FPO@{arptSpos},1/FCOADS,01/FCO
ATC,01</afnmsg>
      <afnmsg injectorName="avionics"
time="00:15:30.00">FMHTEST02,@{paddedTailNo},@{address},%TS%/FPO@{arptSpos},1/FCOADS,01/FCO
ATC,01</afnmsg>
    </scriptDefinition>
</scripts>
```

11.7. Active Runways

The activeRunways.xml file is where scenario developers can define the default runway for each airport that is listed. This file must be manually edited with a text editor such as **vi**.

```
<activeRunways>
  <activeRunway>
    <airport name="KLAX"/>
    <departureRunway name="RW24L"/>
    <arrivalRunway name="06R"/>
  </activeRunway>
</activeRunways>
```

11.8. Restrictions

The restrictions.xml file is where restrictions can be defined for each fix and airport pair that is listed. This file must be manually edited with a text editor such as **vi**.

```
<restrictions>
  <restriction>
    <key>ESS0</key>
    <restriction>&lt;250cas@&lt;10000ft</restriction>
    <arpt>KPHL</arpt>
    <arpt>KPNE</arpt>
    <arpt>KTTN</arpt>
  </restriction>
</restrictions>
```

11.9. Pilot Controls

The pilotControls.xml file is where sector positions can be mapped to simulation pilot positions. When a handoff is accepted by a sector position controller in a dynamic simulation, the scenario target will be handed off to the simulation pilot mapped to that sector. This file must be manually edited with a text editor such as **vi**.

```
<pilotControls>
  <pilotControl controller="ZNY:PPP/1F" pilot="10" />
  <pilotControl controller="ZNY:PPP/1S" pilot="20" />
  <pilotControl controller="ZNY:PPP/1N" pilot="30" />
  <pilotControl controller="ZNY:PPP/1W" pilot="40" />
  <pilotControl controller="ZNY:PPP/1Y" pilot="50" />
</pilotControls>
```

11.10. Device Control

The devctl.xml file allows scenario developers to create events that modify the behavior of a simulated device. This file must be manually edited with a text editor such as **vi**.

When running a scenario with a simulated Terminal Flight Data Manager (TFDM) interface, devctl lines can inject events for their TFDM Consumers. An example line would be as follows with the facility being the TFDM Consumer initiating the event and the time being relative to the scenario start time:

```
<devctl devType="rtcs" facility="klax" time="00:01:30">
  <hbPeriod>7</hbPeriod>
</devctl>
```

Table 14. Parameters for Simulated TFDM Device Control

Parameter	Description
<hbPeriod/>	The time (seconds) that the consumer injects heartbeat messages.
<disableHBs/>	The number of iterations that a heartbeat will not be sent. If a value < 0 or a value of 'true' is set, heartbeats will be disabled.
<retransmitTimeout/>	The time (seconds) that the consumer will wait before re-injecting an RTCS message, that requires a response.
<maxRetries/>	The number of times that a consumer will resend an RTCS message that requires a response.
<delayReceiptAck/>	The time (seconds) that the consumer will wait before sending a receipt acknowledgement message.
<disableReceiptAck/>	Boolean, if a value of 'true' is set consumer will not send receipt acknowledgement messages.
<unsolicitedReconWaitTime/>	The time (seconds) that the consumer will wait for a solicited recon from the producer before issuing a recon request.
<reconRequest/>	Sends a recon request message to the producer.

Appendix A. Acronyms

AAR	Adapted Arrival Routes
AAV	Aircraft Alert Volumes
ACID	Aircraft Identification
ADAR	Adapted Departure/Arrival Routes
ADR	Adapted Departure Routes
ADS-B	Automatic Dependent Surveillance – Broadcast
AIG	Application Interface Gateway
AOI	Area of Interest
API	Application Program Interface
ARSR	Air Route Surveillance Radar
ARTCC	Air Route Traffic Control Center
ARTS	Automated Radar Terminal System
ASDI	Aircraft Situation Display to Industry
ASR	Airport Surveillance Radar
ASR-9	Airport Surveillance Radar Model-9
ASTERIX	All Purpose Structured Eurocontrol Radar Information Exchange
ATC	Air Traffic Control
AViD	Airspace Visualization Display
BRTQC	Beacon Real Time Quality Control
CAS	Commercially Available Software
CD	Common Digitizer
CDR	Continuous Data Recording
CMS	Common Message Set
DASI	Digital Altimeter Setting Indication System
DASR	Digital Airport Surveillance Radar
DataComm	Data Communications

DME	Distance Measuring Equipment
DP	Departure Procedure
DYSIM	Dynamic Simulation
ECG	External Communications Gateway
ECGP	External Communications Gateway Protocol
EDDS	En Route Data Distribution System
ERAM	En Route Automation Modernization
ETMS	Enhanced Traffic Management System
FAA	Federal Aviation Administration
FAV	Fixed Airspace Volumes
FDIO	Flight Data Input/Output
GIM-S	Groundbased Interval Management-Spacing
GSGT	Graphic Simulation Generation Tool
GUI	Graphical User Interface
IFDT	Interfacility Flight Data Transfer
JMS	JAVA Messaging Service
JRE	Java Runtime Environment
MIS	Metering Information Service
Mode 3/A	Identification Reporting Mode of Secondary Radar
Mode C	Altitude Reporting Mode of Secondary Radar
Mode S	Mode Select Beacon System
MLAT	Multilateration
NAS	National Air Space
NDB	Non-directional (radio) Beacon
NEMS	NAS Enterprise Messaging System
RAPPI	Random Access Plan Position Indicator
RF	Radius-to-fix
RSI	Record Select Indicator
RTCS	Release Time Coordination Service

RTQC	Real Time Quality Control
SAA	Special Activities Airspace
SAC	System Area Code
SDRR	Simulation Driver Radar Recorder
SIC	System Identity Code
SIRS	STARS Interfacility and Radar Simulator
SMIF	Simulation Interface Support
SSRV	Simulation Services
STAR	Standard Terminal Arrival Route
STARS	Standard Terminal Automation Replacement System
SWIM	System-Wide Information Management
TACAN	Tactical Air Navigation System
TARP	Time-based Archive Recording Player
TAV	Terrain Alert Volume
TBFM	Time Based Flow Management
TFDM	Terminal Flight Data Manager
TFMS	Traffic Flow Management System
TRACON	Terminal Radar Approach Control
TSIM	TBFM Simulation
TTP	TFDM Terminal Publication
VOR	Very High Frequency (VHF) Omni-Directional Range
WAM	Wide Area Multilateration
WJHTC	William J. Hughes Technical Center